

gorilla[®]

playsets



High Point

ASSEMBLY MANUAL
Copyright © 2012 Gorilla Playsets
All Rights Reserved

Gorilla Playsets • 190 Etowah Industrial Court Canton, GA 30114
(800) 882-0272 • www.gorillaplaysets.com

Latest Revision: 2/13/2012

TABLE OF CONTENTS

Warranty and Safety Guidelines.....	Pages 3-10
Leveling Play Set, General Information and Definitions.....	Pages 10-14
Site Plan, Tool List and Kit Contents.....	Pages 15-16
Hardware, Lumber and Accessory Checklist.....	Pages 17-25
Ladder.....	Steps 1-4
Rock Wall.....	Steps 5-7
Outer and Inner Fort Supports.....	Steps 8-9
Corner Posts.....	Steps 10-11
Swing Beam Side Rail and Side Rails.....	Steps 12-14
Rope ladder Support and Rock Wall Rope Support.....	Step 15
Leveling Play Set and Installing Lag Screws.....	Step 16
Rock Wall Boards, Tarp Boards and Deck Boards.....	Steps 17-19
Rear Bottom Panel Board, Center Posts and Center Tarp Board.....	Steps 20-22
Panel Slats and Center Deck Support.....	Steps 23-25
Swing Beam Assembly.....	Steps 26-32
Rock Wall Rocks, Climbing Rope and Rope Ladder.....	Steps 33-35
Mounting Slide.....	Step 36
Attaching Tarp.....	Step 37
Telescope, Safety Handles and Hanging Swings.....	Steps 38-40
Punching Ball and Tic Tac Toe.....	Steps 41-42
Flag Kit and Name Plate.....	Step 43
Ground Stakes.....	Step 44
Customer Registration Card.....	Last Page

**PLEASE READ OWNER'S MANUAL CAREFULLY
BEFORE STARTING ASSEMBLY!**

IMPORTANT – PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or “cracks” in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty. Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty. Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please follow the warranty claim procedure found at www.gorillaplaysets.com. Click on the “Customer Care” tab on the left hand side of the page, then click on “Warranty Claim” and follow the instructions.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

IF YOU HAVE MISSING OR DAMAGED PARTS OR NEED ASSISTANCE ASSEMBLING, PLEASE CALL Gorilla Playsets™ MANUFACTURING DIRECT.(800) 882-0272 FACTORY HOURS – MON.–FRI., 8AM-5PM EST. DO NOT RETURN THIS PRODUCT TO THE RETAILER OR CONTACT THE RETAILER DIRECT. THE RETAILER DOES NOT STOCK COMPONENTS. PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THEM IN A SAFE PLACE WHERE YOU CAN REFER TO THEM AS NEEDED.

CONTACT INFO:

Gorilla Playsets
190 Etowah Industrial Court
Canton, GA 30114
Tel. (800) 882-0272
Fax. (678) 880-3329
custsrv@gorillaplaysets.com

Check for revised instructions at www.gorillaplaysets.com/category-s/92.htm

Thank you for choosing Gorilla Playsets®

We've included everything you need, except tools, to build your very own professional looking play set. When complete, your new play set should far exceed the quality of play set kits from other build-your-own companies. Our engineers and design team have over 30 years of playground experience. What we've developed is a play set that doesn't compromise quality for simplicity. Yet you'll appreciate how quick and easy construction really is! Our play set kits are designed for children ages 3 to 11. Gorilla Playsets® believes every child should have a play set and with our kits they can! You can rest assured your new play set is safe, durable and designed to hold up to the elements. As parents ourselves, we know how important the security and well-being of our children is, and this shows in all of our products.

Each play set features our step-by-step 3D illustrated manual, patented powder coated swing beam bracket, heavy-duty swing belts with chains, slide(s), accessories, plus all the required hardware and pre-milled lumber.

Quality Lumber

At Gorilla Playsets, we use only the finest, hand selected lumber available. You can be assured that our lumber is strong, durable, and conforms to the national standards for use in children's play equipment. It's this quality that allows us to offer a 10 year warranty on the lumber used in our play sets.

Limited Manufacturers Warranty

Gorilla Playsets® (“Gorilla”) warrants its play sets to be free from defects in workmanship and materials, under normal use and conditions at its original installation, for 10 years for structural wood components and for one year for all other components (e.g., hardware, plastics, tarps, rope ladder, etc.) except Super Scoop Slides™ and Super Tube Spiral Slides™.

Gorilla warrants its Super Scoop Slides™ and Super Tube Spiral Slides™ to be free from defects in workmanship and materials, under normal use and conditions, for the lifetime of the product.

Cosmetic defects or natural defects of wood (e.g., warping, seasonal checking or cracking, knots, or knot holes, etc.) that do not affect the structural integrity of the product are not covered by this warranty. Defects that develop because the product is exposed to extreme climate conditions, excessive water exposure, lumber that has been damaged by wood boring bees, or defects that develop as a result of faulty or improper installation of the product, are not covered by this warranty. Fading, discoloration, or molding of any wood part or accessory, cracks in plastic components, surface rust on hardware, and chips on powder coated materials are not considered defects in material as long as they do not affect the functionality or structural integrity of the part or component.

It is the owner’s responsibility to properly maintain the play set. Instructions for proper maintenance can be found on Gorilla’s website. Imperfections or defects that develop because of a failure to properly maintain the play set are not covered by this warranty.

Gorilla will repair or, at its discretion, replace any part within the stated warranty period that is defective in workmanship or materials. This decision is subject to verification of the defect, which, at Gorilla’s discretion, may be accomplished by submitting photographs or by delivery of the defective part to Gorilla. Any warranty claim must include proof of purchase, including the date of purchase. In addition, within the first 30 days from the date of purchase, Gorilla will replace any parts discovered to be missing from or damaged in the original packaging.

This warranty is valid only if the product is used for the purpose for which it was designed and installed at a residential, single-family dwelling. This warranty is void if the product is used in a commercial or institutional setting. This warranty does not cover (a) products that have been damaged by acts of God, negligence, misuse, or accident, or that have been modified or repaired by unauthorized persons; (b) the cost of labor; or (c) the cost of shipping the product, any part, or any replacement product or part.

GORILLA DISCLAIMS ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND, EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. GORILLA WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty is valid only in the United States of America, is nontransferable and does not extend to the owners of the product subsequent to the original purchaser. Some states do not allow limitations on implied warranties or exclusion of incidental or consequential damages, so these restrictions may not be applicable to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

IMPORTANT SAFETY GUIDELINES

This product is intended for residential use only and not intended for use in any public setting. A safety surface such as mulch or recycled tire should be used under the play set to prevent injury from falls. Also a 6 foot safety zone should be used around the entire play set.

As with any home project, good judgment and respect for power tools will greatly reduce the risk of injury. Gorilla recommends you follow all tool manufacturers' safety guidelines. Always wear eye protection and safety gloves to prevent injury. In several phases of construction two people may be required for lifting and securing of lumber. While play set is being constructed, please keep children off the equipment until the project is complete. Bolts and screw heads should be checked regularly for tightness. The ground ladder, rope ladder, slide, swings and other areas where children spend a majority of their playtime should be checked more frequently.

Gorilla shall not be liable for incidental, indirect or consequential damages or injuries that result from the building and/or playing on our play sets. Adult supervision is recommended anytime a play set is being used.

WEIGHT LIMITS FOR GORILLA PLAYSETS

- FORT PLATFORM: 800 LBS. TOTAL WEIGHT
- SWING BELT: 225 LBS.
- GLIDER SWING: 70 LBS. PER CHILD. UP TO 140 LBS TOTAL.
- TRAPEZE: 125 LBS.
- FULL BUCKET SWING: 50 LBS.
- HALF BUCKET SWING: 50 LBS.
- INFANT SWING: 35 LBS.
- TIRE SWING: 125 LBS. TOTAL WEIGHT
- ROPE LADDER: 75 LBS.
- ROCK WALL: 150 LBS.
- WAVE SLIDES: 150 LBS.

Gorilla recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the play set and injury to the users.

Safety and Maintenance Tips for Your New Play Set:

NOTE: Your children's safety is our #1 concern. Observing the following statements and warnings reduces the likelihood of serious or fatal injury. Please review these safety rules regularly with your children.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor, 3 occupants who have a combined weight of 525 pounds on the swing area, for a total Unit capacity of 7 occupants who have a combined weight of 1325.
- On-site adult supervision is required.
- Teach children not to walk close to, in front of, behind, or between moving swings or other moving playground equipment.
- Teach children to sit in and never stand on swings.
- Teach children not to twist the chains and ropes and not to loop them over the swing beam, since this may reduce the strength of the chain or rope.
- Teach children not to jump from swings or other playground equipment in motion.
- Teach children not to push empty seats. The seat may hit them and cause serious injury.
- Teach children to sit in the center of the swings with their full weight on the seats.
- Teach children not to use the equipment in a manner other than intended.
- Teach children to always go down slides feet first. Never slide headfirst.
- Teach children to look before they slide to make sure no one is at the bottom.
- Teach children to never run up a slide, as this increases their chances of falling.
- The parents should have the children dress appropriately with well-fitting shoes. Loose clothing such as scarves and ponchos should not be worn. Always take off, tie up or tuck in cords and drawstrings on children's clothing. These things can get caught on playground equipment and strangle a child.
- Teach children not to climb when the equipment is wet.
- Teach children to never jump from a fort deck. They should always use the ladder, ramp or slide.
- Teach children to never crawl or walk across the top of monkey bars.
- Teach children to never crawl on top of a fort roof.
- Verify that any suspended climbing ropes, chains, or cables are secured at both ends and that they cannot be looped around an adult hand.
- Teach children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Teach children to never wrap their legs around swing chain.
- Teach children to never slide down the swing chain.

WARNING: Children must NOT use this play set until unit has been completely assembled and inspected by an adult to insure set has been properly installed and anchored.

Safety and Maintenance Tips for Your New Play Set: (continued)

Playgrounds should be inspected on a regular basis. If any of the following conditions are noted, they should be removed, corrected, or repaired immediately to prevent injuries.

- Hardware that is loose, worn or that has protrusions or projections.
- Exposed equipment footings.
- Scattered debris, litter, rocks, or tree roots.
- Splinters, large cracks, and decayed wood components.
- Deterioration and corrosion on structural components, which connect to the ground.
- Missing or damaged equipment components, such as handholds, guardrails, swing seats.
- Check all nuts and bolts frequently during the usage season and tighten as required. (But not so tight that you crack the wood) We recommend you check the swing beam and hardware often due to wood expansion and contraction. It is particularly important that this procedure be followed at the beginning of each season.
- Remove plastic swing seats and take indoors or do not use when the temperature drops below 32°F.
- Oil all metallic moving parts monthly during the usage period.
- Check all coverings for bolts and sharp edges twice monthly during usage season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- Check swing seats, ropes, cables and chains monthly during usage season for evidence of deterioration. Replacement should be made of any swing seat that has developed cracks in the plastic seats. Ropes, cables and chains should be removed and replaced if excessive wear is found. Contact Gorilla for warranted replacement parts.
- For rusted areas on metallic members such as monkey bars, hand supports brackets, etc.; sand and repaint, using a non lead-based paint meeting the requirements of Title 16 CRF Part 1303.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe playing environment. If you are treating your play set with stain regularly, it will help prevent severe checking/splitting and other weather damage.
- Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any “rough” spots on your set. Please note this is a requirement of your warranty.
- Creating and maintaining the play set on a level location is very important. As your children play, your play set will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the play set is level and true once each year or at the beginning of each play season.
- Rake the playground surface periodically to prevent compaction and maintain appropriate depths.
- Disposal Instructions: When the play set is no longer desired, it should be disassembled and disposed of in such away that no unreasonable hazards will exist at the time the unit is discarded.

Play Set Surfacing Recommendations:

Below are some of the recommendations that the U.S. Consumer Product Safety Commission (CPSC) offers from its Handbook for Public Playground Safety. The guide can be downloaded in full at www.cpsc.gov/cpscpub/pubs/325.pdf

1. Protective Surfacing - Since almost 60% of all injuries are caused by falls to the ground, protective surfacing under and around all playground equipment is the most critical safety factor on playgrounds.

Certain manufactured synthetic surfaces also are acceptable; however, test data on shock absorbing performance should be requested from the manufacturer.

Asphalt and concrete are unacceptable. They do not have any shock absorbing properties. Similarly, grass and turf should not be used. Their ability to absorb shock during a fall can be reduced considerably through wear and environmental conditions.

Certain loose-fill surfacing materials are acceptable. Surfacing materials are acceptable, such as the types and depths shown in the table.

Fall Heights and Materials

Type Of Material	6 in. depth	9 in. depth	12 in. depth
Double-Shredded bark mulch	6' Fall Height	10' Fall Height	11' Fall Height
Wood Chips	6' Fall Height	7' Fall Height	12' Fall Height
Fine Sand	5' Fall Height	5' Fall Height	9' Fall Height
Shredded Tires*	10-12' Fall Height	N/A	N/A
Fine Gravel	6' Fall Height	7' Fall Height	10' Fall Height

*This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. The tests reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

It should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.

2. Fall Zones - A fall zone, covered with a protective surfacing material, is essential under and around equipment where a child might fall. This area should be free of other equipment and obstacles onto which a child might fall. Stationary climbing equipment and slides should have a fall zone extending a Minimum of 6' in all directions from the perimeter of the equipment.



Swings should have a fall zone extending a minimum of 6' from the outer edge of the support structure on each side. The fall zone in front and back of the swing should extend out a minimum distance of twice the height of the swing as measured from the ground to the top of the swing support structure.

LEVELING YOUR FORT DURING ASSEMBLY

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.

Important: if you require a channel depth of more than 6", then we recommend you have your play set area professionally graded before completing assembly.

Example Play area:

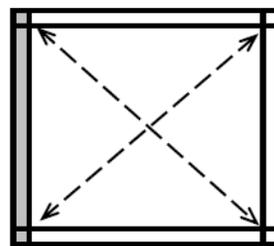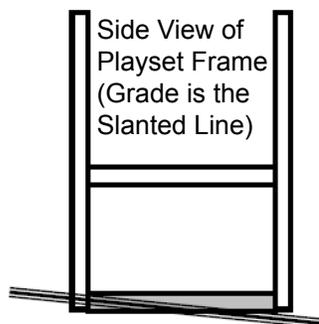

■ = Area to be scored and channeled for levelness

General Info to Review Before Installation

- Depending on your experience, assembly of Gorilla Playsets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass. This will save time and familiarize you with all the different pieces in the hardware bag.
- Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.
- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Check all bolt connections and swing hangers every two weeks.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

This page is a list of definitions and explanations used throughout our instructions to aid you in the assembly of your play set.

Offset Holes- Throughout the installation procedures we will refer to parts with offset holes. This refers to the orientation of the holes on the board. An offset hole is one that is closer to one side than it is the other or in other words, it is not centered on the board. In the procedures you will be instructed to attach the boards with the holes offset up or with the holes offset down. This refers to which side of the board the hole/holes should be closer to. Offset holes up= hole/holes will be closer to the top of the board. Offset holes down= hole/holes will be closer to the bottom of the board. Note: some parts do not have offset holes, but instead the holes are on center. Therefore there will not be any reference to how to offset these parts.


EXAMPLE OF OFFSET HOLES UP



EXAMPLE OF OFFSET HOLES DOWN



Counter-Bored holes- Many of the parts that will be used have counter-bored holes. A counter-bored hole is one that surrounds one side of a thru hole, but does not extend through the wood itself. When using a counter-bored hole the bolt will be inserted through the thru hole and either the head of the bolt and washer or nut and washer will occupy the counter bored hole.

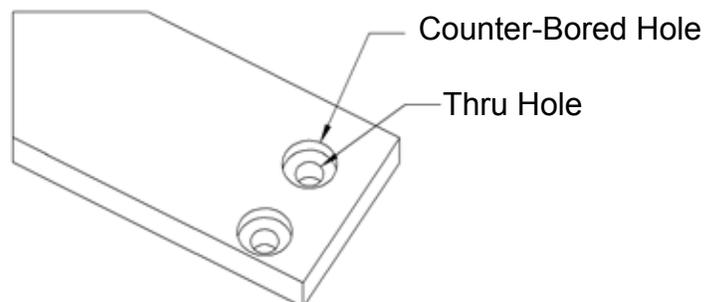


Lag Screws- Lag screws are used in the construction of our play sets to enhance the structural integrity of the unit. There will not be predrilled holes in the post for lag screw installation. Lag screws are self-tapping, though if you are using a manual socket wrench it may be necessary to tap the head of the lag screw with a hammer. You should also be sure to tighten the lags completely. Power tools such as an impact wrench or power drill should have enough torque to drive the lag screws without using a hammer, but make sure not to over tighten as this can cause the threads to “strip out” in the post.


Common Installation Practice Installing T-nuts

When installing T-nuts into the wood, use a smooth faced hammer to set the face of the T-nut flush into the wood


Corner Post

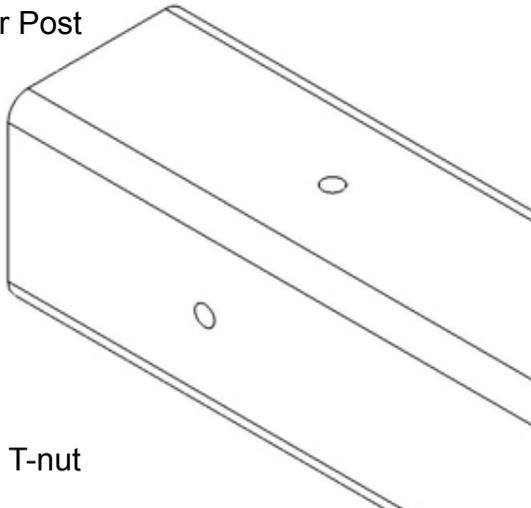


T-nut

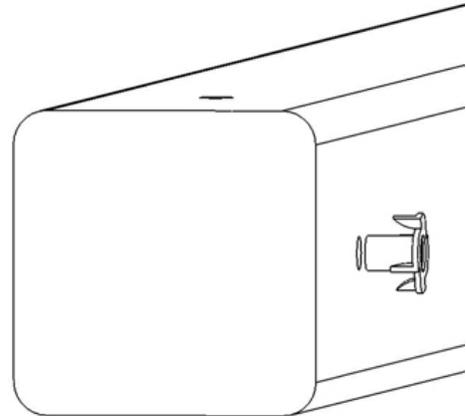

Insert the barrel of the T-nut into the predrilled hole. Using a smooth faced hammer, drive the T-nut until the face of the T-nut is flush to the wood.

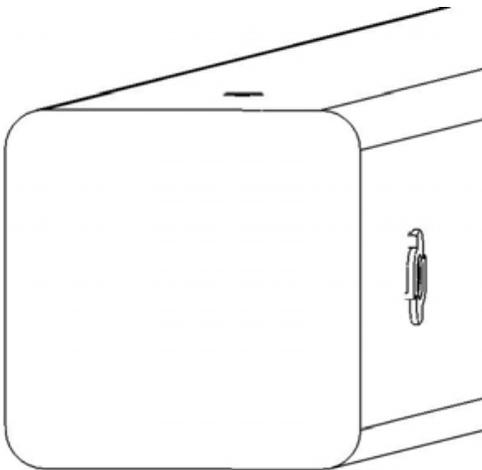


This picture shows the T-nut insert and installed flush to the wood.

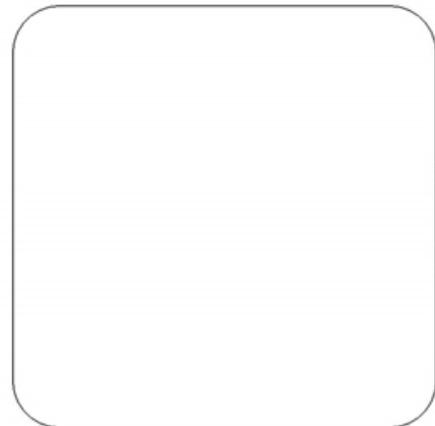

This picture shows an end view of the T-nut insert and installed flush to the wood.

WARNING: DO NOT EMBED THE TOP OF THE T-NUT INTO THE FACE OF THE WOOD

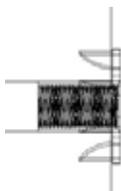


Cross Section end views, you are looking at an Xray view of the post and T-nut. The barrel of the T-nut is in the corner post the line is the face of the wood.

HOW A T-NUT WORKS

THE FIRST STEP IN OUR ASSEMBLY INSTRUCTIONS IS TO INSERT T-NUTS INTO THE CORNER POSTS. A T-NUT IS A FASTENER WHICH IS THREADED ON THE INSIDE AND IT FUNCTIONS JUST LIKE A STANDARD HEX NUT. YOU INSERT THE T-NUTS INTO THE PREDRILLED HOLES IN THE CORNER POSTS.


THE T-NUT HAS A BARREL SHAPED END WHICH GOES INTO THE HOLE IN THE CORNER POST. THE T-NUT ALSO HAS AN FLANGE SHAPED END WITH TEETH. THE TEETH PENETRATE INTO THE CORNER POST WOOD TO PREVENT THE T-NUT FROM SPINNING WHEN YOU TIGHTEN THE HEX HEAD BOLT.

SHOWN BELOW YOU WILL SEE THE T-NUT IS HAMMERED INTO THE CORNER POST ON THE BACK SIDE. THE BOARD IS BEING ATTACHED ON THE FRONT SIDE OF THE CORNER POST.

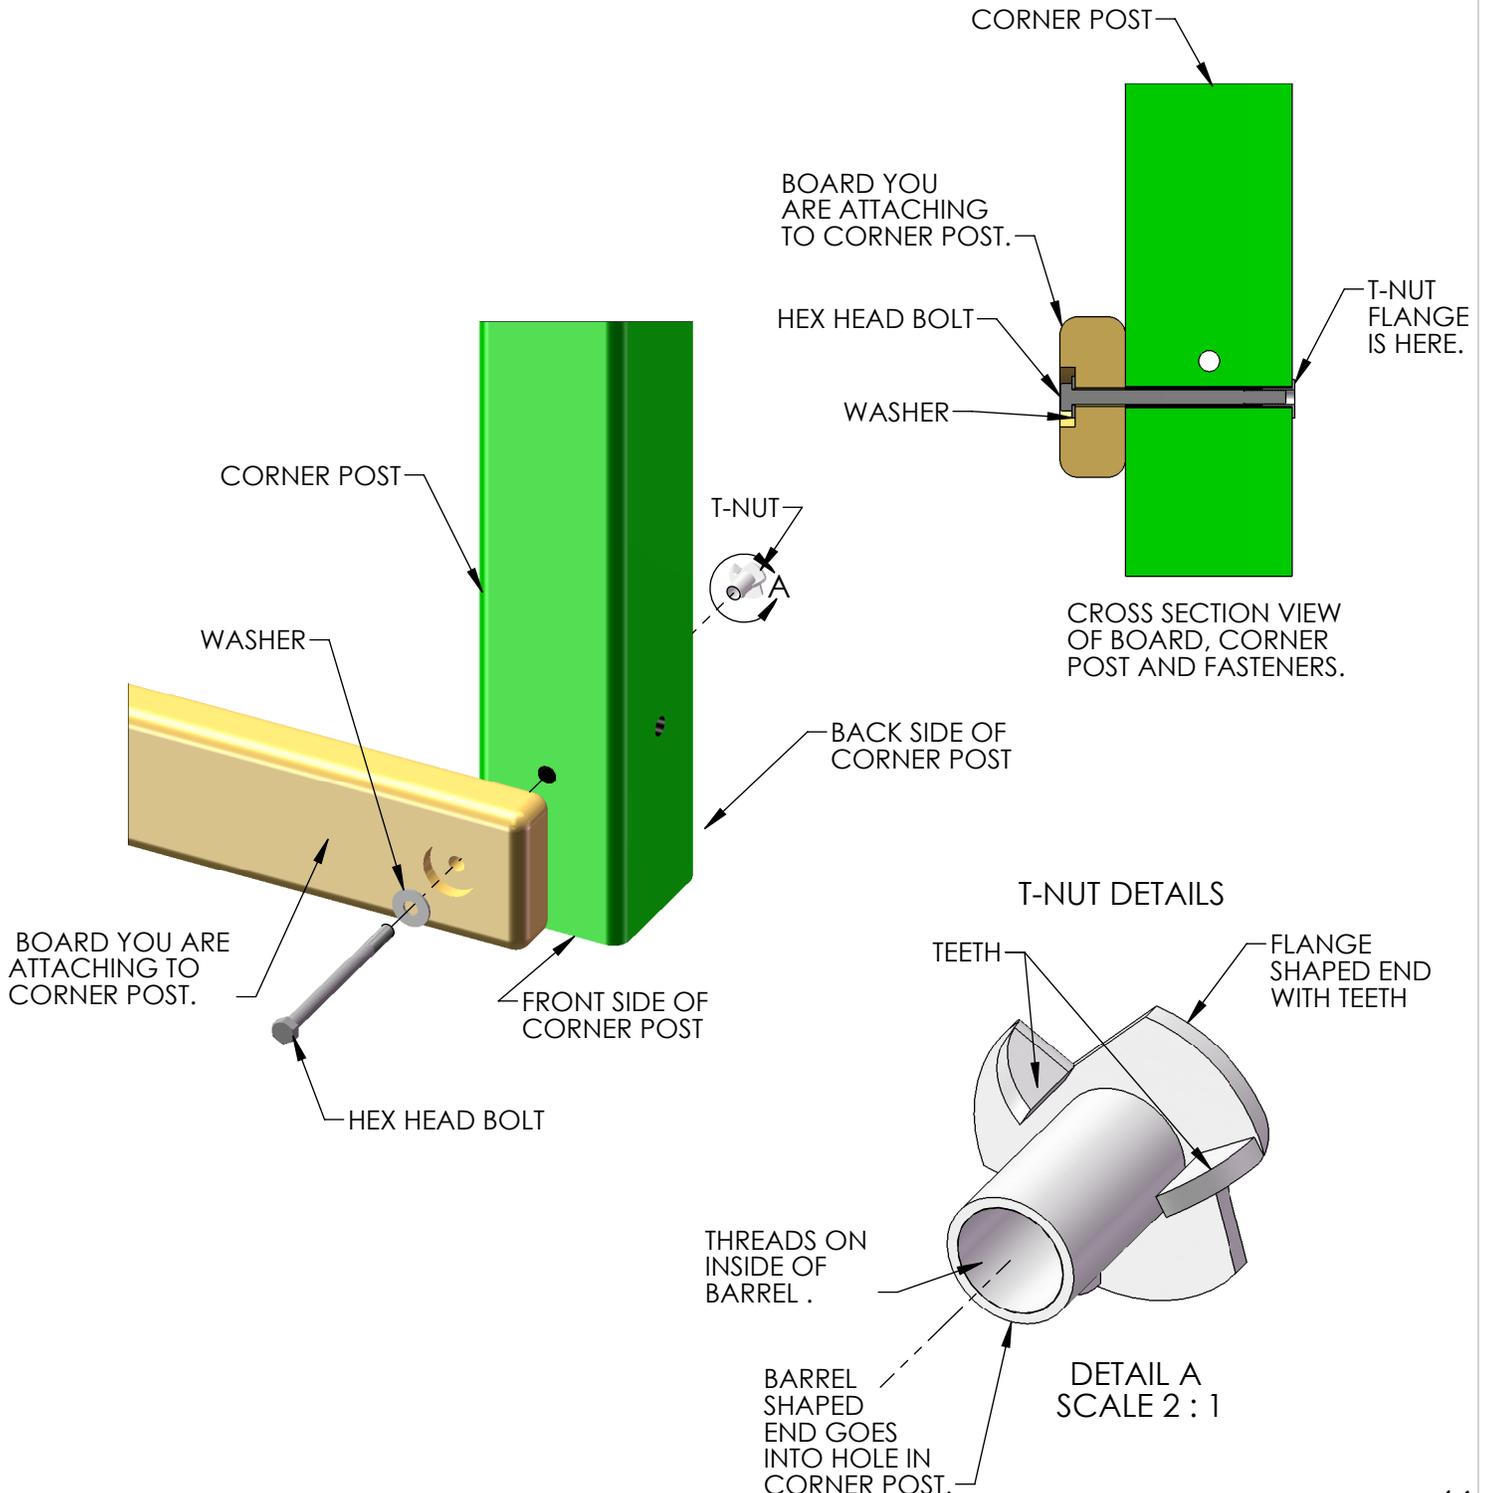

Please familiarize yourself with the manual, parts/components and general construction process of your new playset before getting started.

SITE PLAN:

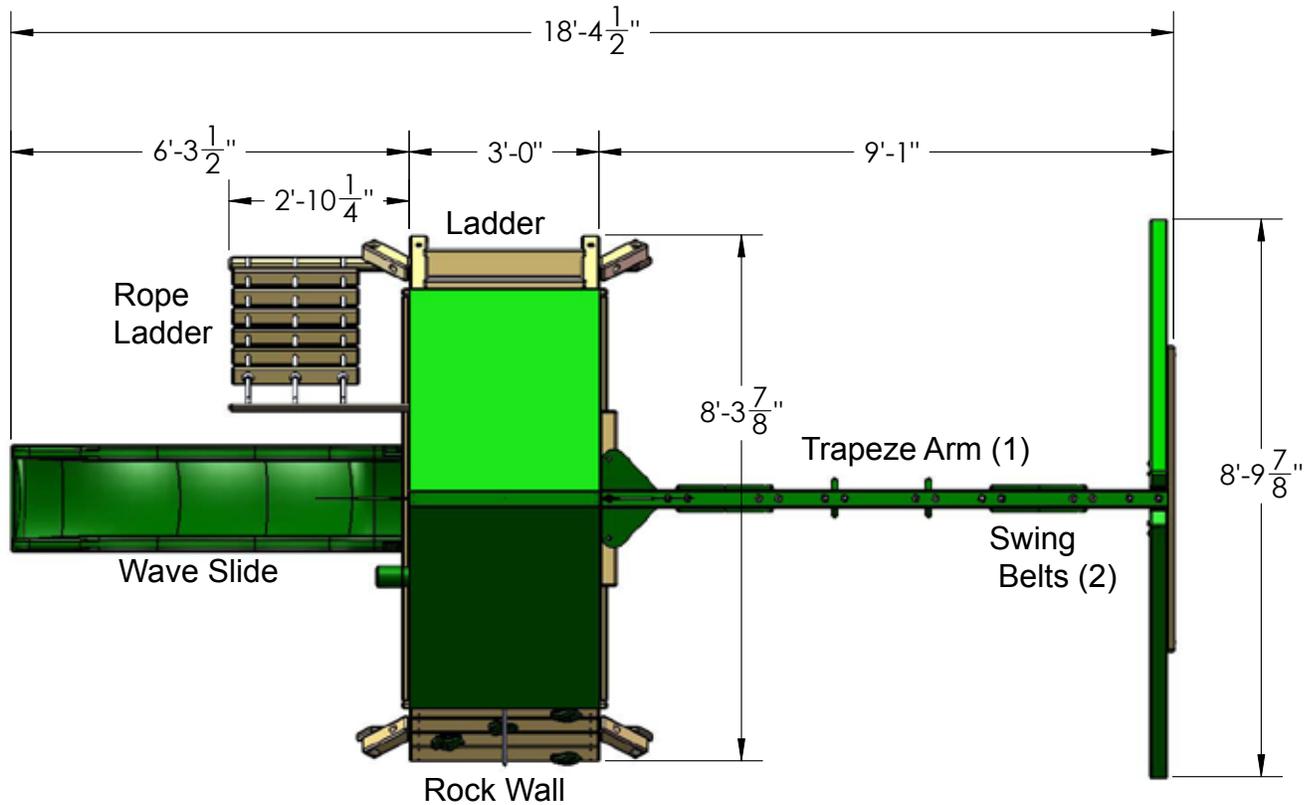

Playset height: 9 feet

Swing Beam Height: 7 feet - 2 inches

Approximate assembly time: 6 to 10 hours

(6) foot unobstructed safety perimeter around playset recommended

REQUIRED TOOL LIST:

- ___ Standard or Cordless Drill w/ Phillips Bit (#2 square bit provided)
- ___ 1/16", 1/8" and 3/8" Drill Bits
- ___ 1/2" Wrench and Socket
- ___ 1/2" Deep Well Socket
- ___ 9/16" Deep Well Socket
- ___ 9/16" Wrench and Socket
- ___ Level
- ___ Tape Measure
- ___ Extension Cord (if using standard drill)
- ___ Hammer
- ___ Pencil
- ___ Locking Pliers (Vise Grips)
- ___ Shovel
- ___ Tape or Pen

KIT CONTENTS

Swings, Slides, Accessories:

- ___ (Qty) Description
- ___ (2) Swingbelt w/ Chains
- ___ (1) 8ft. Wave Slide
- ___ (1) Assembly Manual
- ___ (10) Rock Wall Grips (assorted colors and sizes)
- ___ (1) Trapeze Swing w/Chains
- ___ (1) Telescope
- ___ (1) Punching Ball
- ___ (4) Plastic Safety Handles
- ___ (1) Tic Tac Toe Panel
- ___ (1) 36" x 117" Tarp (Canopy)
- ___ (2) Flags
- ___ (2) Ground Stakes

Fort and Swing Beam Hardware:

see following pages

Wood Components:


see following pages

READ! VERY IMPORTANT!

If you are missing parts or have questions regarding the installation of our quality product PLEASE call us directly at the factory **(1-800-882-0272)**. Our trained staff will be happy to assist you.

Customer service hours:
Monday thru Friday 8AM – 5PM EST
E-mail: custsrv@gorillaplaysets.com



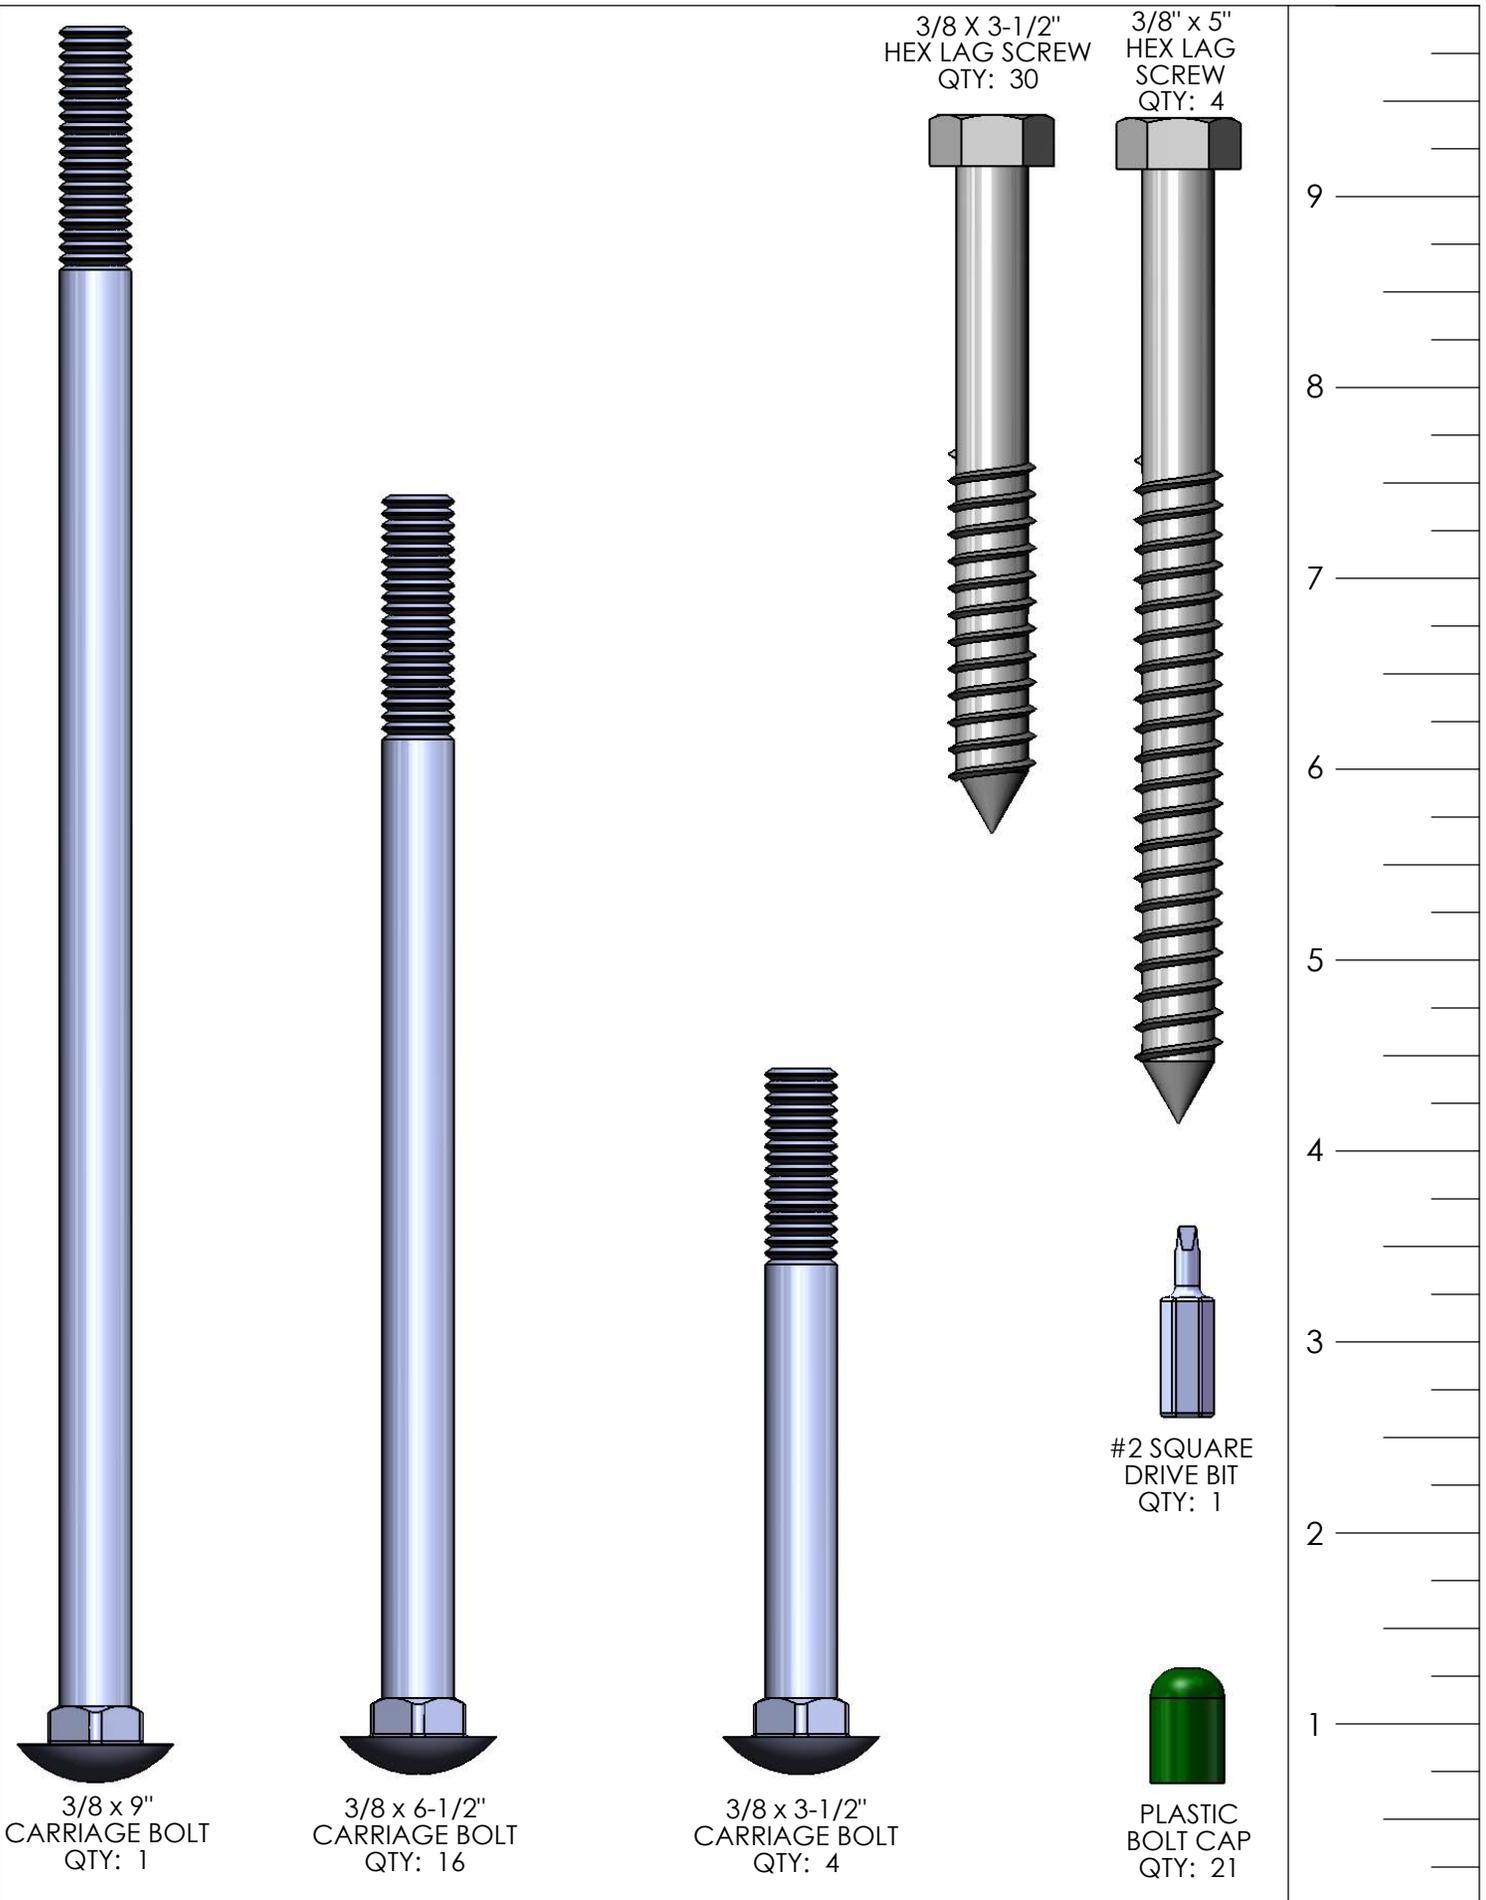

USE THE RULER TO THE RIGHT TO MEASURE YOUR BOLTS AND SCREWS. PICTURE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH BOLT AND SCREW SIZES.



#14 X 1-1/4"
PAN HEAD SCREW
QTY: 6

#8 X 1-1/4"
WOOD SCREW
QTY: 4




#8 X 2"
WOOD SCREW
QTY: 92




#8 X 2-1/2"
WOOD SCREW
QTY: 32




#10 X 3-1/2"
WOOD SCREW
QTY: 16

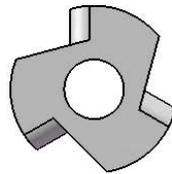


5/16" TEE NUT
QTY: 32

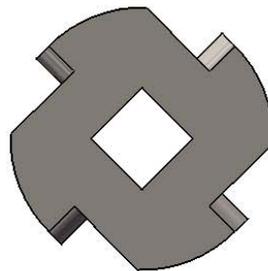


TORQUE WASHER
QTY: 19

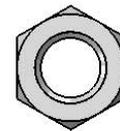


3/8" LOCK NUT
QTY: 21

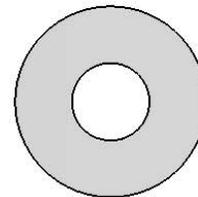


3/8" WASHER
QTY: 57

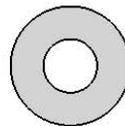

1/4"
WASHER
QTY: 6

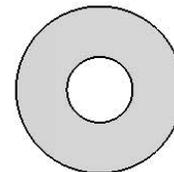


5/16" WASHER
QTY: 38

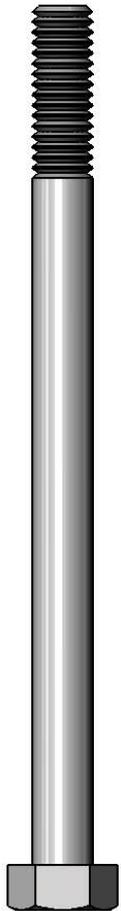

5/16 X 4-1/2"
HEX BOLT
QTY: 24



5/16 X 3-1/2"
HEX BOLT
QTY: 4

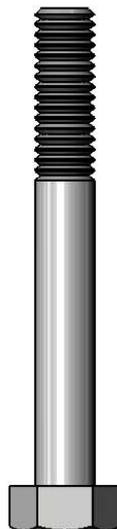

5/16 X 2-1/2"
HEX BOLT
QTY: 2

9

8

7

6

5








4








3








2








1








USE THE RULER TO THE RIGHT TO MEASURE YOUR BOLTS AND SCREWS. PICTURE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH BOLT AND SCREW SIZES.

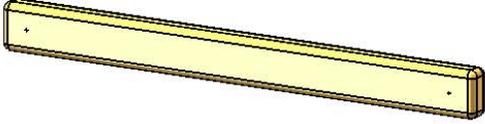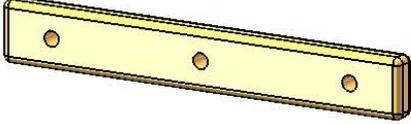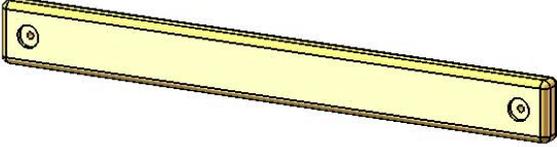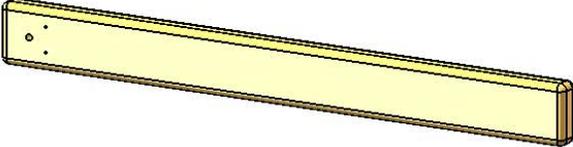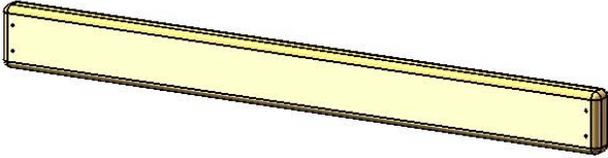
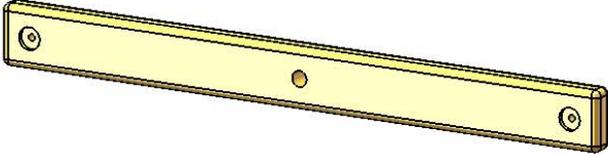
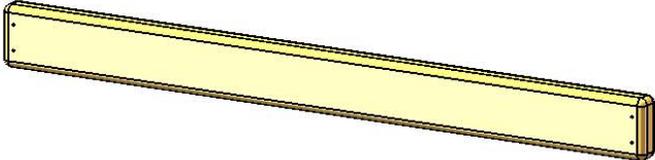
PICTURE	DESCRIPTION	QTY.
	<p>2 X 3 X 28-1/2" PANEL SLAT</p> <p>2-3-2850-PS</p>	<p>4</p>
	<p>2 X 4 X 24" ROPE LADDER RUNG</p> <p>2-3-2400-RLST</p>	<p>6</p>
	<p>2 X 4 X 33" REAR BOTTOM PANEL BOARD</p> <p>2-4-3300-RBPB</p>	<p>1</p>
	<p>2 X 4 X 34" FRONT CENTER POST</p> <p>2-4-3400-FCP</p>	<p>1</p>
	<p>2 X 4 X 36" CENTER TARP BOARD</p> <p>2-4-3600-CTB</p>	<p>1</p>
	<p>2 X 4 X 36" ROCK WALL ROPE SUPPORT</p> <p>2-4-3600-RWRS</p>	<p>1</p>
	<p>2 X 4 X 38-3/4" TARP BOARD</p> <p>2-4-3875-TB</p>	<p>2</p>

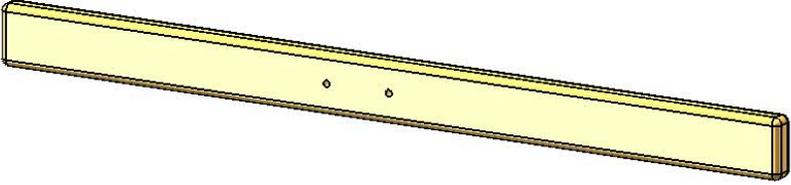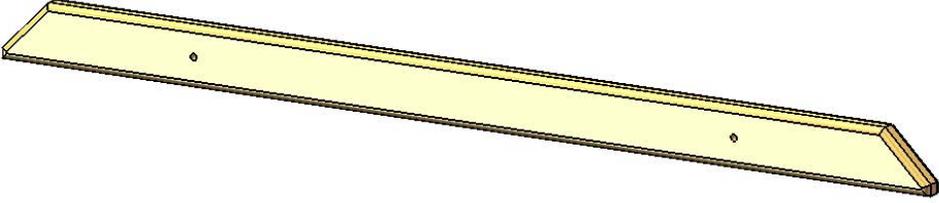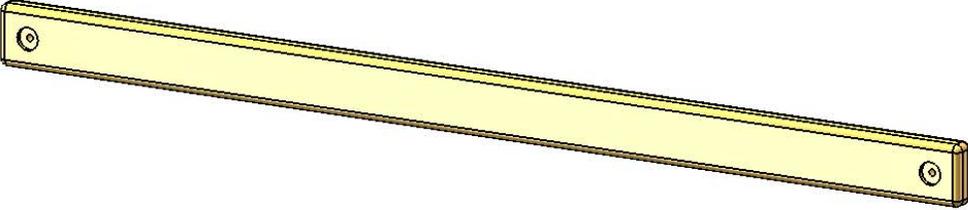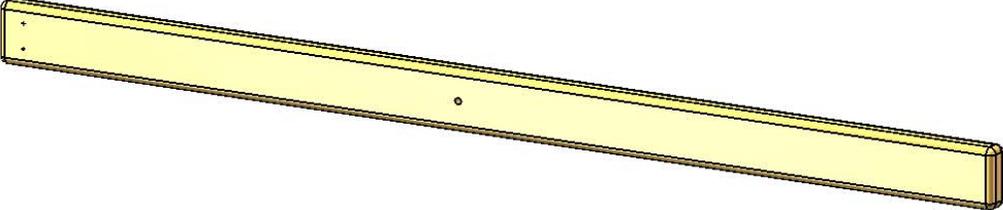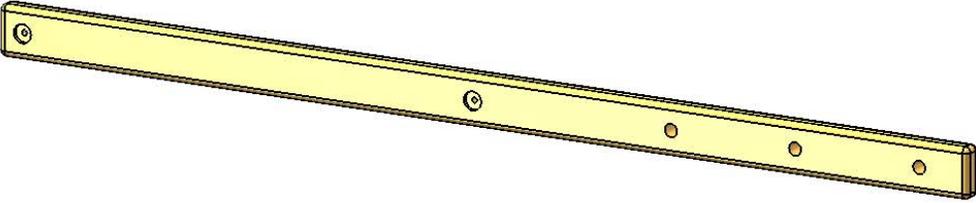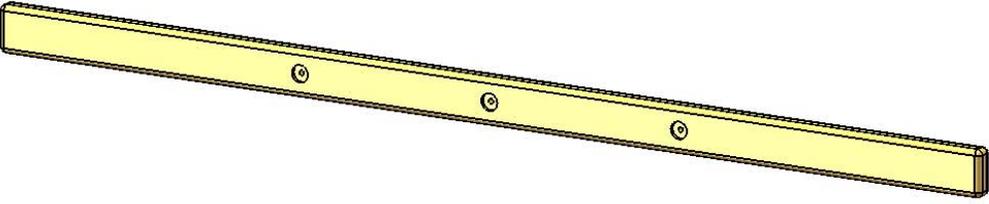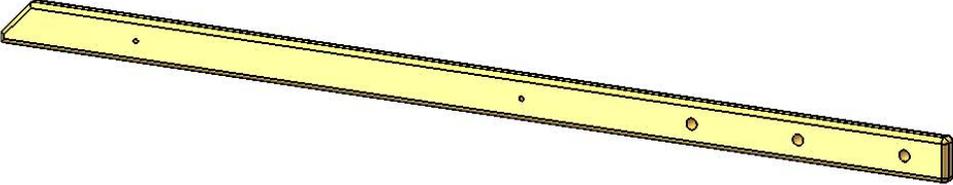PICTURE	DESCRIPTION	QTY.
	<p>2 X 4 X 47" CENTER DECK SUPPORT</p> <p>2-4-4700-CDS</p>	<p>1</p>
	<p>2 X 4 X 56" ROCK WALL BOTTOM SUPPORT</p> <p>2-4-5600-RWBS</p>	<p>1</p>
	<p>2 X 4 X 58" CROSS MEMBER</p> <p>2-4-5800-CM</p>	<p>1</p>
	<p>2 X 4 X 60" REAR CENTER POST</p> <p>2-4-6000-RCP</p>	<p>1</p>
	<p>2 X 4 X 70-3/16" ROPE LADDER SUPPORT</p> <p>2-4-7019-RLS</p>	<p>1</p>
	<p>2 X 4 X 77" SIDE RAIL</p> <p>2-4-7700-SR</p>	<p>2</p>
	<p>2 X 4 X 80" ROPE LADDER RUNNER</p> <p>2-4-8000-RLR</p>	<p>1</p>

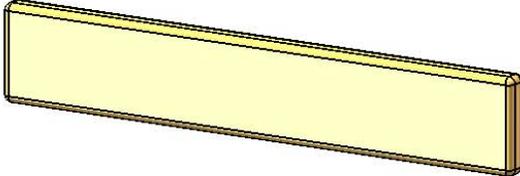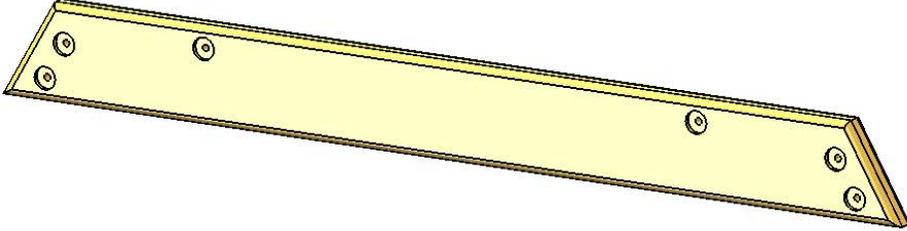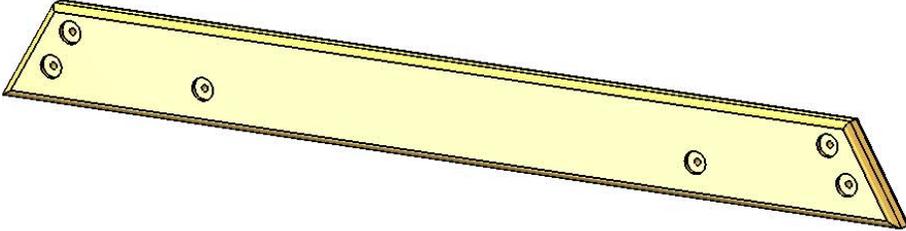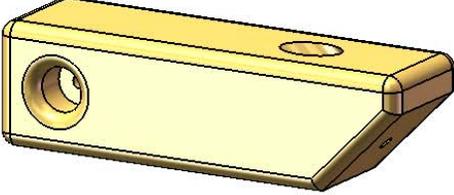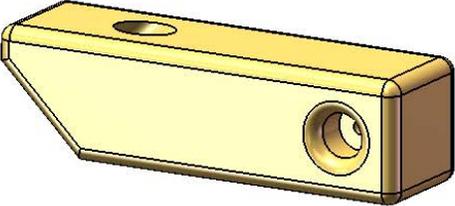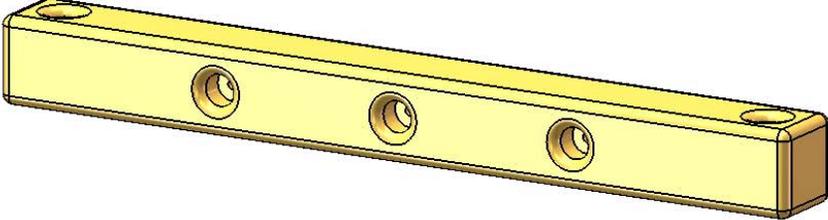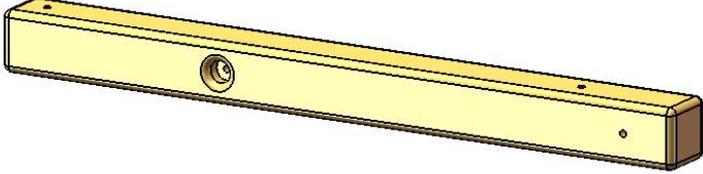PICTURE	DESCRIPTION	QTY.
	<p>2 X 6 X 30-3/4" STEP</p> <p>2-6-3075-SL</p>	<p>4</p>
	<p>2 X 6 X 50-1/4" INNER FORT SUPPORT</p> <p>2-6-5425-IFS</p>	<p>2</p>
	<p>2 X 6 X 50-1/4" OUTER FORT SUPPORT</p> <p>2-6-5425-OFS</p>	<p>2</p>
	<p>4 X 4 X 12" ANGLE SUPPORT LEFT SIDE</p> <p>4-4-1200-ASLS</p>	<p>2</p>
	<p>4 X 4 X 12" ANGLE SUPPORT RIGHT SIDE</p> <p>4-4-1200-ASRS</p>	<p>2</p>
	<p>4 X 4 X 33-1/4" SWING BEAM SIDE RAIL</p> <p>4-4-3325-SBSR</p>	<p>1</p>
	<p>4 X 4 X 40-1/2" CORNER POST (LEFT)</p> <p>4-4-4050-CPL</p>	<p>2</p>

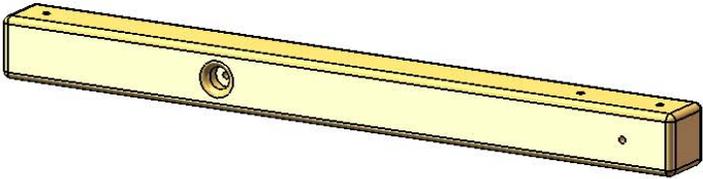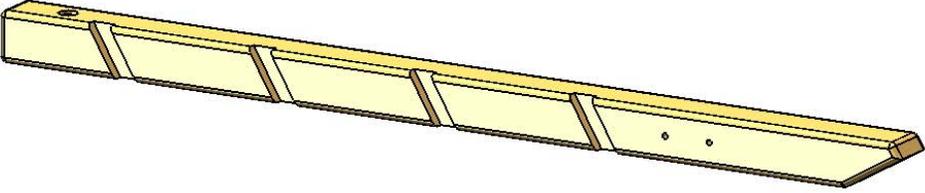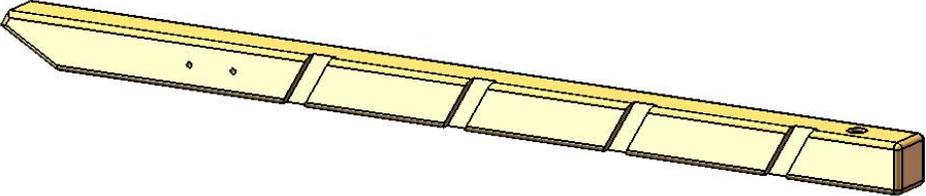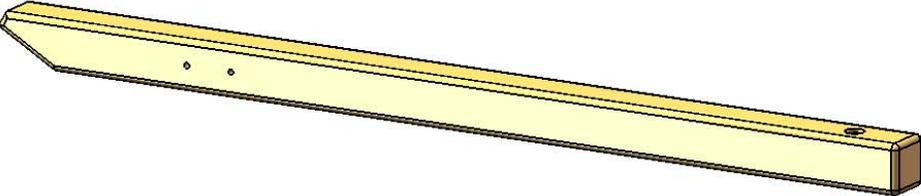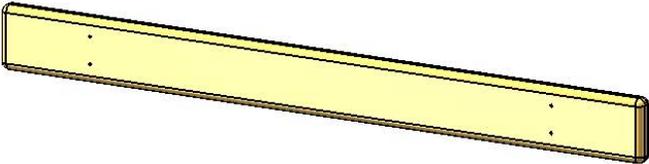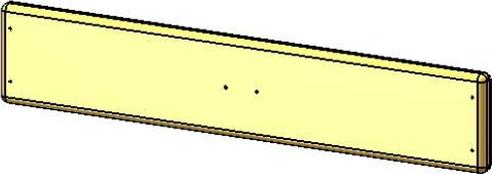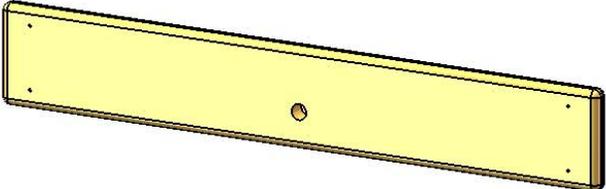PICTURE	DESCRIPTION	QTY.
	<p>4 X 4 X 40-1/2" CORNER POST (RIGHT)</p> <p>4-4-4050-CPR</p>	<p>2</p>
	<p>4 X 4 X 65-1/4" LADDER LEFT SIDE</p> <p>4-4-6525-LLS</p>	<p>1</p>
	<p>4 X 4 X 65-1/4" LADDER RIGHT SIDE</p> <p>4-4-6525-LRS</p>	<p>1</p>
	<p>4 X 4 X 65-1/4" ROCK WALL SIDE</p> <p>4-4-6525-RWS</p>	<p>2</p>
	<p>5/4 X 4 X 38-3/4" CENTER DECK BOARD</p> <p>125-4-3875-CDB</p>	<p>1</p>
	<p>5/4 X 6 X 29-1/4" DECK SPACER</p> <p>125-6-2925-DS</p>	<p>4</p>
	<p>5/4 X 6 X 36" BOTTOM ROCK WALL BOARD</p> <p>125-6-3600-BRWB</p>	<p>1</p>

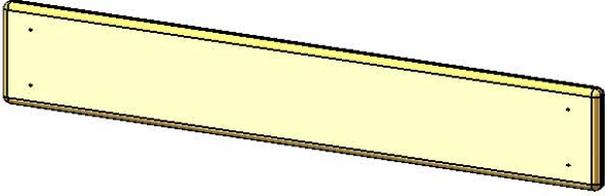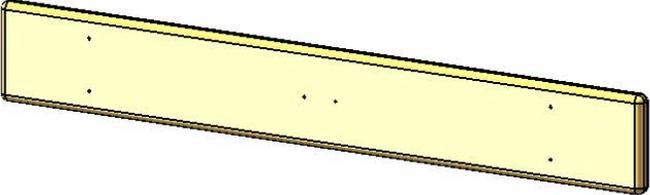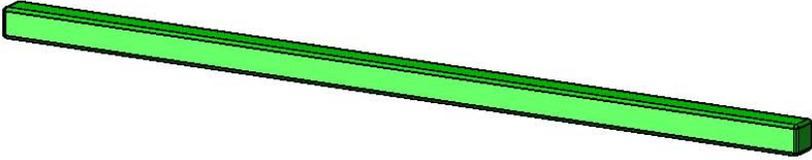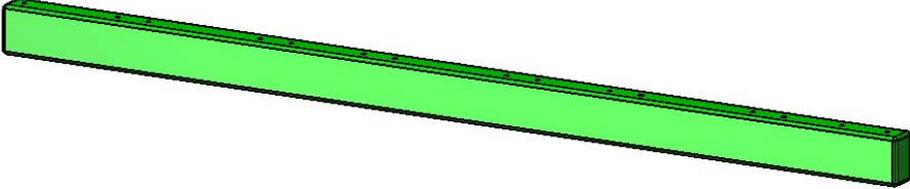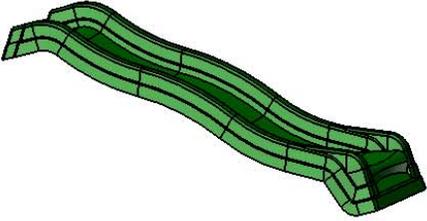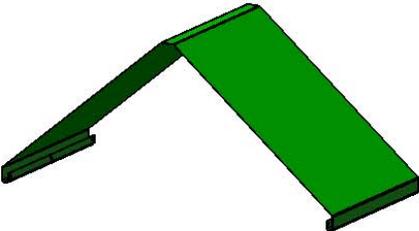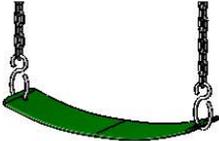PICTURE	DESCRIPTION	QTY.
	<p>5/4 X 6 X 36" ROCK WALL BOARD</p> <p>125-6-3600-RWB</p>	<p>8</p>
	<p>5/4 X 6 X 38-3/4" DECK BOARD</p> <p>125-6-3875-DB</p>	<p>4</p>
	<p>4 X 4 X 96" SWING LEG POLY COATED</p> <p>99-0501</p>	<p>2</p>
	<p>4 X 6 X 108" SWING BEAM POLY COATED</p> <p>99-0601</p>	<p>1</p>
	<p>WAVE SLIDE</p>	<p>1</p>
	<p>36" X 117" TARP</p> <p>05-0008</p>	<p>1</p>
	<p>SWING BELT WITH CHAINS</p> <p>04-0002</p>	<p>2</p>

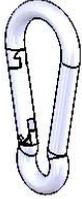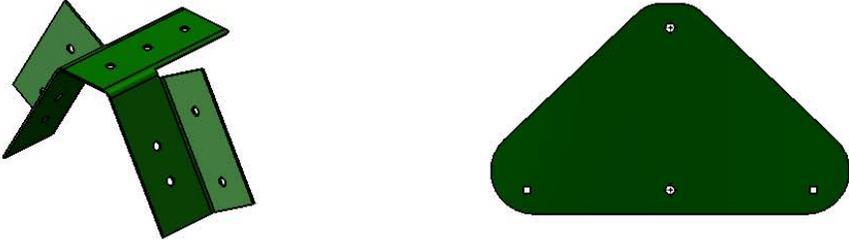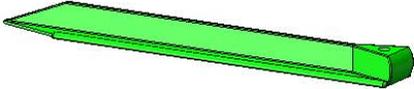
PICTURE	DESCRIPTION	QTY.
(CHAIN NOT SHOWN)	CHAIN 08-1002	1 FT.
	SPRING CLIP 11-4003	7
	IRON DUCTILE SWING HANGER 11-4012	7
(3/4" DIAMETER ROPE NOT SHOWN)	10 FT. ROPE - ROCK WALL 15 FT. ROPE - ROPE LADDER 10-1003	1 PC. 3 PCS.
	SWING LEG BRACKET 11-5010 SWING BEAM PLATE 11-5002	1 1
 NOTE: GROUND STAKES MAY BE METAL, PLASTIC OR WOOD AT OUR DISCRETION.	PLASTIC GROUND STAKES 07-0016	2
(NOT SHOWN)	LOGO PLATE	1

STEP 1: DRILLING HOLES FOR LADDER STEPS

1: LOCATE THE 4 X 4 X 65-1/4" LADDER SIDE-LEFT AND THE 4 X 4 X 65-1/4" LADDER SIDE - RIGHT.

2: PLACE A SCRAP PIECE OF WOOD UNDERNEATH THE LADDER SIDE YOU ARE ABOUT TO DRILL. DRILL TWO 1/8" DIAMETER HOLES ALONG THE CENTER OF EACH NOTCH THROUGH THE LADDER SIDE PIECES. LOCATE EACH HOLE ABOUT 1" IN FROM THE SIDES AS SHOWN BELOW. (SEE DETAIL A BELOW)

3: THESE HOLES WILL MAKE IT EASIER TO "HIT" THE LADDER STEPS WITH SCREWS DURING ASSEMBLY IN THE NEXT STEP.

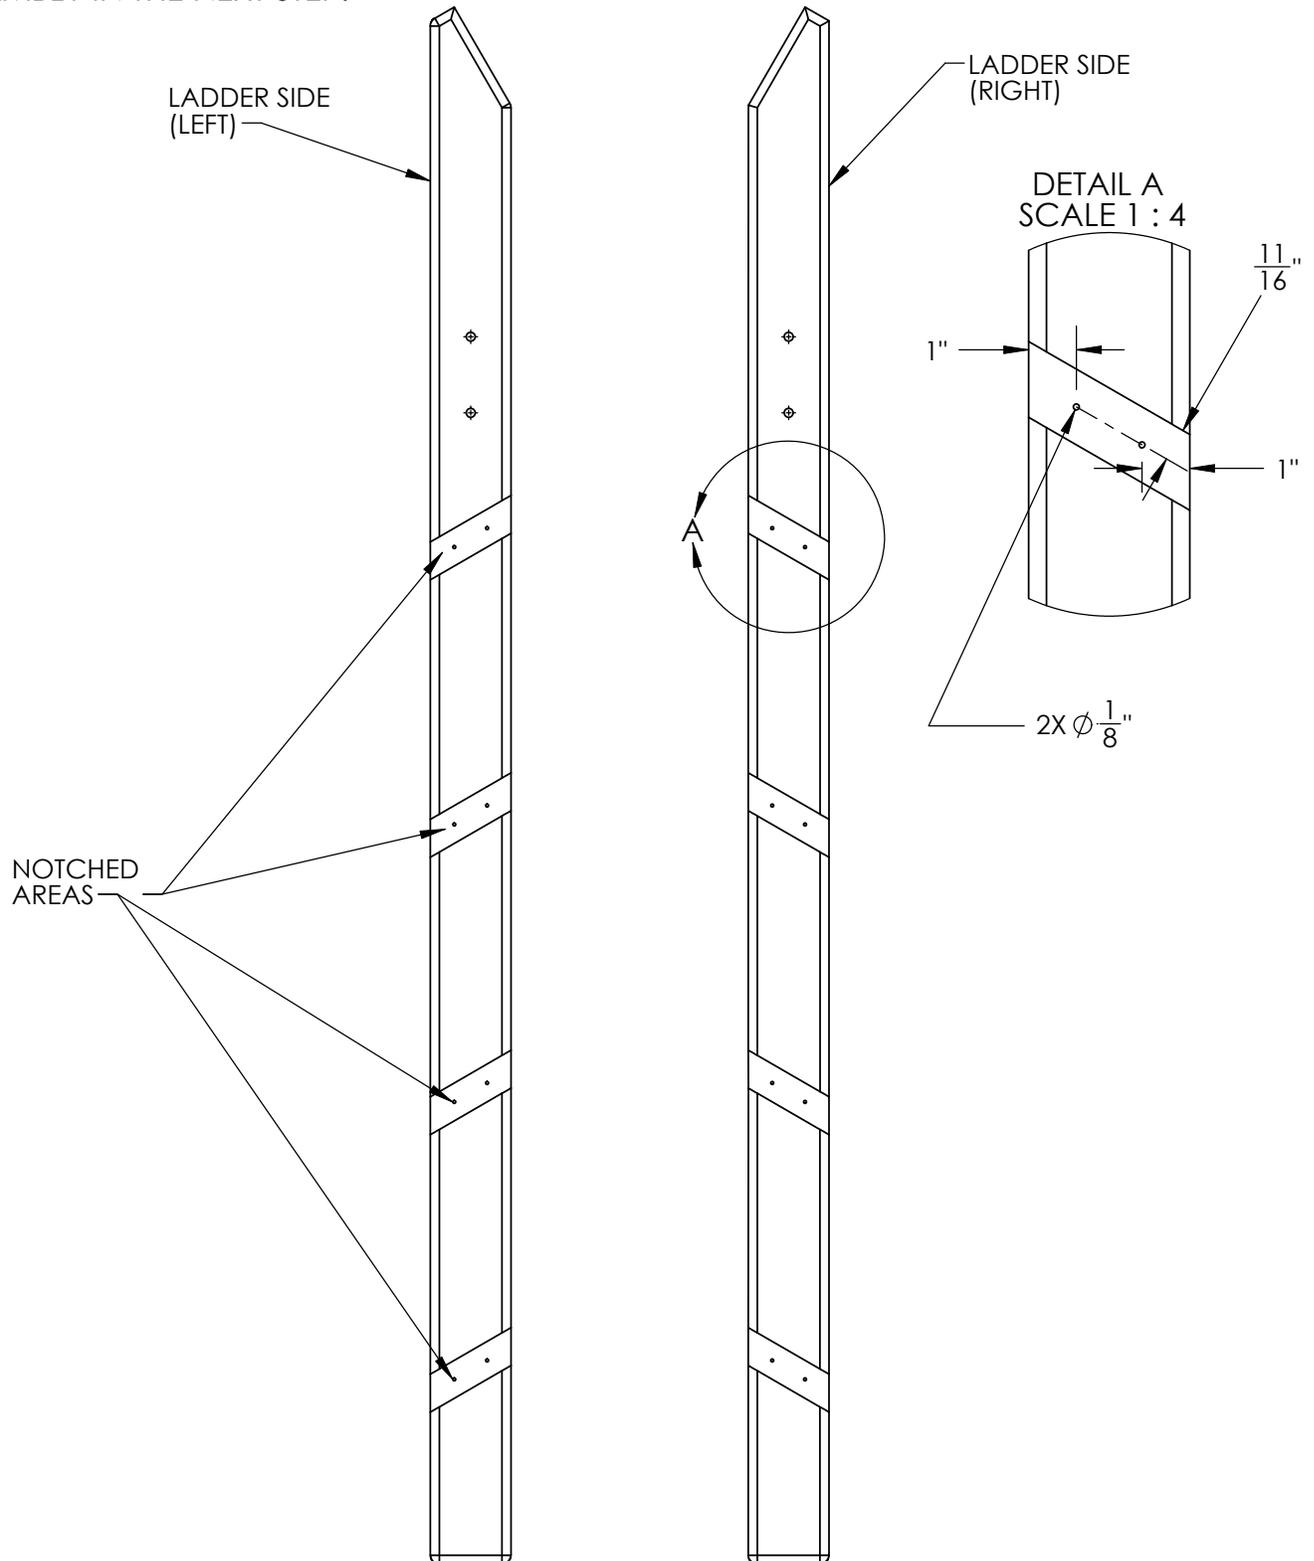


STEP 3: ATTACHING ROPE LADDER RUNNER

1: LINE UP THE HOLES IN THE 2 X 4 X 80" ROPE LADDER RUNNER WITH THE HOLES IN THE LADDER SIDES.


2: INSTALL T-NUTS INTO THE HOLES IN THE BACK SIDE OF THE ROPE LADDER RUNNER.

3: FASTEN THE ROPE LADDER RUNNER TO THE LADDER SIDES WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS.

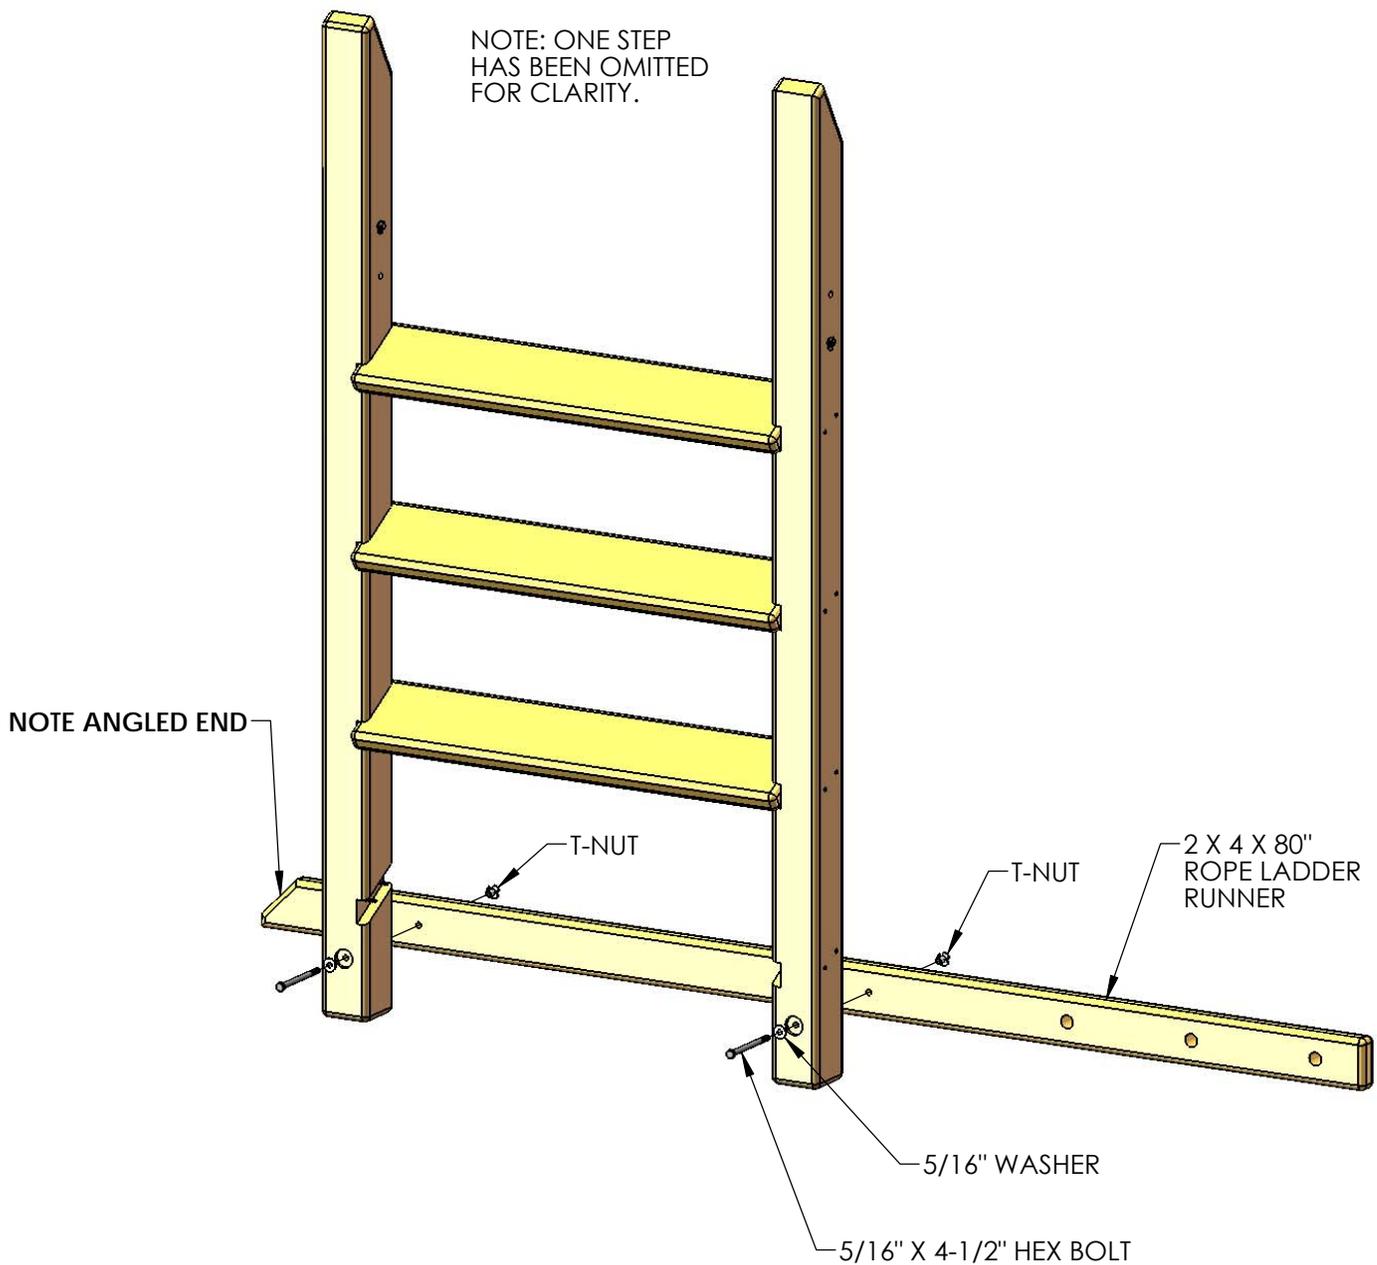

STEP 4: ANGLE SUPPORTS

- 1: PLACE THE 45° END OF A 4 X 4 X 12" ANGLE SUPPORT AGAINST THE SIDE OF EACH LADDER SIDE.
- 2: CENTER THE BOTTOM HOLE IN EACH ANGLE SUPPORT WITH THE MIDDLE OF THE ROPE LADDER RUNNER.
- 3: ATTACH EACH ANGLE SUPPORT THROUGH THE TOP HOLE TO THE LADDER SIDES WITH A 3/8" X 3-1/2" LAG SCREW AND A 3/8" WASHER.
- 4: USE THE BOTTOM HOLE IN EACH ANGLE SUPPORT AS A GUIDE TO DRILL A 3/8" HOLE THROUGH THE ROPE LADDER RUNNER. PLACE A SCRAP PIECE OF WOOD BEHIND THE ROPE LADDER RUNNER TO PREVENT THE WOOD FROM SPLITTING OUT.
- 5: INSTALL T-NUTS IN THE BACK SIDE OF THE ROPE LADDER RUNNER.
- 6: ATTACH EACH ANGLE SUPPORT TO THE ROPE LADDER RUNNER WITH 5/16" X 3-1/2" HEX BOLTS AND 5/16" WASHERS.

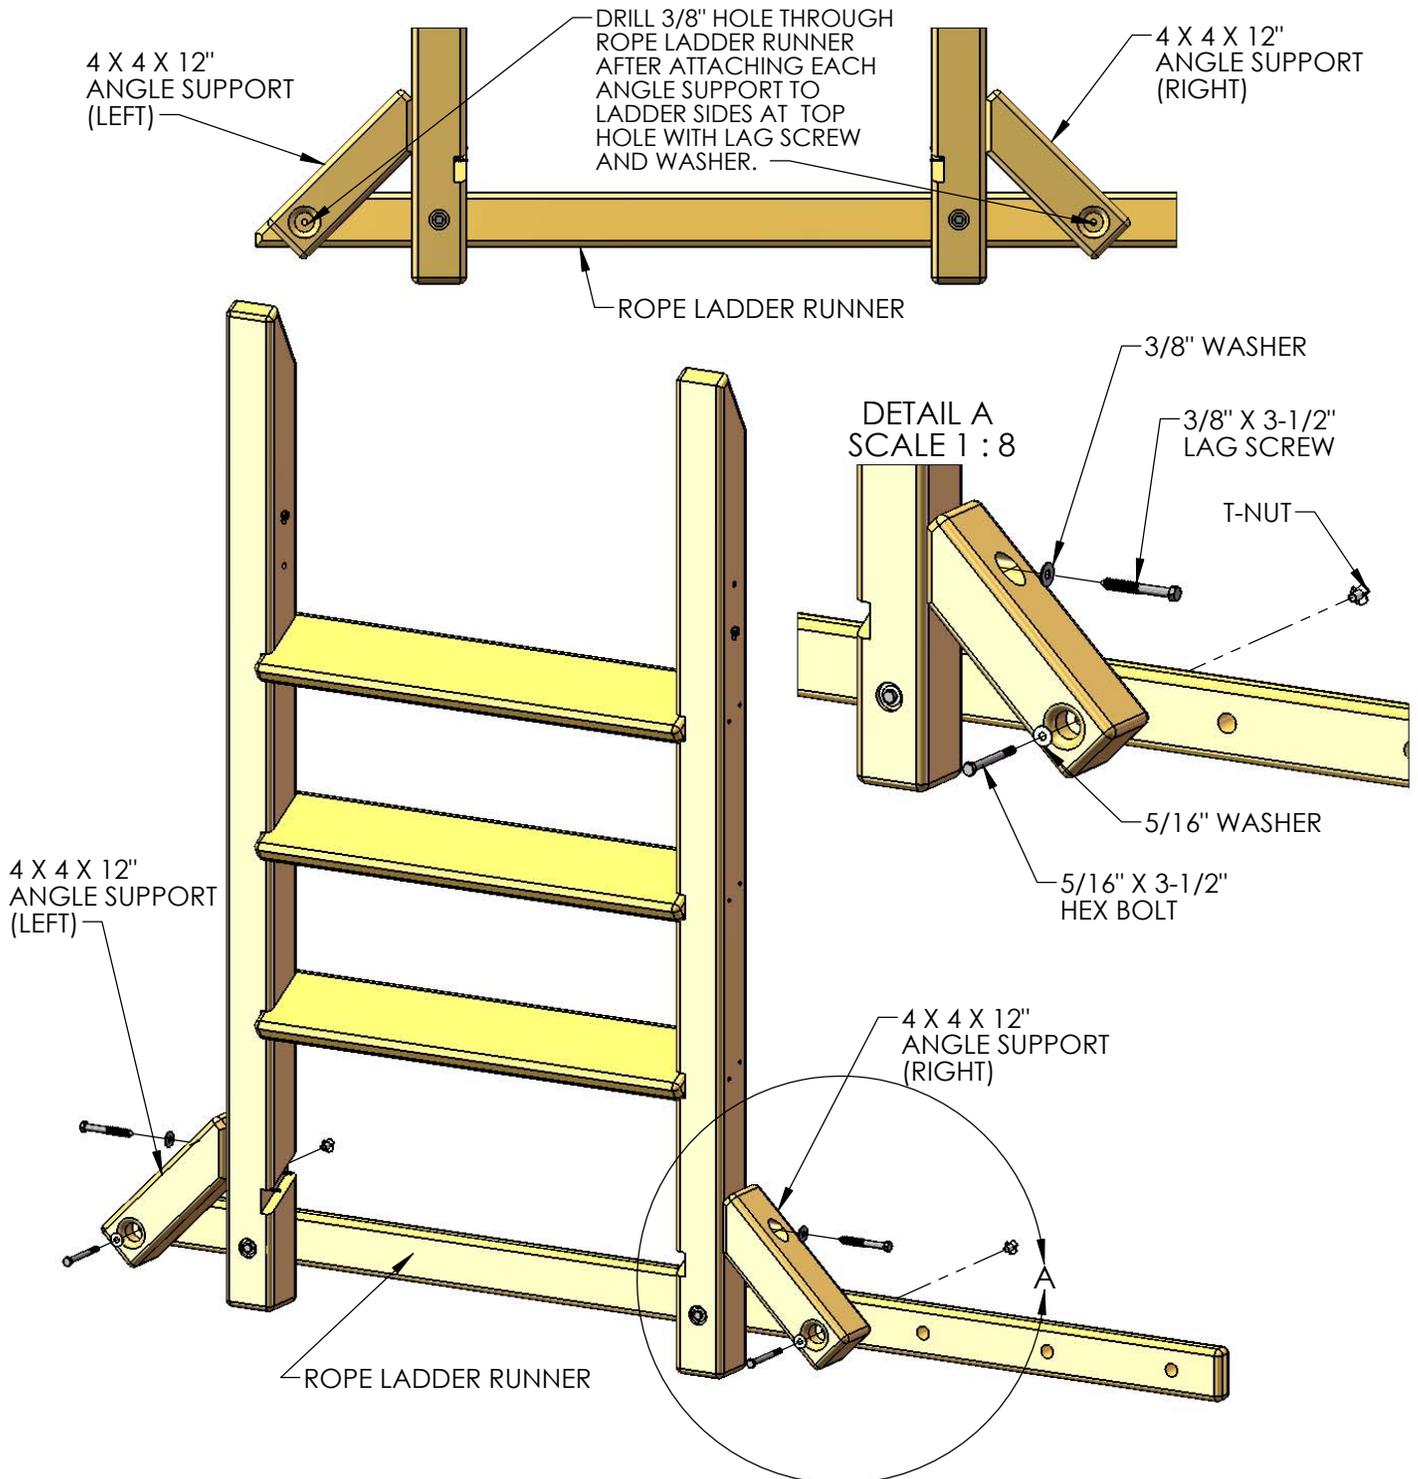


STEP 5: ROCK WALL

1: PLACE TWO 4 X 4 X 65-1/4" ROCK WALL SIDES AGAINST THE 2 X 4 X 56" ROCK WALL BOTTOM SUPPORT. NOTE THE ANGLES ON THE ENDS OF THE ROCK WALL SIDES SHOULD MATCH ONE ANOTHER AND THAT THE COUNTERBORED HOLES FACE OUT. ALSO NOTE THE ANGLE ON THE ENDS OF THE ROCK WALL BOTTOM SUPPORT.

2: INSTALL T-NUTS INTO THE HOLES IN THE ROCK WALL SIDES. THE TOPMOST HOLES GET A T-NUT ON THE INSIDE WHILE THE LOWER HOLES GET A T-NUT ON THE OUTSIDE.

3: INSTALL T-NUTS INTO THE HOLES ON THE BACK SIDE OF THE ROCK WALL BOTTOM SUPPORT.

4: ATTACH THE ROCK WALL SIDES TO THE ROCK WALL BOTTOM SUPPORT WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS.

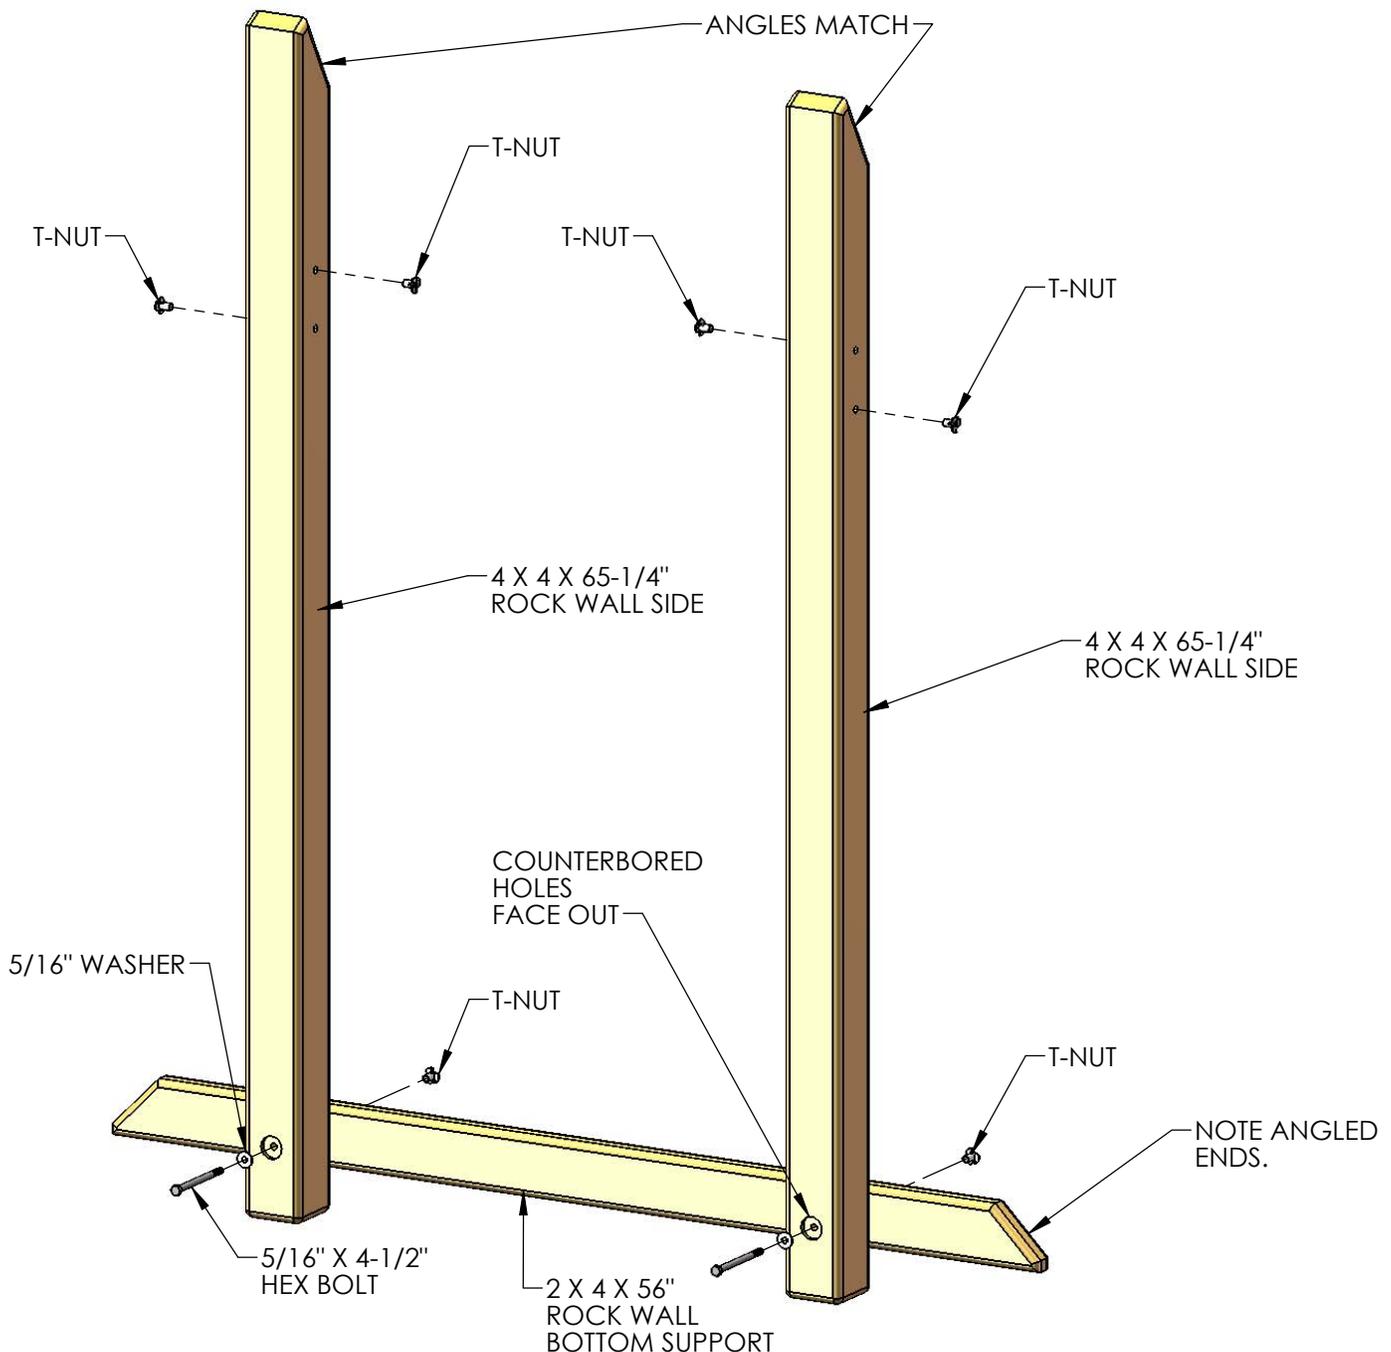


STEP 6: ROCK WALL

1: MEASURE 52" FROM THE BOTTOM OF EACH OF THE ROCK WALL SIDES AND MAKE A MARK ONTO THE ROCK WALL SIDES.

2: BEFORE INSTALLING THE ROCK WALL BOARD MAKE SURE THAT THE ROCK WALL SIDES ARE SQUARE TO THE ROCK WALL BOTTOM SUPPORT.


3: ALIGN THE TOP SURFACE OF A 5/4 X 6 X 36" ROCK WALL BOARD WITH THE MARKS.

4: FASTEN THE ROCK WALL BOARD TO THE ROCK WALL SIDES WITH #8 X 2" WOOD SCREWS.

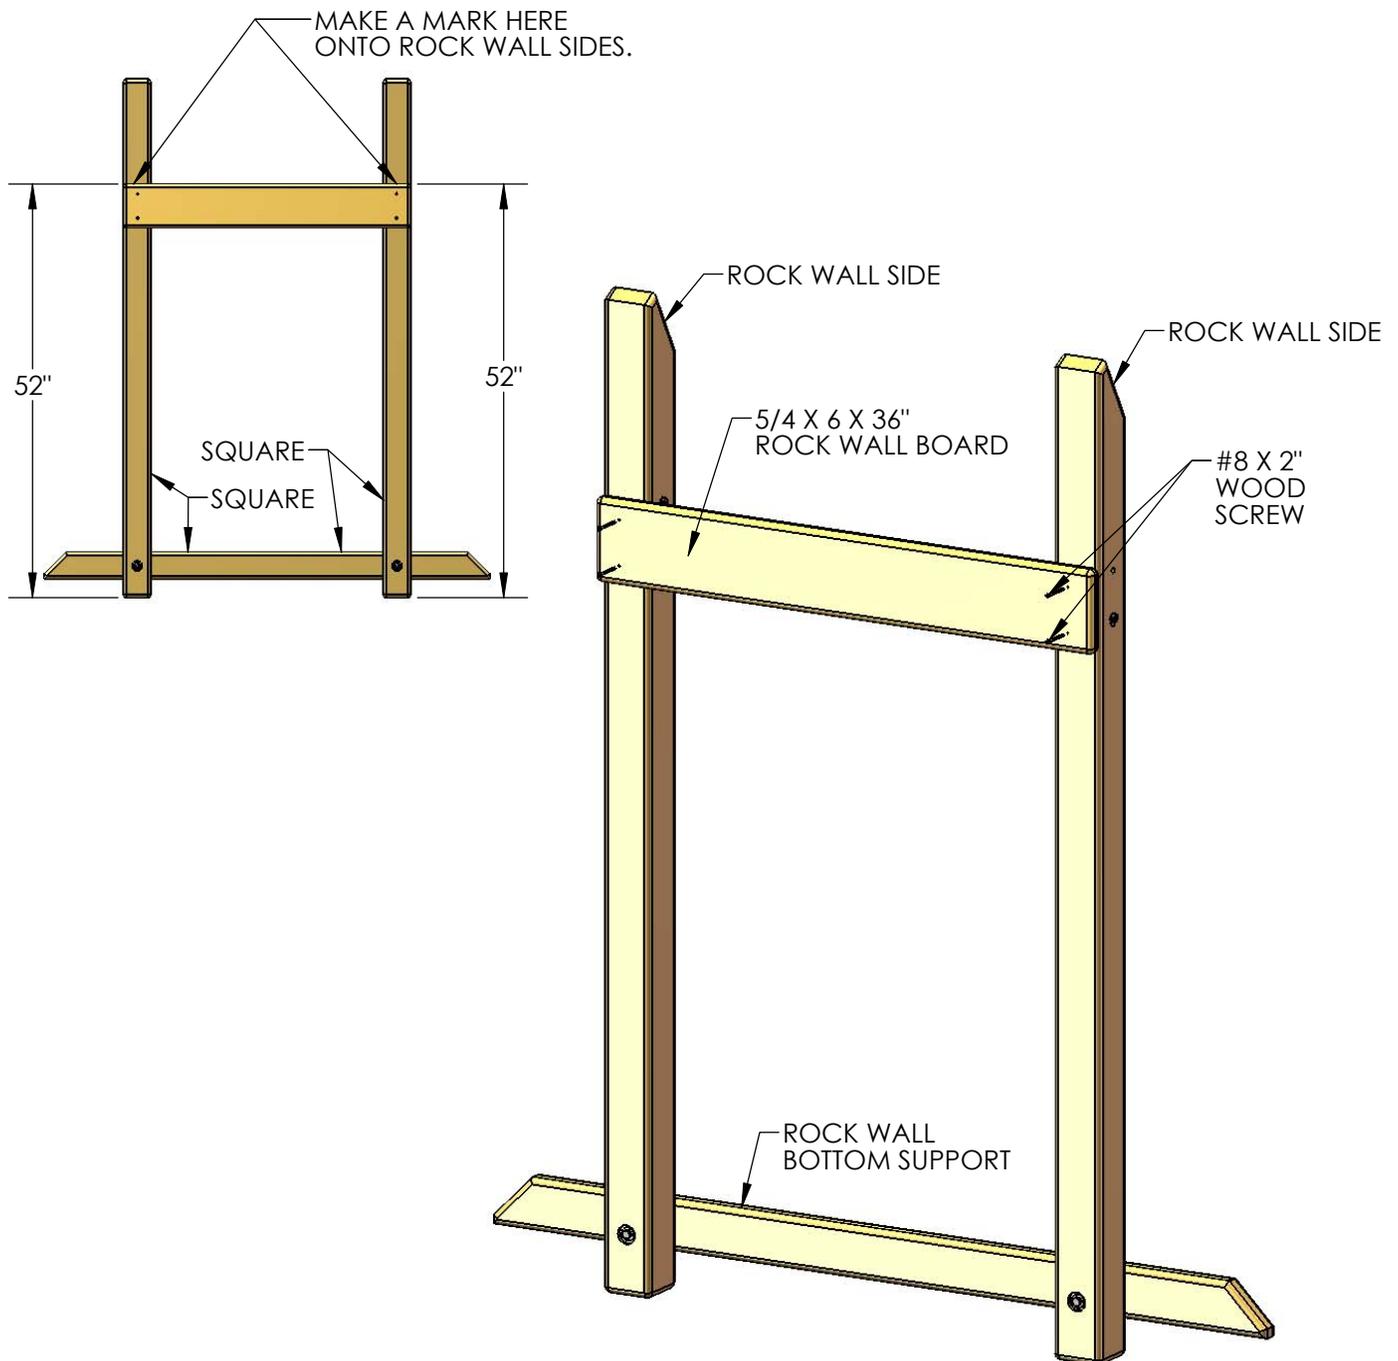

STEP 7: ROCK WALL

- 1: PLACE THE 45° END OF A 4 X 4 X 12" ANGLE SUPPORT AGAINST THE SIDE OF EACH ROCK WALL SIDE.
- 2: CENTER THE BOTTOM HOLE IN EACH ANGLE SUPPORT WITH THE MIDDLE OF THE ROCK WALL BOTTOM SUPPORT.
- 3: ATTACH EACH ANGLE SUPPORT THROUGH THE TOP HOLE TO THE LADDER SIDES WITH A 3/8" X 3-1/2" LAG SCREW AND A 3/8" WASHER.
- 4: USE THE BOTTOM HOLE IN EACH ANGLE SUPPORT AS A GUIDE TO DRILL A 3/8" HOLE THROUGH THE ROCK WALL BOTTOM SUPPORT. PLACE A SCRAP PIECE OF WOOD BEHIND THE ROCK WALL BOTTOM SUPPORT TO PREVENT THE WOOD FROM SPLITTING OUT.
- 5: INSTALL T-NUTS IN THE BACK SIDE OF THE ROCK WALL BOTTOM SUPPORT.
- 6: ATTACH EACH ANGLE SUPPORT TO THE ROCK WALL BOTTOM SUPPORT WITH 5/16" X 3-1/2" HEX BOLTS AND 5/16" WASHERS.

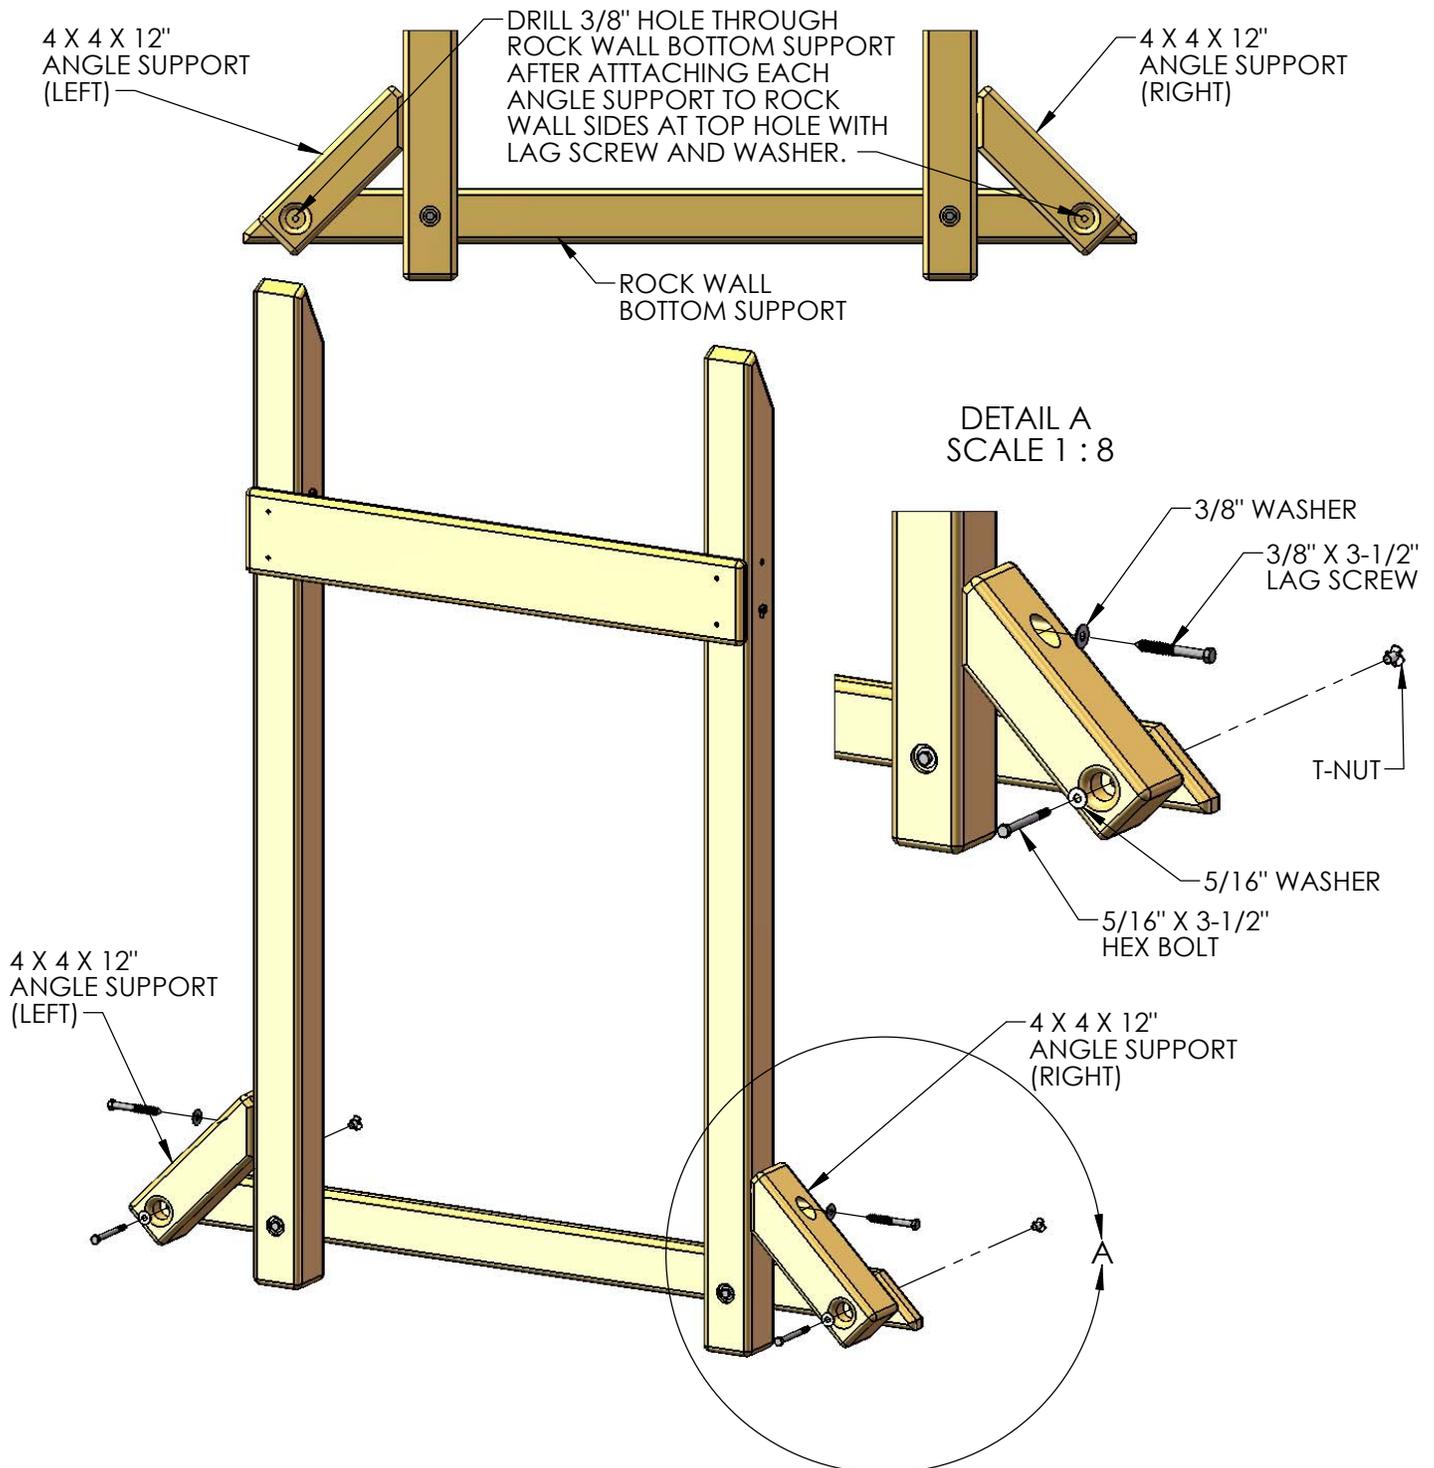


STEP 8: OUTER FORT SUPPORTS

1: LAY THE ROCK WALL ASSEMBLY AND THE LADDER ASSEMBLY DOWN ON A FLAT SURFACE WITH THE ANGLED ENDS FACING EACH OTHER.

2: PLACE A 2 X 6 X 54-1/4" OUTER FORT SUPPORT ON THE OUTSIDE OF THE ROCK WALL/LADDER SIDES. NOTE THE OUTER FORT SUPPORT HAS TWO HOLES IN THE MIDDLE OF THE BOARD CLOSEST TO THE BOTTOM. THE COUNTERBORED HOLES IN THE OUTER FORT SUPPORT FACE OUT.

3: LINE UP THE TOP HOLE IN EACH END OF THE OUTER FORT SUPPORT WITH THE TOP HOLE IN THE ROCK WALL/LADDER SIDES.

4: ATTACH THE OUTER FORT SUPPORT TO THE ROCK WALL/LADDER SIDES WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS.

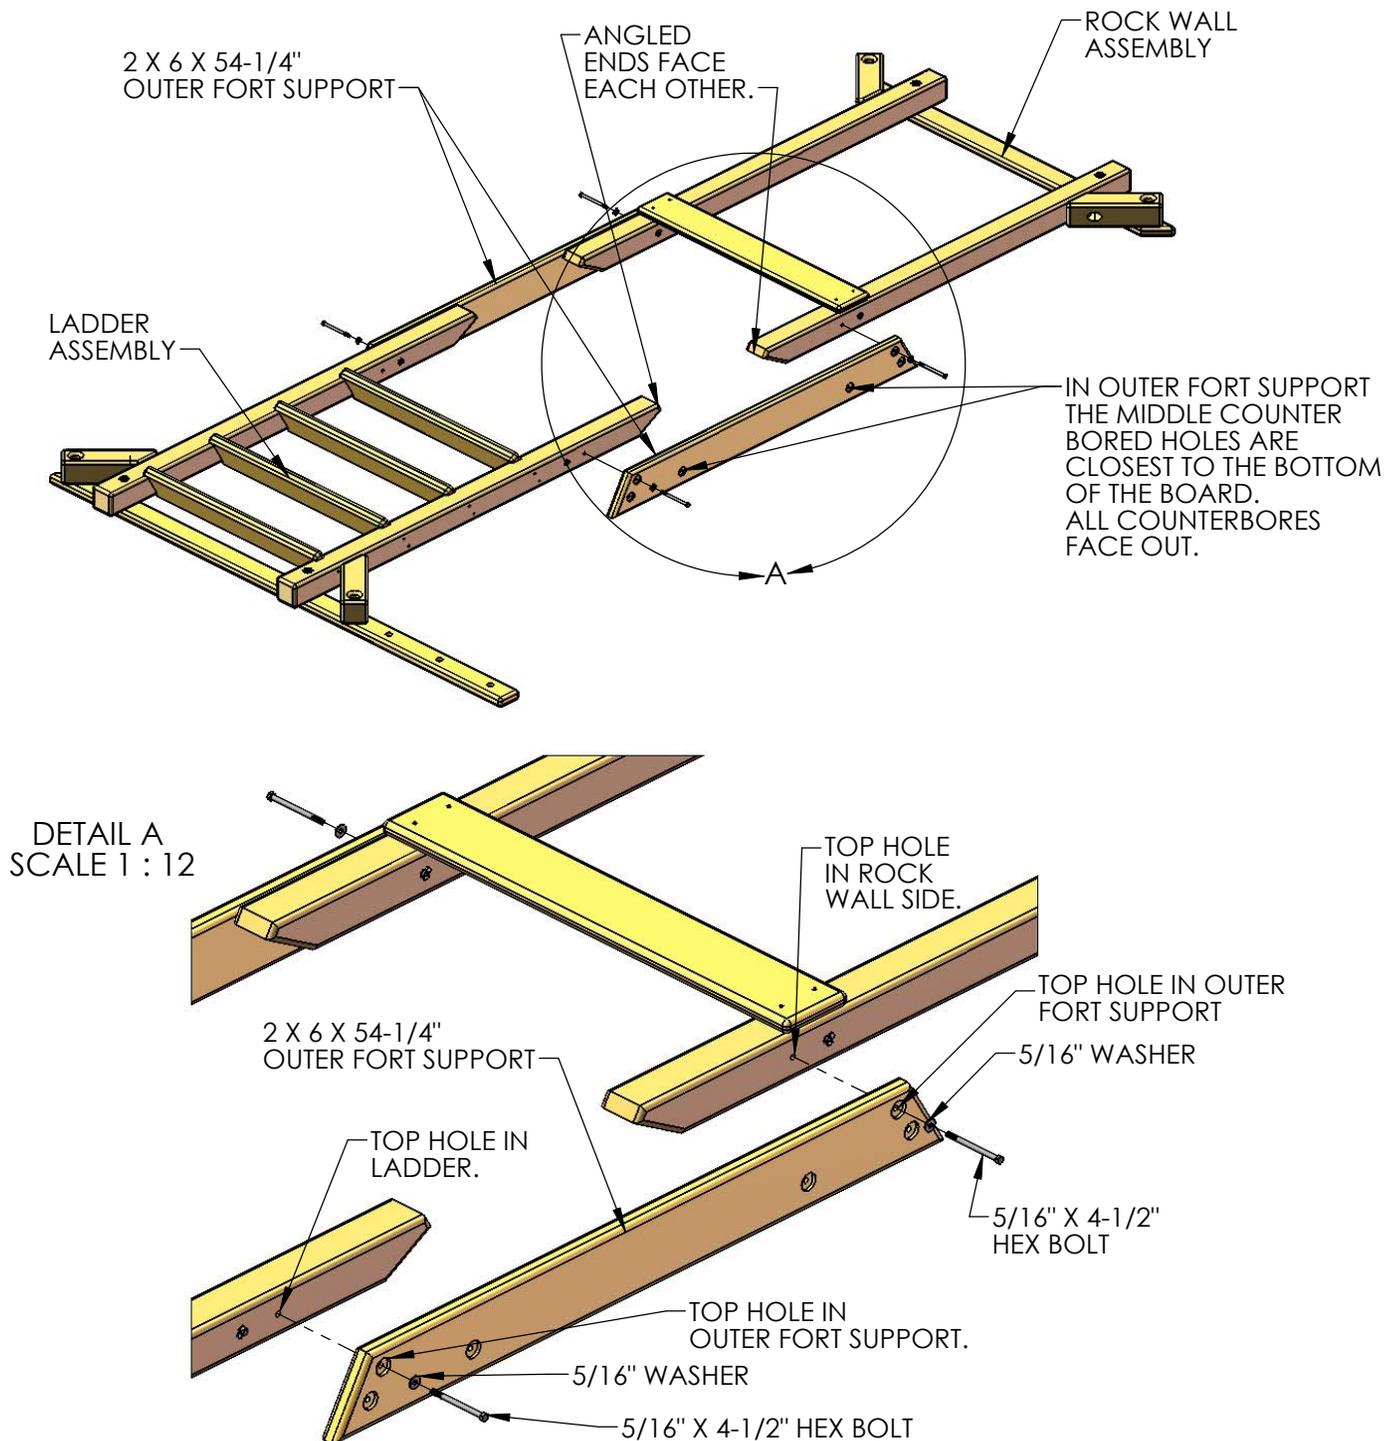


STEP 9: INNER FORT SUPPORTS

1: HAVE AN ASSISTANT HELP YOU LIFT THE OUTER FORT SUPPORTS UP AS THE ROCK WALL ASSEMBLY AND LADDER ENDS TILT UP. THE OUTER SURFACE OF THE LADDER AND ROCK WALL SIDES SHOULD BE FLUSH TO THE ENDS OF THE OUTER FORT SUPPORTS. HAVE YOUR ASSISTANT HOLD THE ASSEMBLY UP WHILE YOU INSTALL THE INNER FORT SUPPORTS.

2: PLACE A 2 X 6 X 54-1/4" INNER FORT SUPPORT ON THE INSIDE OF THE ROCK WALL/LADDER SIDES AS SHOWN. LINE UP THE BOTTOM HOLE IN EACH END OF THE INNER FORT SUPPORT WITH THE BOTTOM HOLE IN THE ROCK WALL/LADDER SIDE.

3: ATTACH THE INNER FORT SUPPORT TO THE ROCK WALL/LADDER SIDE WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS.

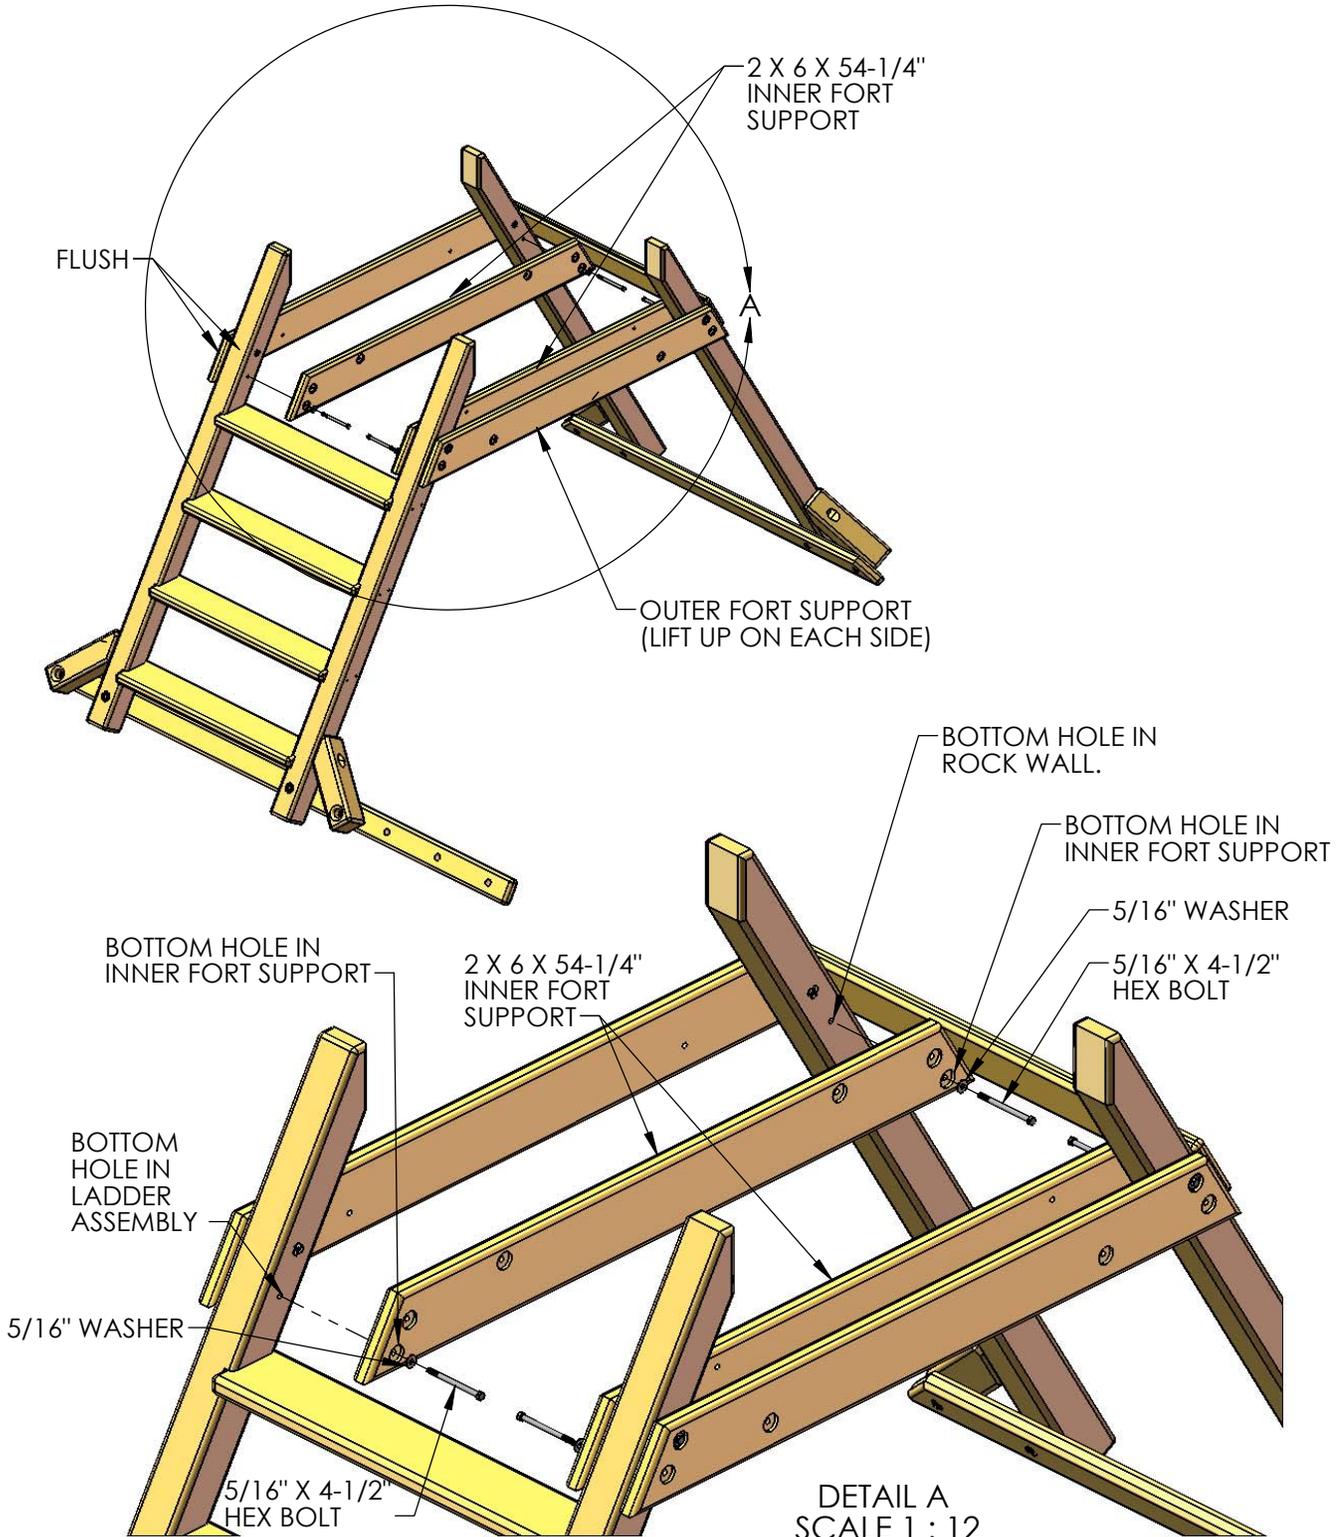


STEP 10: CORNER POSTS

1: LOCATE TWO 4 X 4 X 40-1/2" CORNER POST - LEFT AND TWO 4 X 4 X 40-1/2" CORNER POST - RIGHT. THE CORNER POST - RIGHT HAS THREE HOLES IN THE TOP AND THE CORNER POST - LEFT HAS TWO HOLES IN THE TOP. THE COUNTERBORED HOLES IN THE CORNER POSTS FACE EACH OTHER ON THE INSIDE.

2: INSTALL A T-NUT INTO THE BOTTOM HOLE OF EACH CORNER POST ON THE INSIDE AS SHOWN.


3: PLACE THE BOTTOM END OF EACH CORNER POST BETWEEN THE INNER AND OUTER FORT SUPPORTS AND LINE UP THE BOTTOM HOLE IN THE CORNER POST WITH THE HOLE IN THE OUTER FORT SUPPORT.

4: ATTACH EACH CORNER POST TO THE OUTER FORT SUPPORTS WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS.

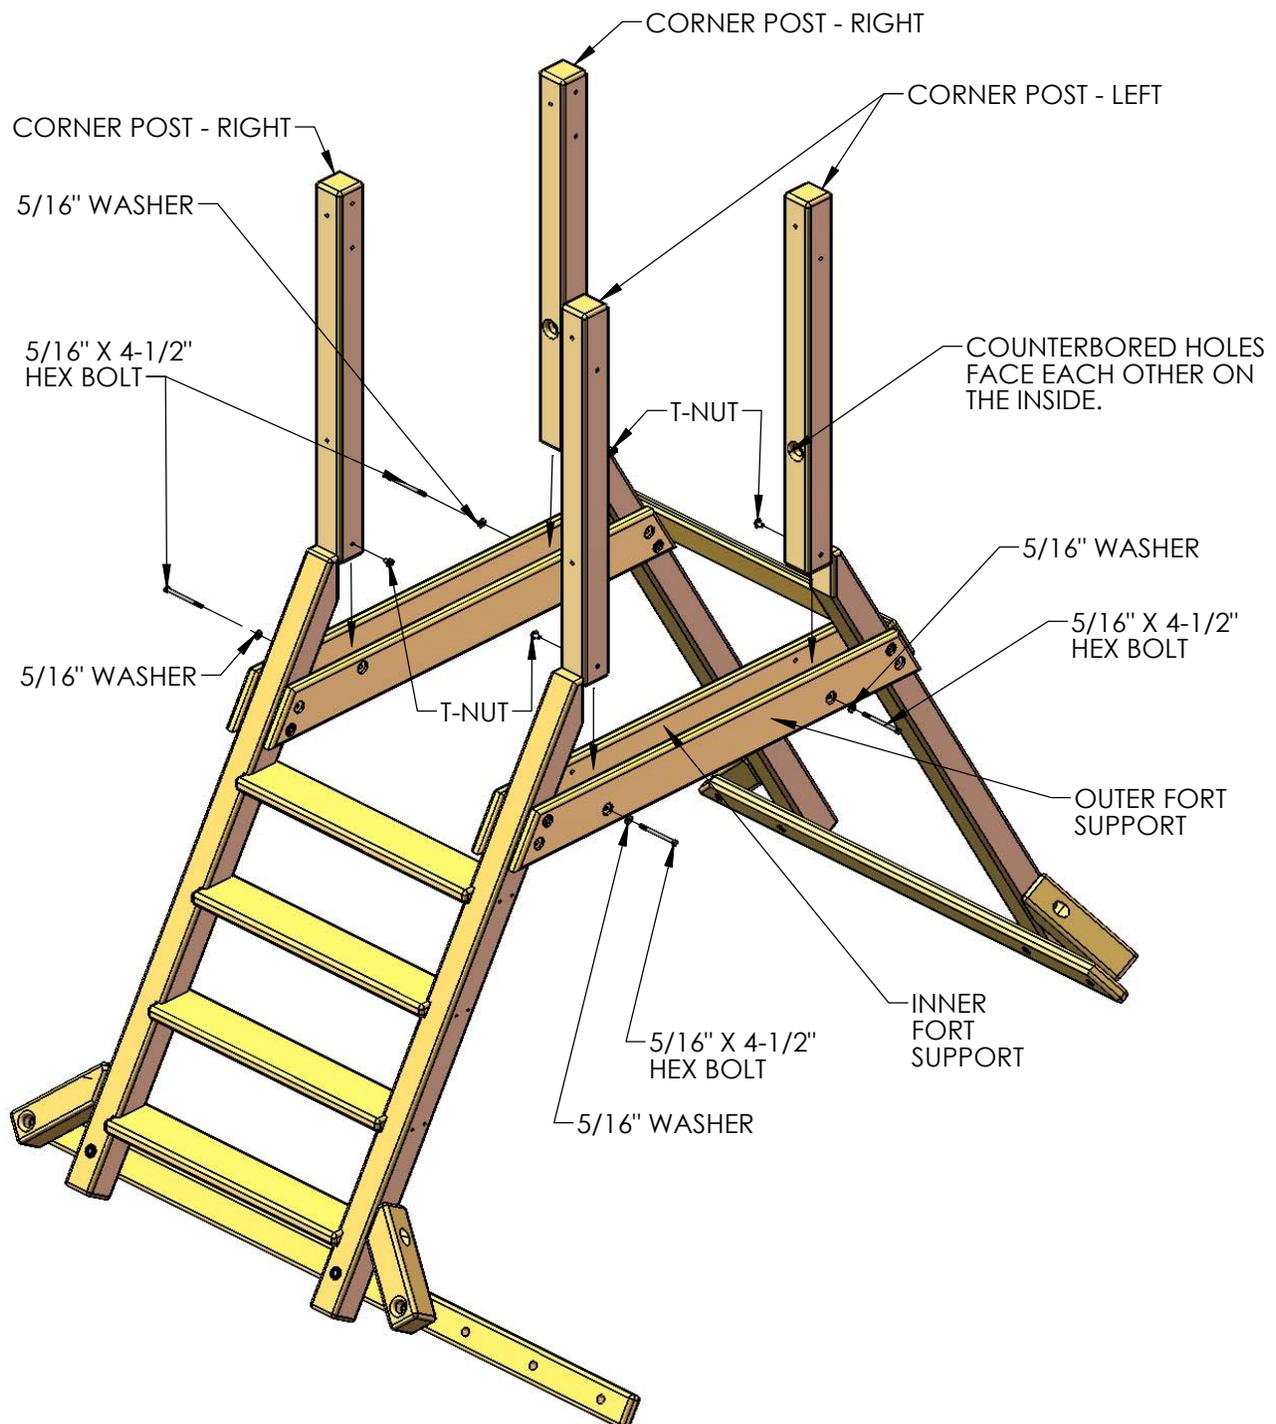

STEP 11: CORNER POSTS

- 1: INSTALL T-NUTS IN THE BOTTOM HOLES ON THE INSIDE OF THE CORNER POSTS.
- 2: INSTALL T-NUTS IN THE TOP HOLES ON THE INSIDE OF THE CORNER POSTS ABOVE THE COUNTERBORED HOLES.
- 3: DO NOT INSTALL T-NUTS IN THE TOP HOLES ON THE INSIDE TOP MOST HOLES OF THE CORNER POST - RIGHT BOARDS.

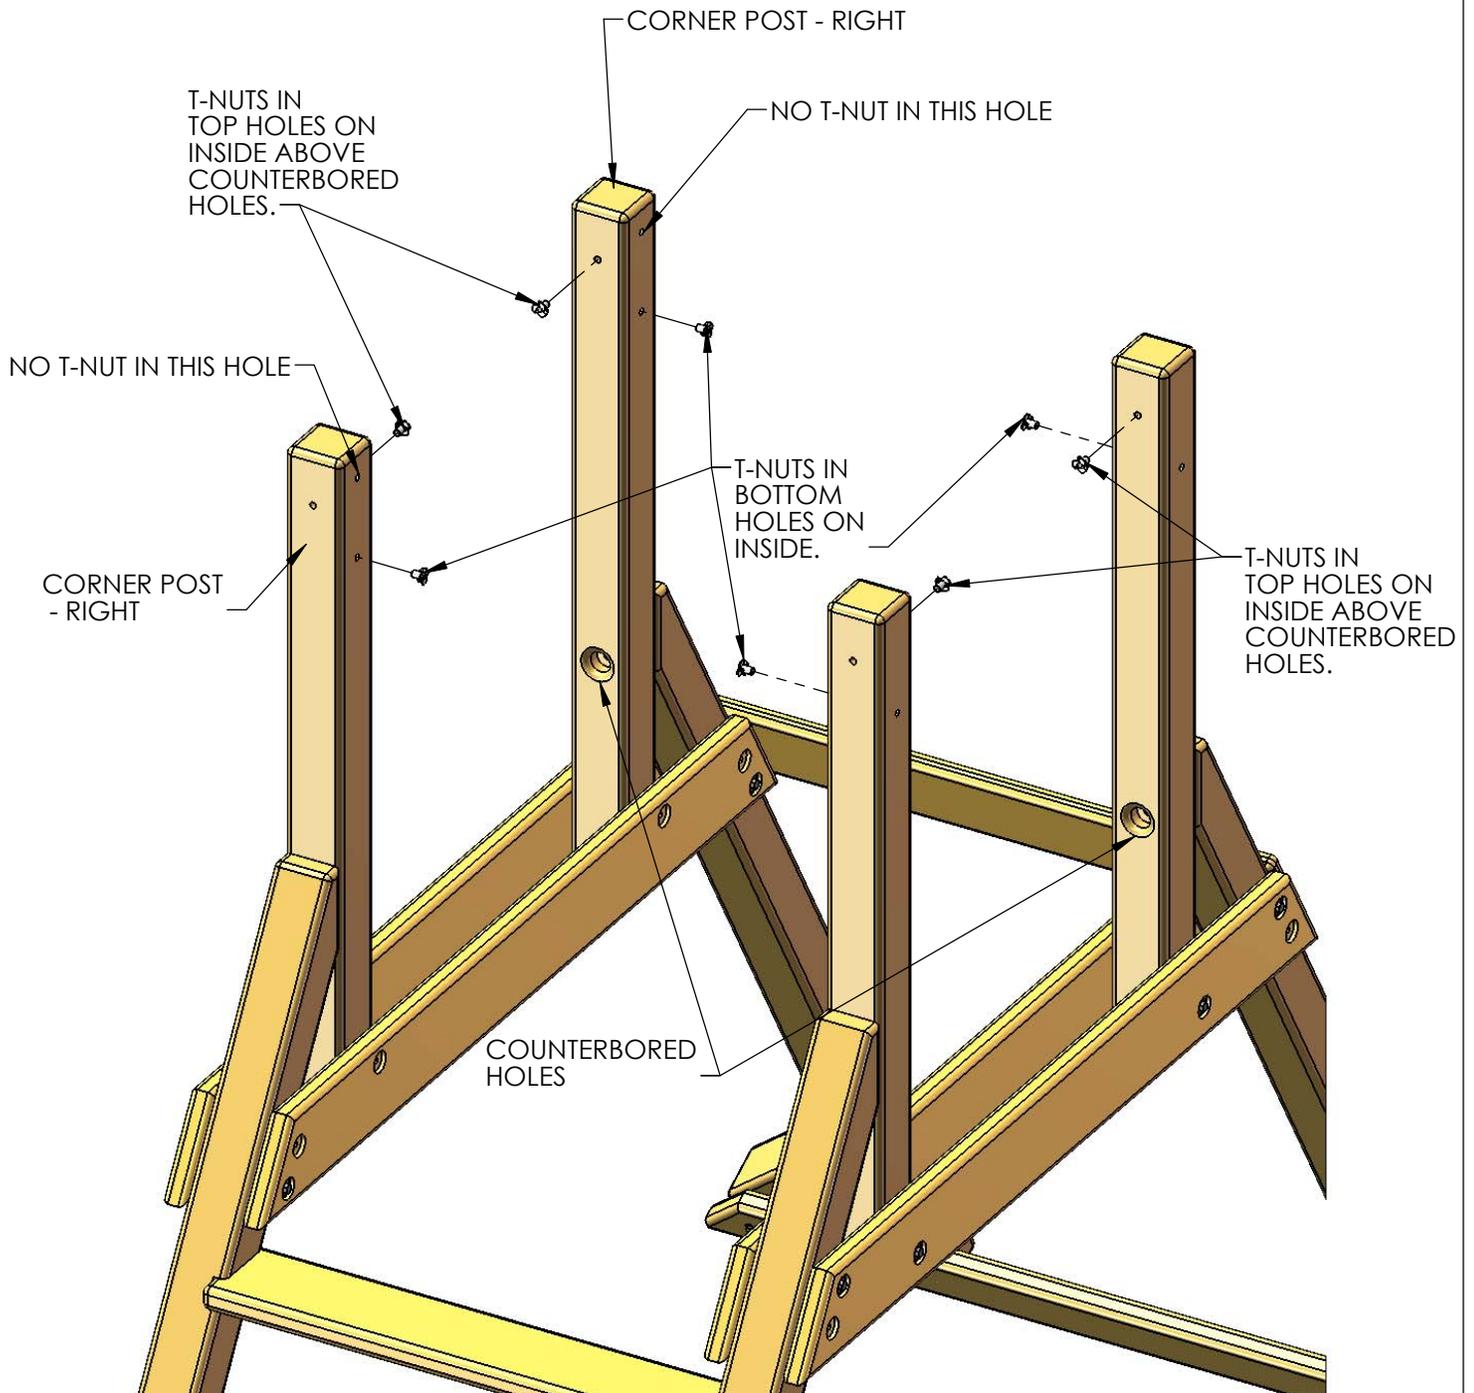


STEP 12: ATTACH SWING BEAM PLATE TO THE SWING BEAM SIDE RAIL


1: LOCATE THE 4 X 4 X 33-1/4" SWING BEAM SIDE RAIL AND THE SWING BEAM PLATE.

2: PLACE THE SWING BEAM PLATE OVER THE THREE SMALL HOLES IN THE SWING BEAM SIDE RAIL. THE TWO COUNTERBORED HOLES IN THE ENDS OF THE BEAM SHOULD FACE THE SAME DIRECTION AS THE POINTED END OF THE SWING BEAM PLATE. THE THREE COUNTERBORED HOLES IN THE MIDDLE OF THE BEAM SHOULD FACE DOWN.

3: FASTEN THE SWING BEAM PLATE TO THE SWING BEAM SIDE RAIL WITH 3/8" X 3-1/2" CARRIAGE BOLTS IN TOP AND 3/8" WASHERS, 3/8" LOCK NUTS ON THE BOTTOM. PLACE BOLT CAPS OVER ANY EXPOSED THREADS.

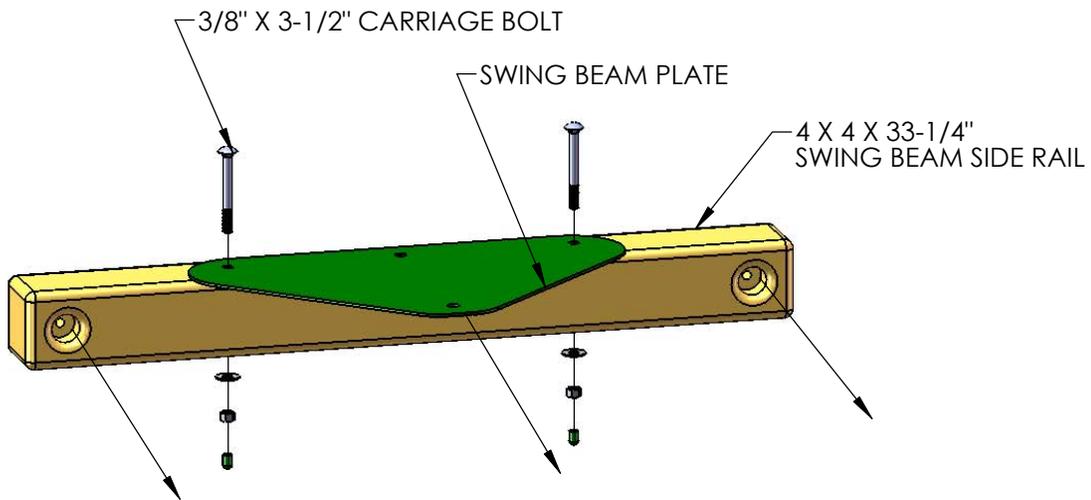

POINTED END OF SWING BEAM PLATE
FACES SAME DIRECTION AS TWO COUNTERBORES
IN ENDS OF SWING BEAM SIDE RAIL.

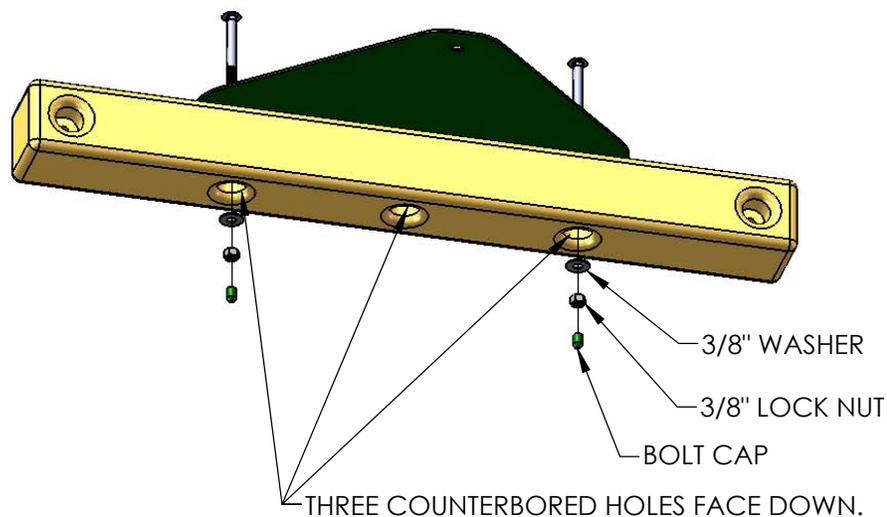


STEP 13: SIDE RAILS

1: LOCATE TWO 2 X 4 X 77" SIDE RAILS.

2: PLACE EACH SIDE RAIL AGAINST THE CORNER POSTS ON THE OUTSIDE WITH THE COUNTERBORED HOLES FACING OUT.

3: ALIGN THE HOLES IN EACH SIDE RAIL TO THE HOLES IN THE CORNER POSTS.

4: LOOSELY ATTACH EACH SIDE RAIL TO THE CORNER POSTS WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS.

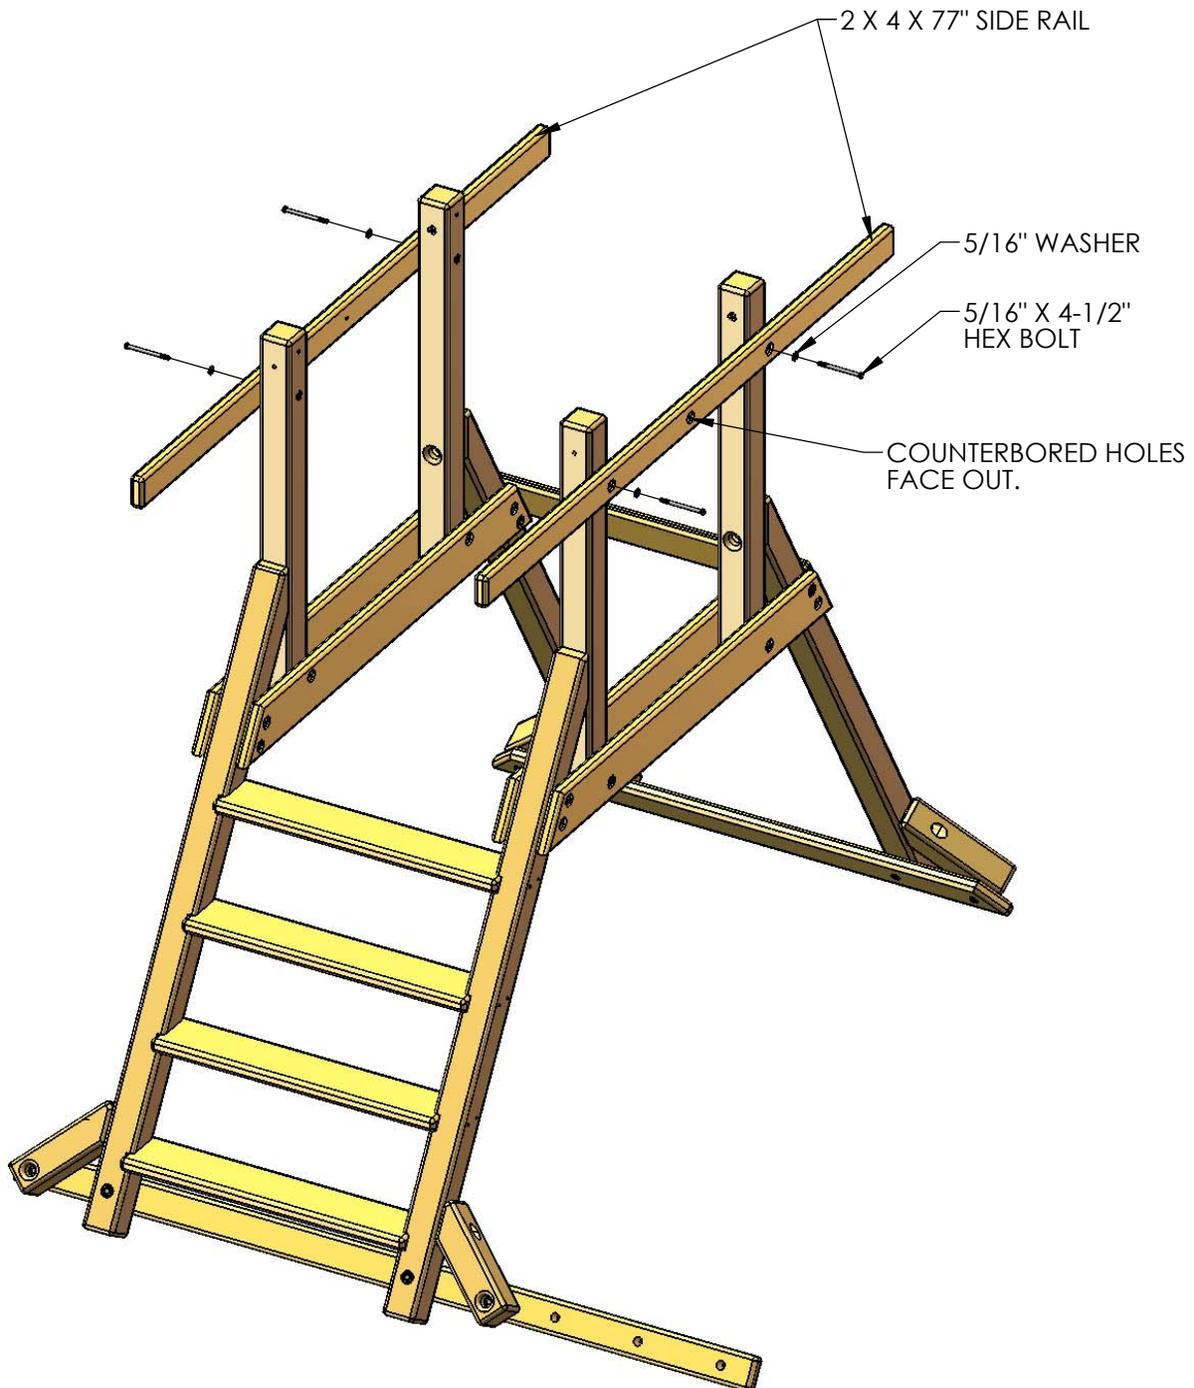


STEP 14: ATTACHING SWING BEAM SIDE RAIL

1: PLACE THE 4 X 4 X 33-1/4" SWING BEAM SIDE RAIL/SWING BEAM PLATE ASSEMBLY AGAINST THE RIGHT CORNER POSTS. THE SWING BEAM PLATE SHOULD FACE UP.

2: LINE UP THE HOLES IN THE SWING BEAM SIDE RAIL WITH THE HOLES IN THE RIGHT CORNER POSTS.

3: PLACE A 3/8" X 6-1/2" CARRIAGE BOLT AND TORQUE WASHER INTO THE HOLES AT THE TOP OF THE RIGHT CORNER POSTS ON THE INSIDE. LINE UP THE SQUARE SHANK OF THE CARRIAGE BOLT WITH THE SQUARE HOLE IN THE TORQUE WASHER. USE A HAMMER TO HIT THE TOP OF THE CARRIAGE BOLT TO SET THE TORQUE WASHER TEETH INTO THE WOOD. HOLD THE CORNER POST STEADY WHILE YOU HAMMER THE CARRIAGE BOLT.

4: FASTEN THE SWING BEAM SIDE RAIL TO THE RIGHT CORNER POSTS WITH 3/8" WASHERS AND 3/8" LOCK NUTS ON THE INSIDE OF THE COUNTERBORED HOLES. PLACE BOLT CAPS OVER ANY EXPOSED THREADS ON THE ENDS OF THE CARRIAGE BOLTS.

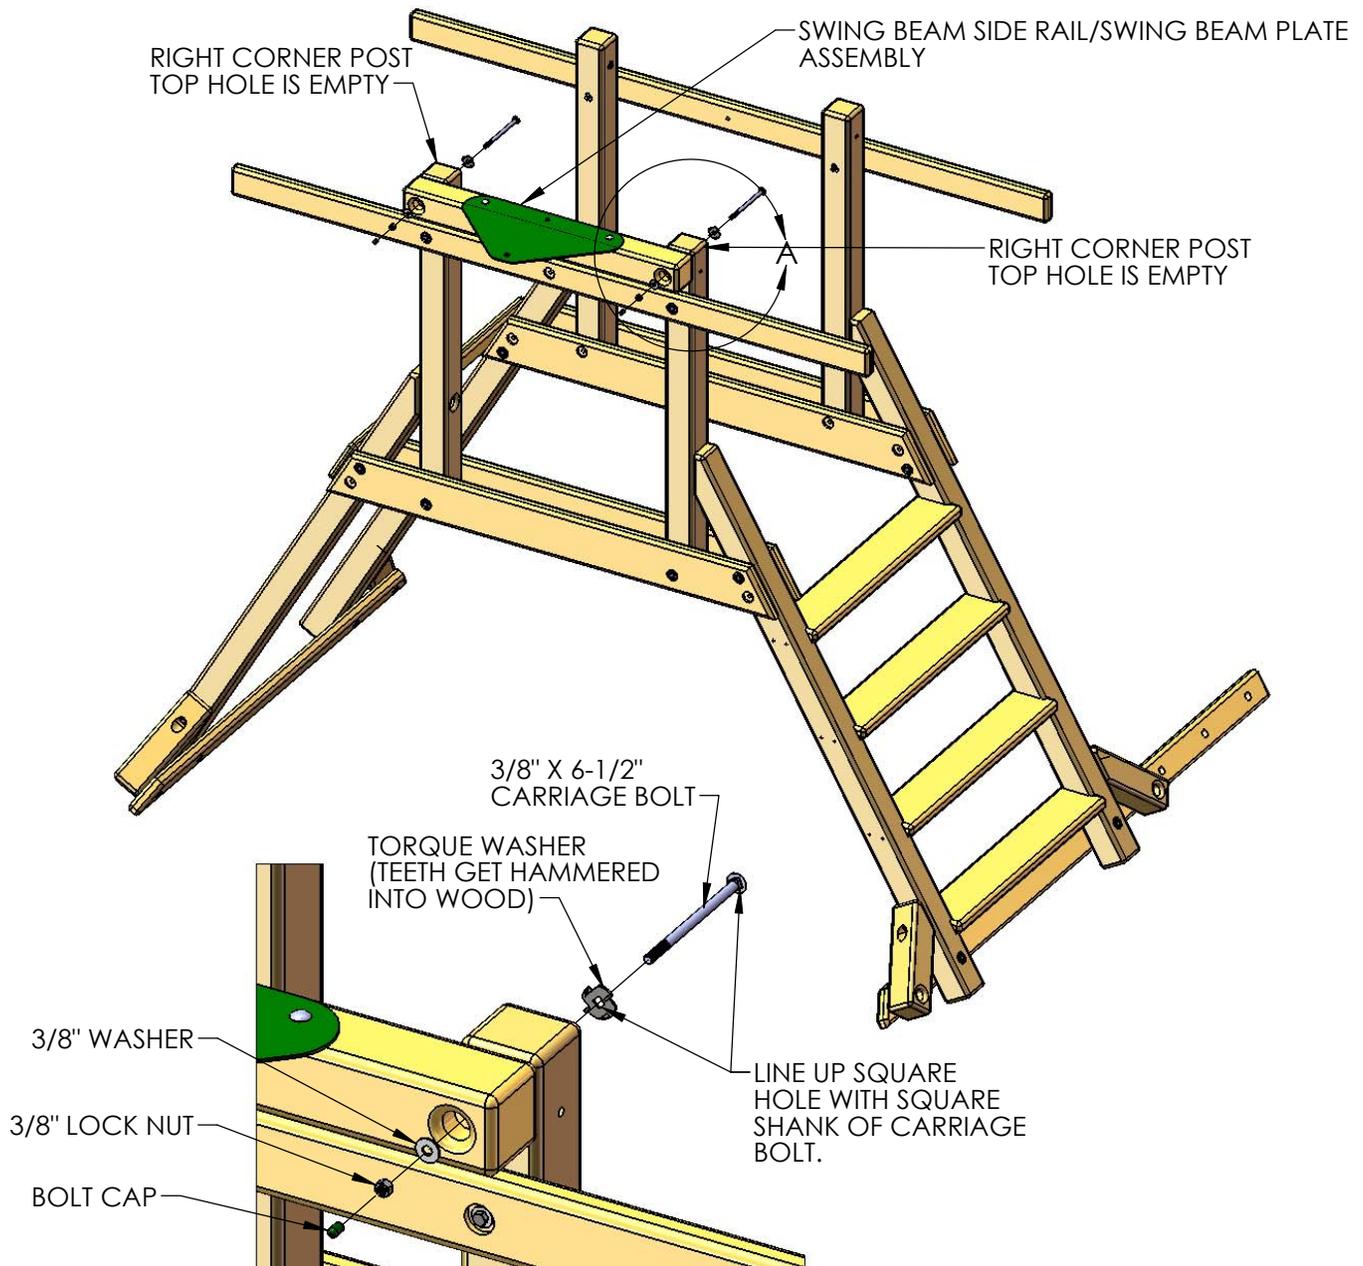

DETAIL A
SCALE 1 : 7

STEP 15: ATTACHING ROPE LADDER SUPPORT AND ROCK WALL ROPE SUPPORT

1: FIND THE 2 X 4 X 70-3/16" ROPE LADDER SUPPORT AND LAY IT ON TOP OF THE SIDE RAILS. THE COUNTERBORED HOLES IN THE ROPE LADDER SUPPORT FACE OUT.


2: LINE UP THE HOLES IN THE ROPE LADDER SUPPORT WITH THE HOLES IN THE CORNER POSTS.

3: ATTACH THE ROPE LADDER SUPPORT TO THE CORNER POSTS WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS.

4: FIND THE 2 X 4 X 36" ROCK WALL ROPE SUPPORT AND LAY IT ON TOP OF THE SIDE RAILS.

5: LINE UP THE HOLES IN THE ROCK WALL ROPE SUPPORT WITH THE HOLES IN THE CORNER POSTS.

6: ATTACH THE ROCK WALL ROPE SUPPORT TO THE CORNER POSTS WITH 5/16" X 4-1/2" HEX BOLTS AND 5/16" WASHERS. THE COUNTERBORED HOLES IN THE ROCK WALL ROPE SUPPORT FACE OUT.

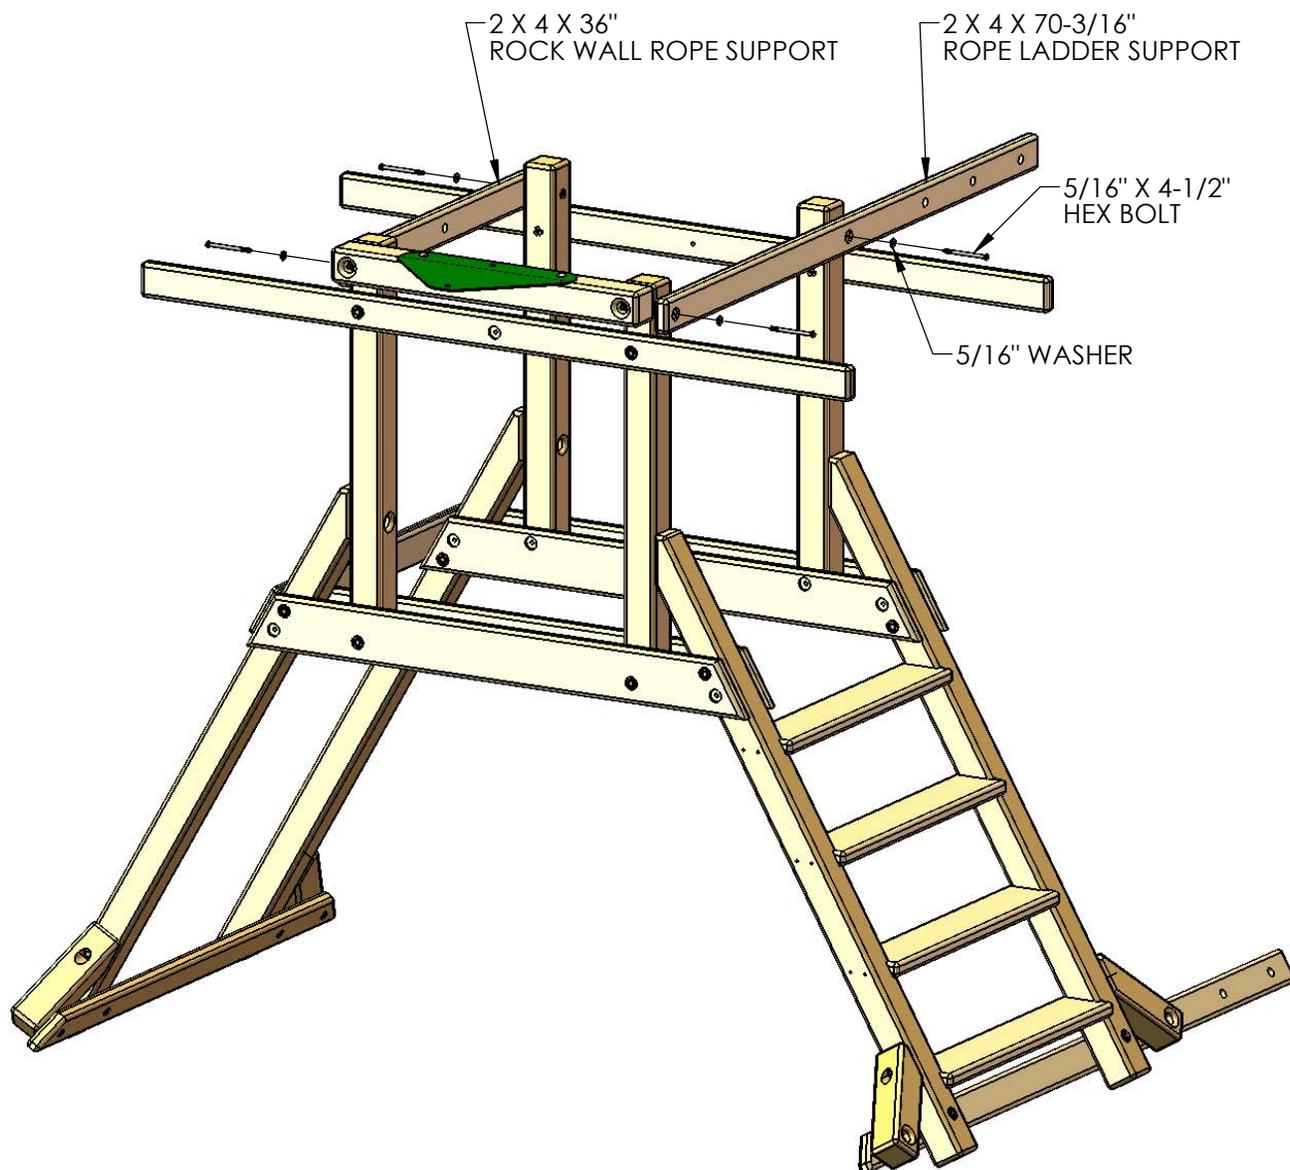

STEP 16: INSTALLING LAG SCREWS

1: MAKE SURE THE UNIT IS LEVEL AND SQUARE.


2: MAKE SURE THE LADDER LEG SIDES AND CORNER POST SIDES ARE FLUSH. INSTALL 3/8" X 5" LAG SCREWS WITH 3/8" WASHERS INTO THE COUNTERBORED HOLES IN THE CORNER POSTS TO CONNECT THE CORNER POSTS TO THE LADDER SIDES.

3: MAKE SURE THE ROCK WALL SIDES AND THE CORNER POST SIDES ARE FLUSH. INSTALL 3/8" X 5" LAG SCREWS WITH 3/8" WASHERS INTO THE COUNTERBORED HOLES IN THE CORNER POSTS TO CONNECT THE CORNER POSTS TO THE ROCK WALL SIDES.

4: FASTEN THE OUTER FORT SUPPORTS TO THE LADDER AND ROCK WALL SIDES WITH 3/8" X 3-1/2" LAG SCREWS AND 3/8" WASHERS.

5: NOW GO BACK AND TIGHTEN ALL THE BOLTS THAT FASTEN THE SIDE RAILS, ROPE LADDER SUPPORT, ROCK WALL ROPE SUPPORT AND SWING BEAM SIDE RAIL TO THE CORNER POSTS.

6: FINALLY INSTALL 3/8" X 3-1/2" LAG SCREWS WITH 3/8" WASHERS INTO THE FOUR HOLES IN EACH INNER FORT SUPPORT. THIS WILL CONNECT THE INNER FORT SUPPORTS TO THE LADDER SIDE, CORNER POSTS AND ROCK WALL SIDE.

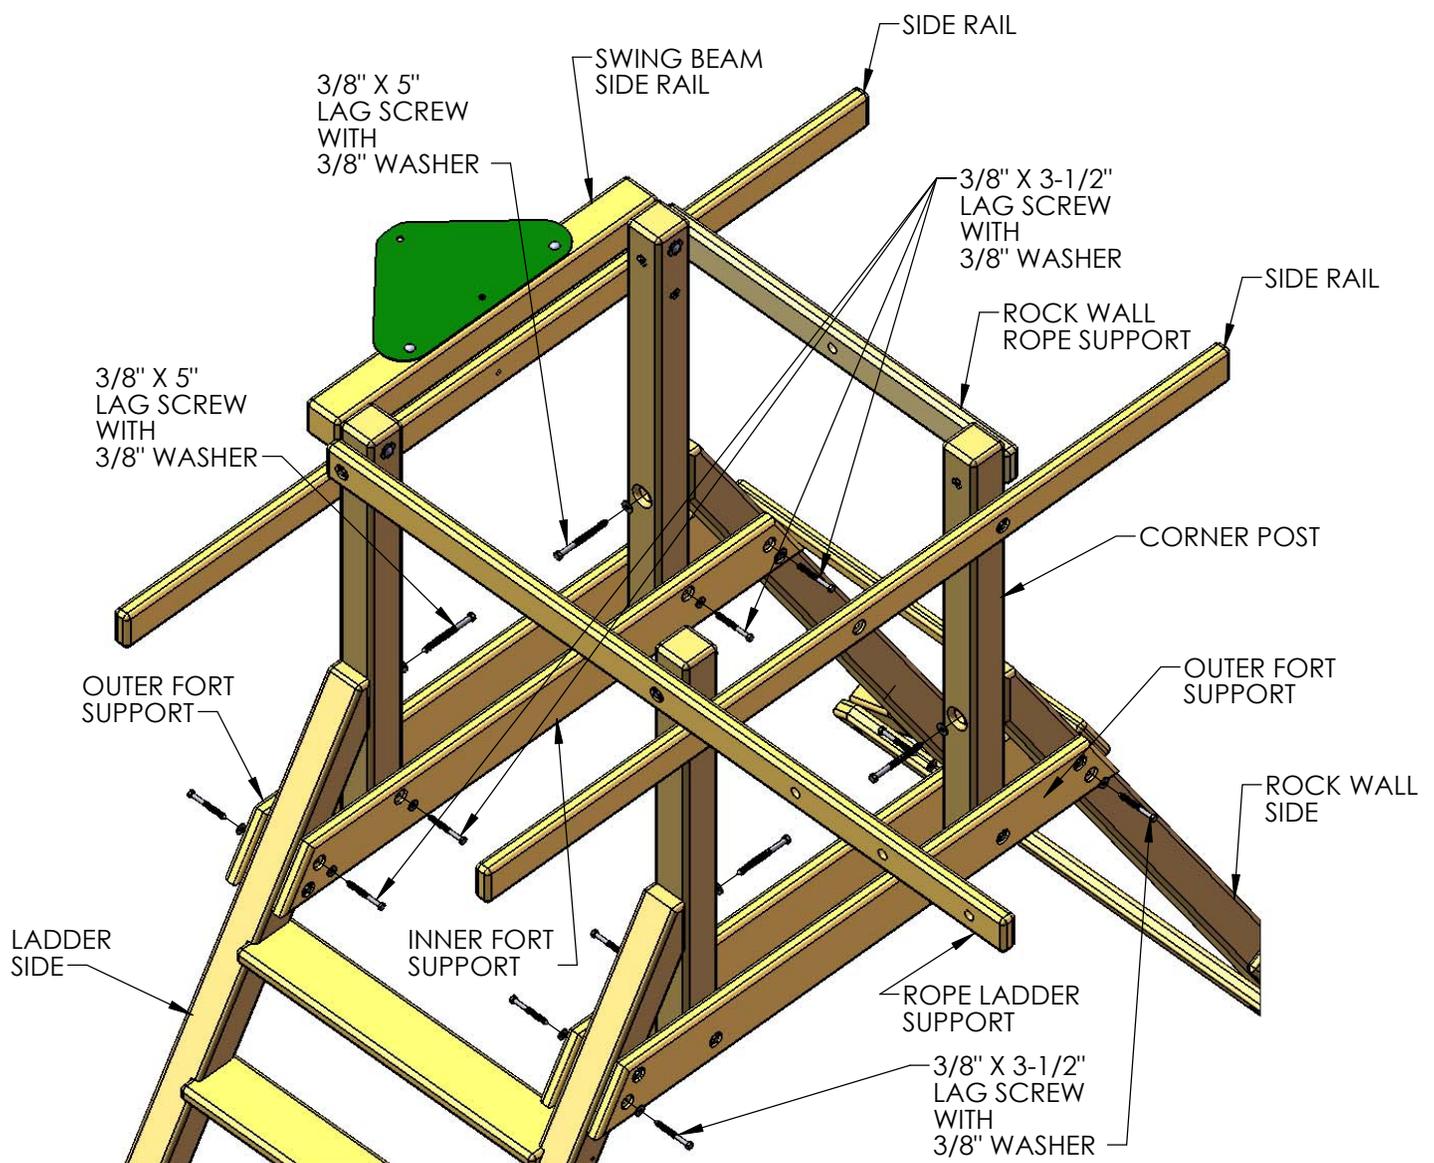


STEP 17: INSTALLING ROCK WALL BOARDS

1: INSTALL THE LOWER SURFACE OF THE BOTTOM ROCK WALL BOARD 2" FROM THE BOTTOM OF THE ROCK WALL SIDES. FASTEN THE BOTTOM ROCK WALL BOARD TO THE ROCK WALL SIDES WITH FOUR #8 X 2" WOOD SCREWS.

2: PLACE SEVEN ROCK WALL BOARDS BETWEEN THE BOTTOM ROCK WALL BOARD AND THE TOP ROCK WALL BOARD THAT IS ALREADY INSTALLED. EQUALLY SPACE THE ROCK WALL BOARDS. THERE WILL BE A 1/16" TO 3/16" GAP BETWEEN BOARDS DEPENDING UPON MILLING VARIATIONS.

3: ATTACH EACH ROCK WALL BOARD TO THE ROCK WALL SIDES WITH FOUR #8 X 2" WOOD SCREWS.

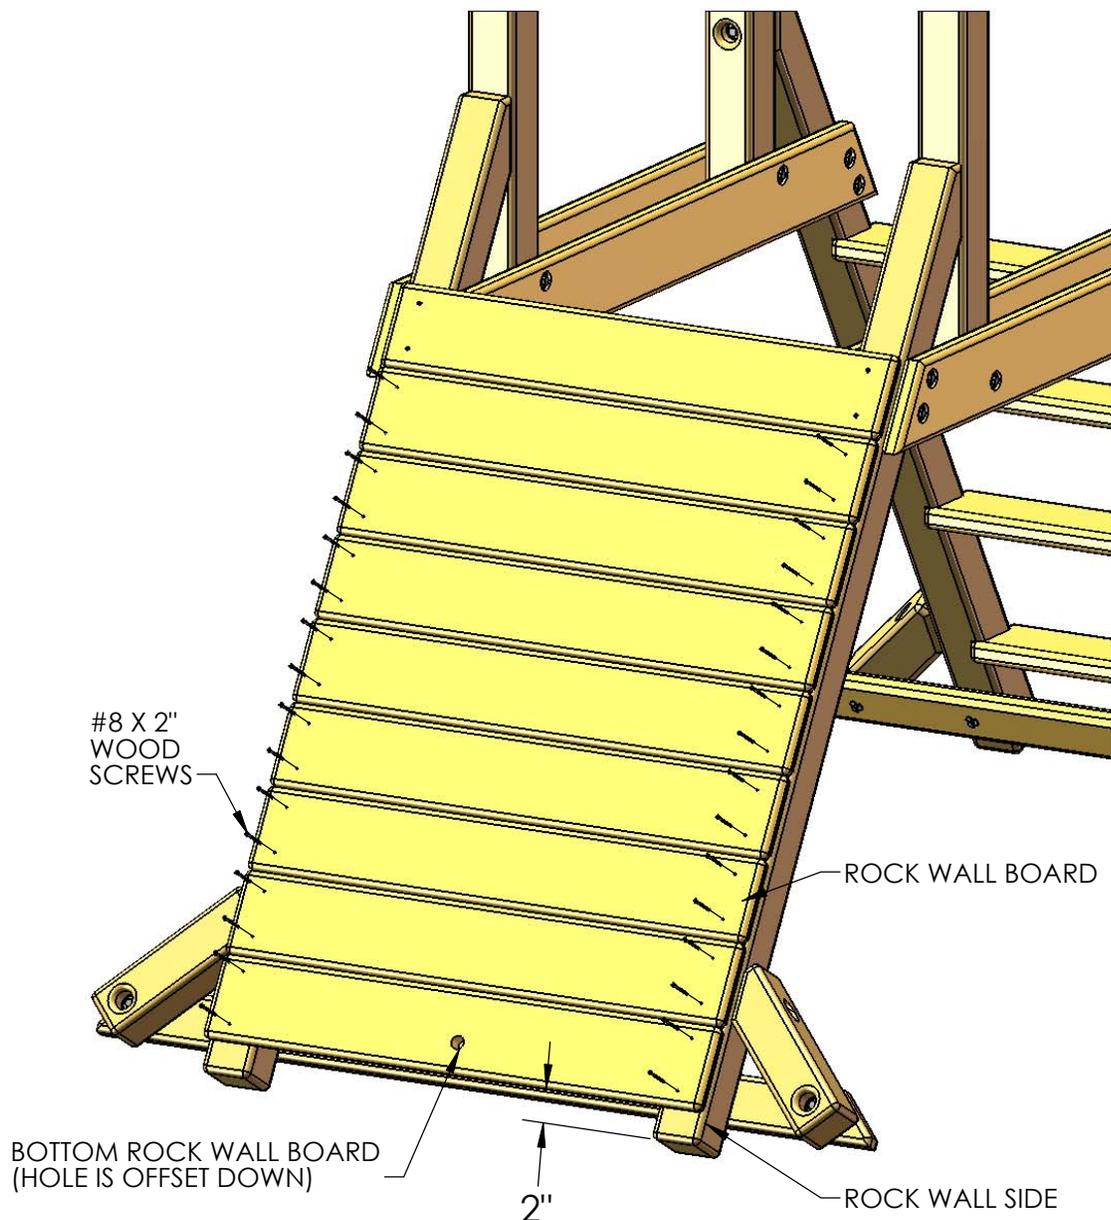


STEP 18: INSTALLING TARP BOARDS

1: LOCATE TWO 2 X 4 X 38-3/4" TARP BOARDS.


2: PLACE A TARP BOARD AT THE END OF THE SIDE RAILS. THE TARP BOARD TOP SHOULD BE FLUSH TO THE TOP OF THE SIDE RAILS. THE TARP BOARD ENDS SHOULD BE FLUSH TO THE OUTSIDE OF THE SIDE RAILS.

3: FASTEN EACH TARP BOARD TO THE SIDE RAILS WITH FOUR #8 X 2-1/2" WOOD SCREWS.

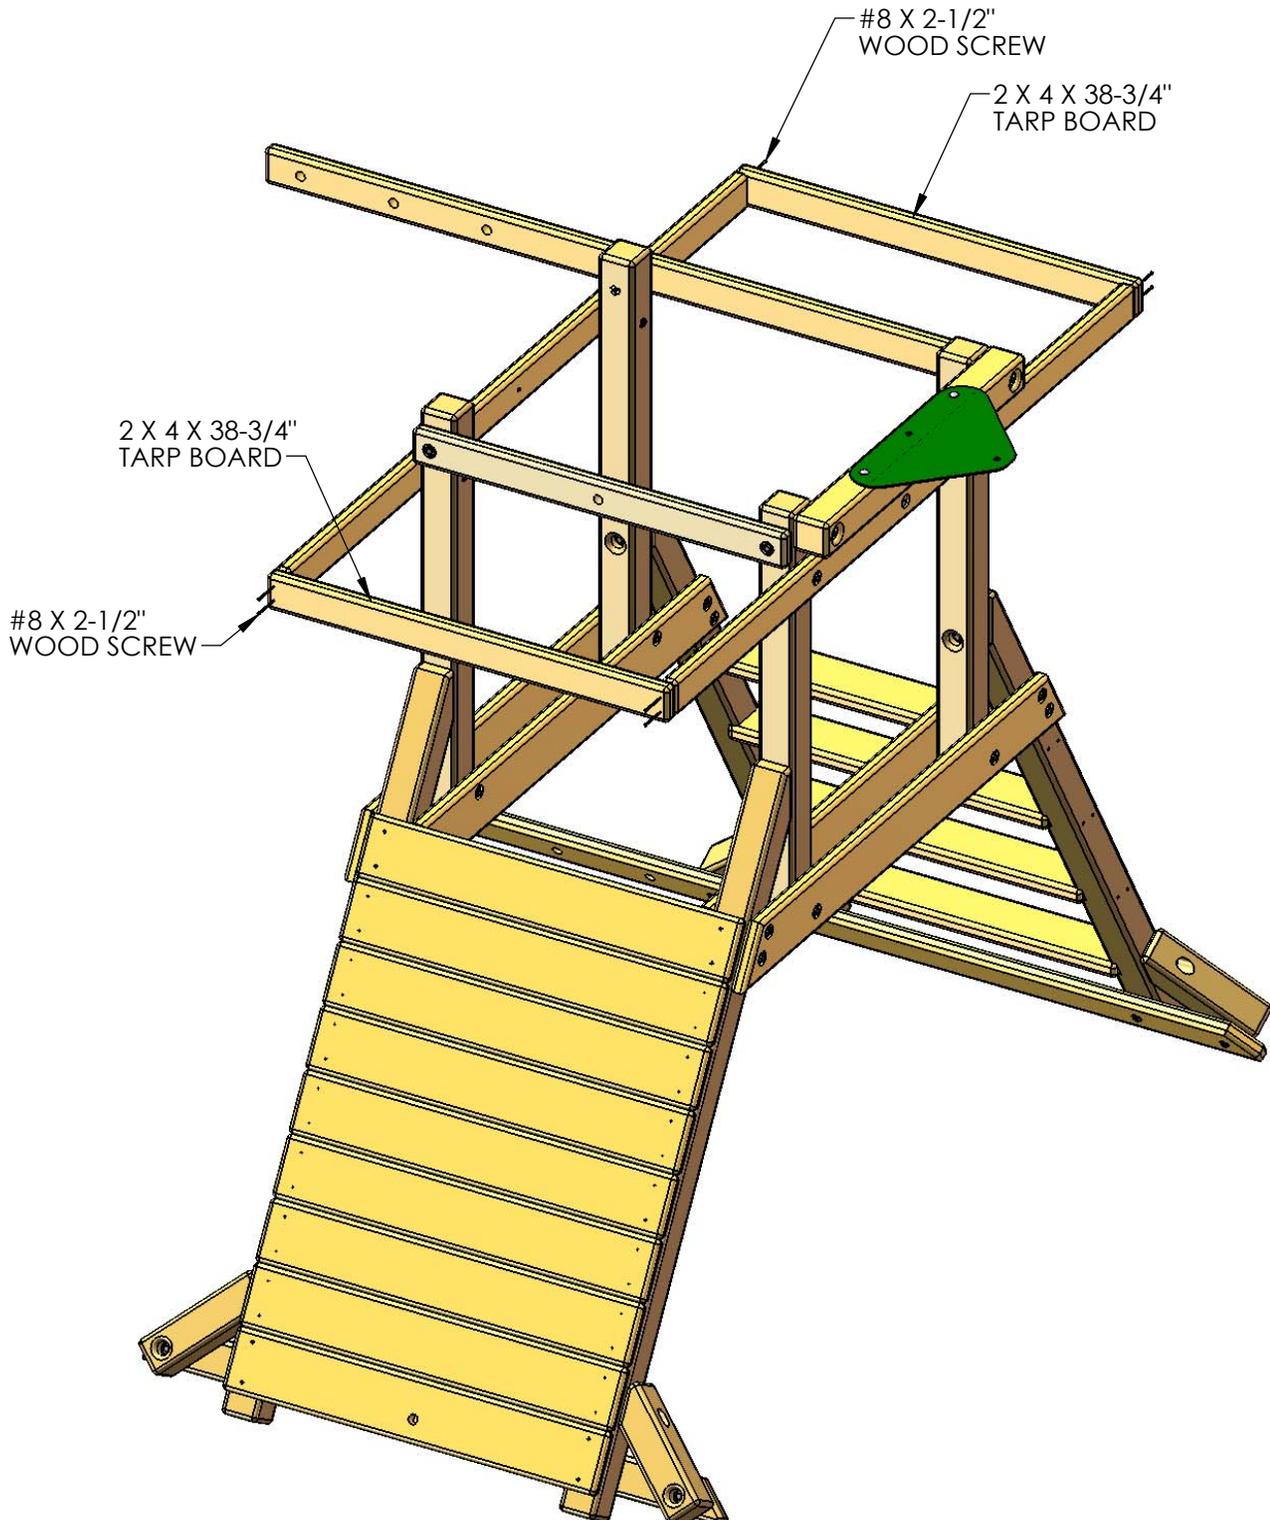

STEP 19: DECK

- 1: LOCATE FOUR 5/4 X 6 X 38-3/4" DECK BOARDS, FOUR 5/4 X 6 X 29-1/4" DECK SPACERS AND ONE 5/4 X 4 X 38-3/4" CENTER DECK BOARD.
- 2: LAY OUT THE DECK BOARDS ACROSS THE INNER AND OUTER FORT SUPPORTS AS SHOWN BELOW. THE DECK SPACERS ON THE OUTSIDE SHOULD BE EVEN WITH THE TOP OF THE ANGLE CUT ON THE INNER FORT SUPPORTS.
- 3: SPACE THE DECK BOARDS AND DECK SPACERS EVENLY ACROSS THE INNER/OUTER FORT SUPPORTS. THERE SHOULD BE APPROXIMATELY A 1/8" GAP BETWEEN BOARDS. THIS GAP MAY VARY DUE TO MILLING VARIATIONS.
- 4: ATTACH EACH DECK BOARD AND EACH DECK SPACER TO THE INNER FORT SUPPORTS WITH FOUR #8 X 2" WOOD SCREWS.

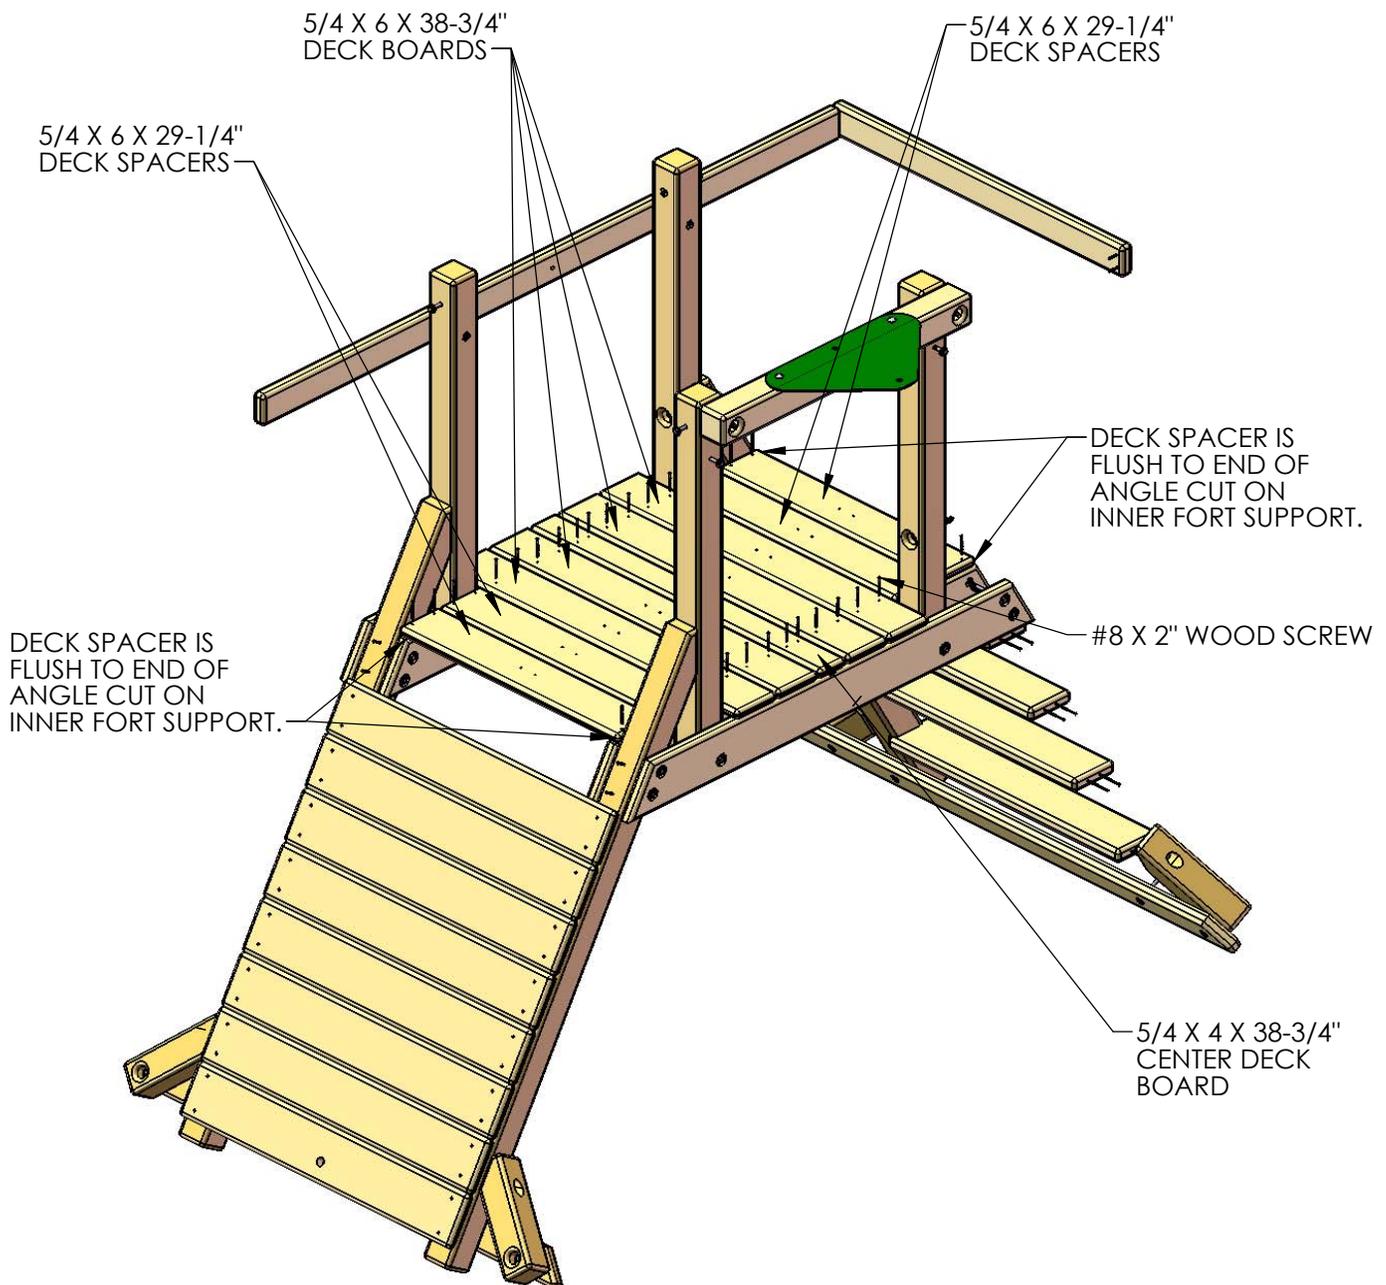


STEP 20: REAR BOTTOM PANEL BOARD

1: LOCATE THE 2 X 4 X 33" REAR BOTTOM PANEL BOARD.

2: PLACE THE REAR BOTTOM PANEL BOARD ON TOP OF THE DECK BOARDS AGAINST THE OUTSIDE OF THE RIGHT CORNER POSTS. THE COUNTERBORED HOLES IN THE REAR BOTTOM PANEL BOARD FACE OUT.

3: ATTACH THE REAR BOTTOM PANEL BOARD TO THE CORNER POSTS WITH TWO 3/8" X 3-1/2" LAG SCREWS AND TWO 3/8" WASHERS.

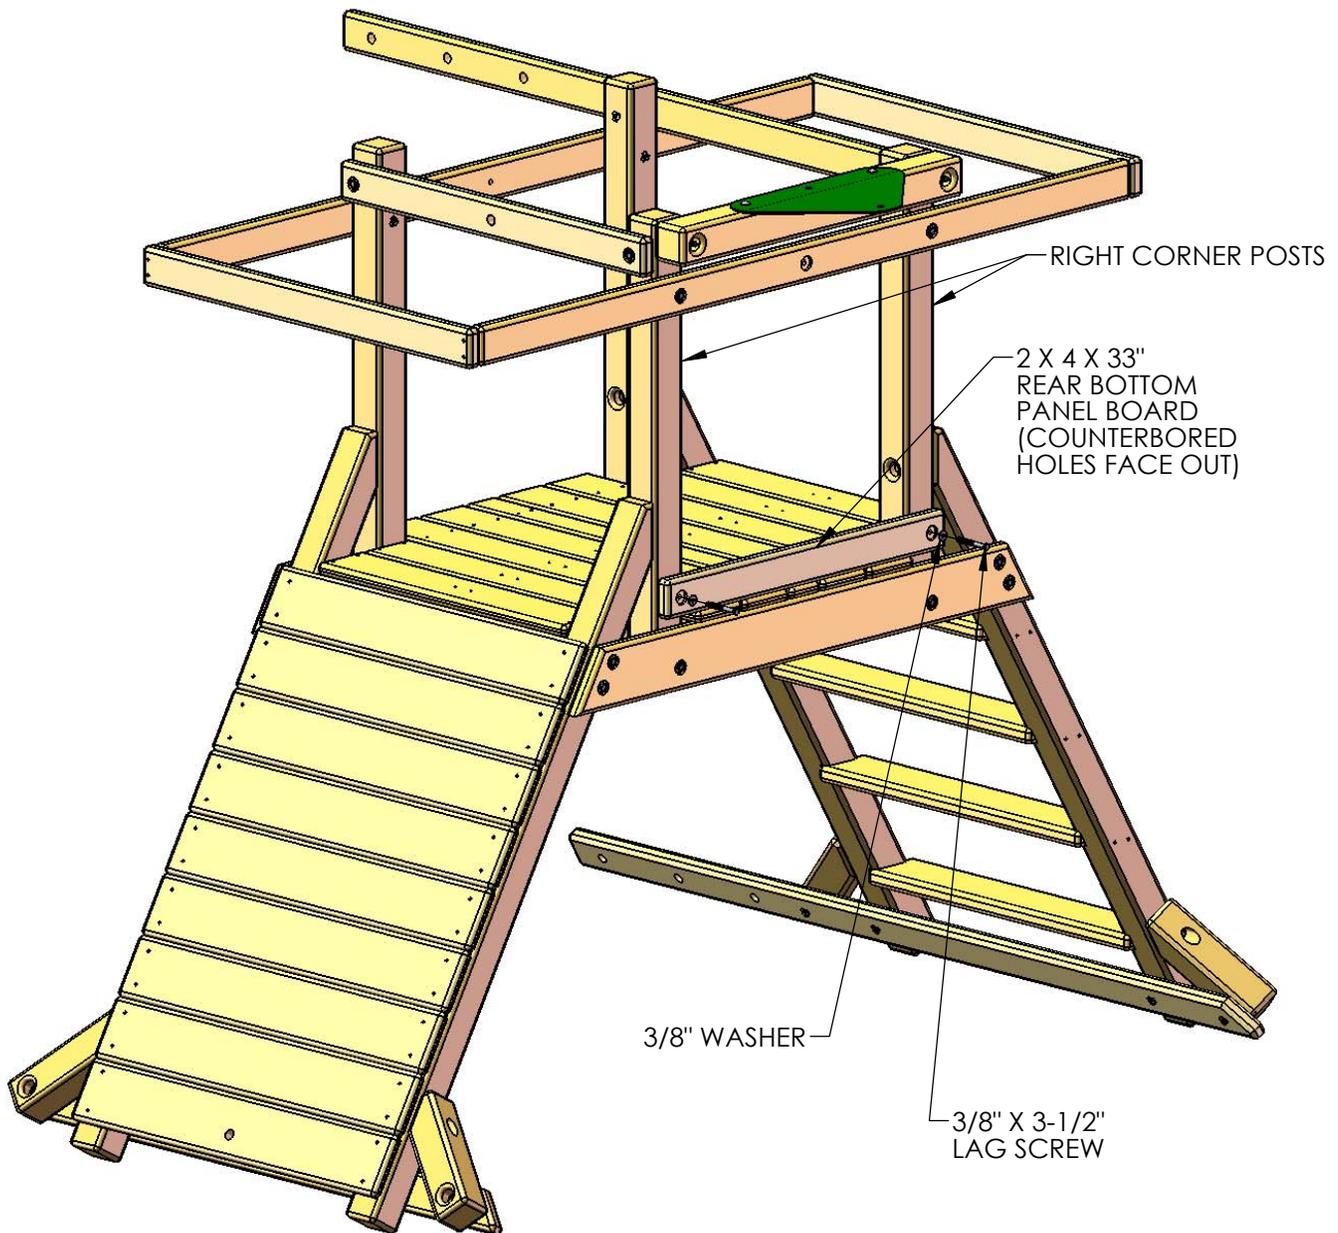


STEP 21: CENTER POSTS

1: LOCATE THE 2 X 4 X 34" FRONT CENTER POST AND THE 2 X 4 X 60" REAR CENTER POST.

2: (SEE DETAIL A) INSTALL A T-NUT INTO THE HOLE IN THE FRONT CENTER POST. LINE UP THE HOLE IN THE FRONT CENTER POST WITH THE HOLE IN THE SIDE RAIL. ATTACH THE FRONT CENTER POST TO THE SIDE RAIL WITH A 5/16" X 2-1/2" HEX BOLT AND A 5/16" WASHER. SQUARE THE FRONT CENTER POST TO THE SIDE RAIL AND INSTALL TWO #8 X 2-1/2" WOOD SCREWS INTO THE PREDRILLED HOLES.

3: (SEE DETAIL B) INSTALL A T-NUT INTO THE HOLE IN THE REAR CENTER POST. LINE UP THE HOLE IN THE REAR CENTER POST WITH THE HOLE IN THE SIDE RAIL. ATTACH THE REAR CENTER POST TO THE SIDE RAIL WITH A 5/16" X 2-1/2" HEX BOLT AND A 5/16" WASHER. SQUARE THE REAR CENTER POST TO THE SIDE RAIL. INSTALL TWO #8 X 2-1/2" WOOD SCREWS INTO THE PREDRILLED HOLES AT THE BOTTOM OF THE REAR CENTER POST.

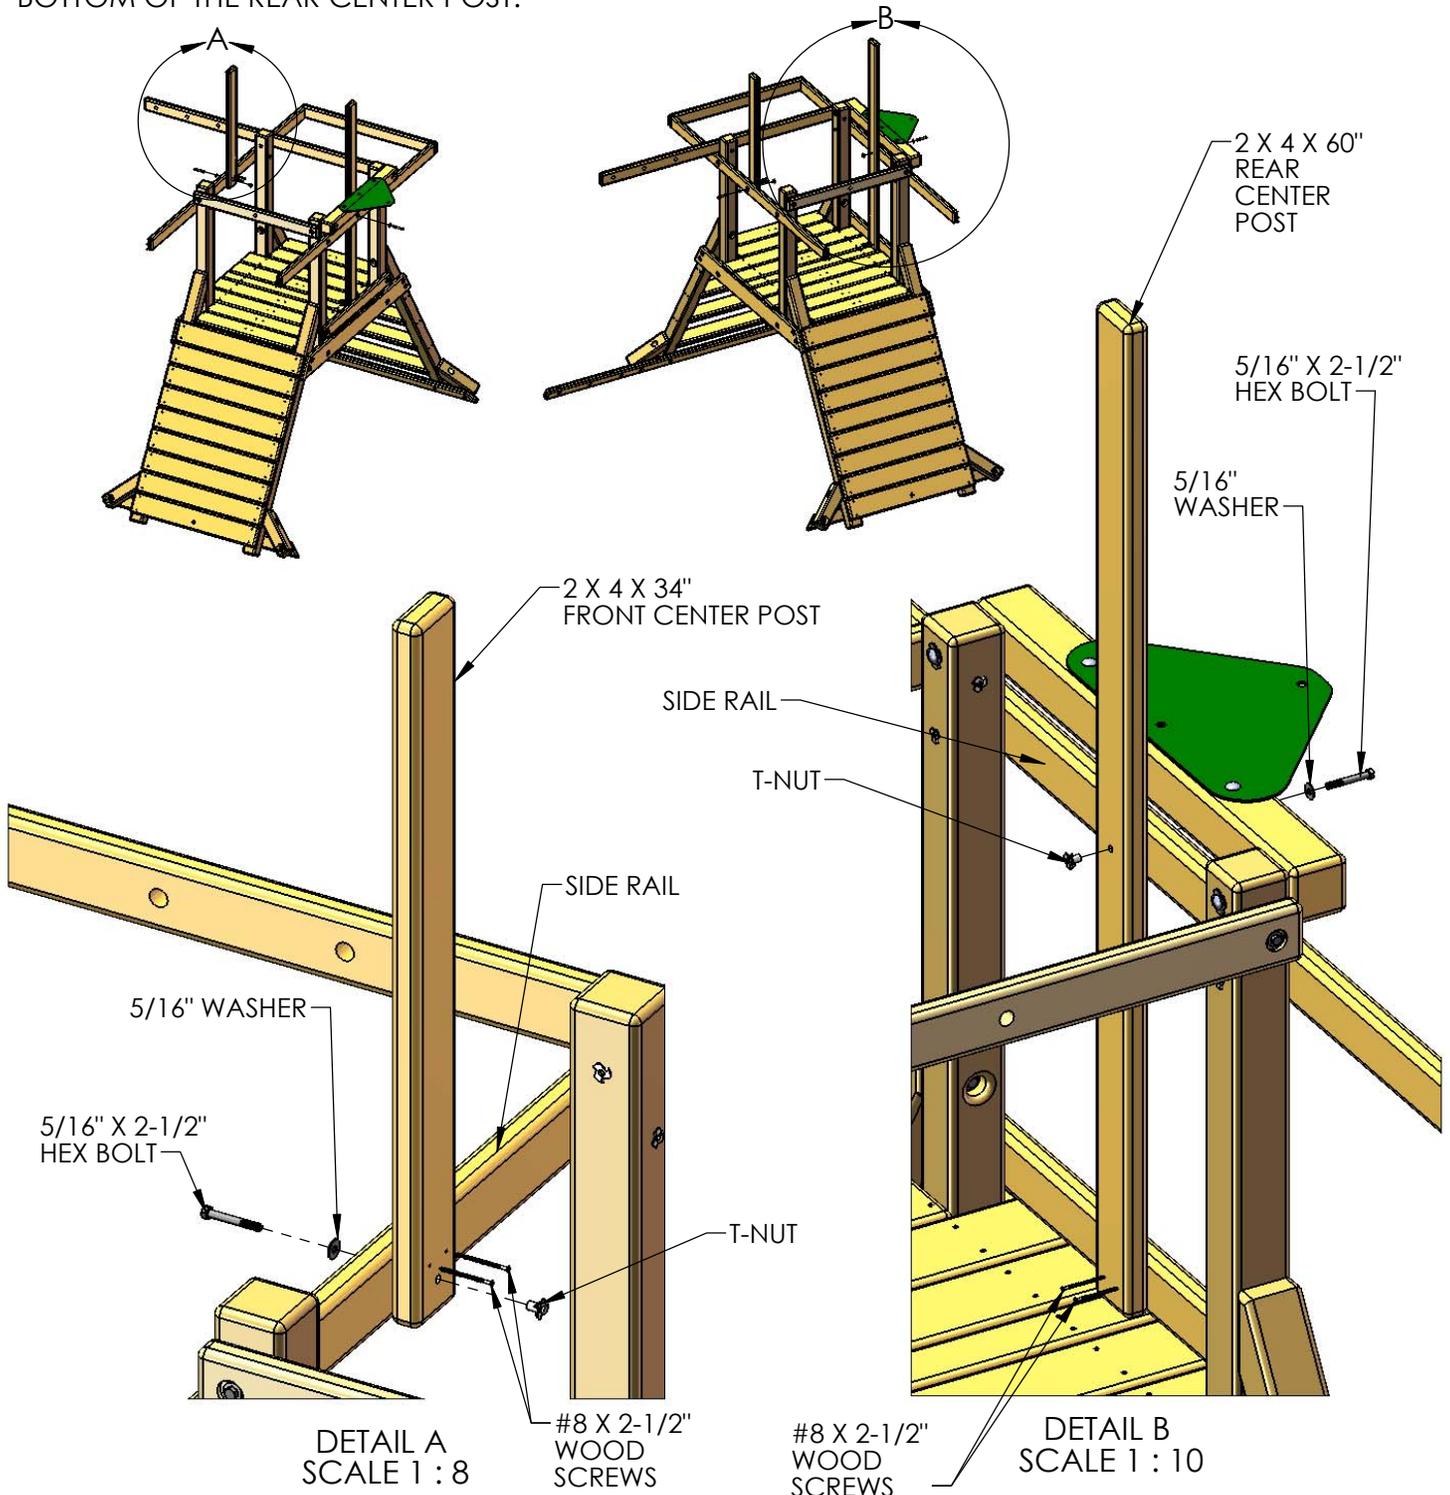


STEP 22: CENTER TARP BOARD

1: LOCATE THE 2 X 4 X 36" CENTER TARP BOARD.

2: PLACE THE CENTER TARP BOARD ON TOP OF THE FRONT CENTER POST AND REAR CENTER POST. THE ENDS OF THE CENTER TARP BOARD SHOULD BE FLUSH TO THE SIDES OF THE FRONT AND REAR CENTER POSTS.

3: ATTACH THE CENTER TARP BOARD TO THE CENTER POSTS WITH FOUR #8 X 2-1/2" WOOD SCREWS.


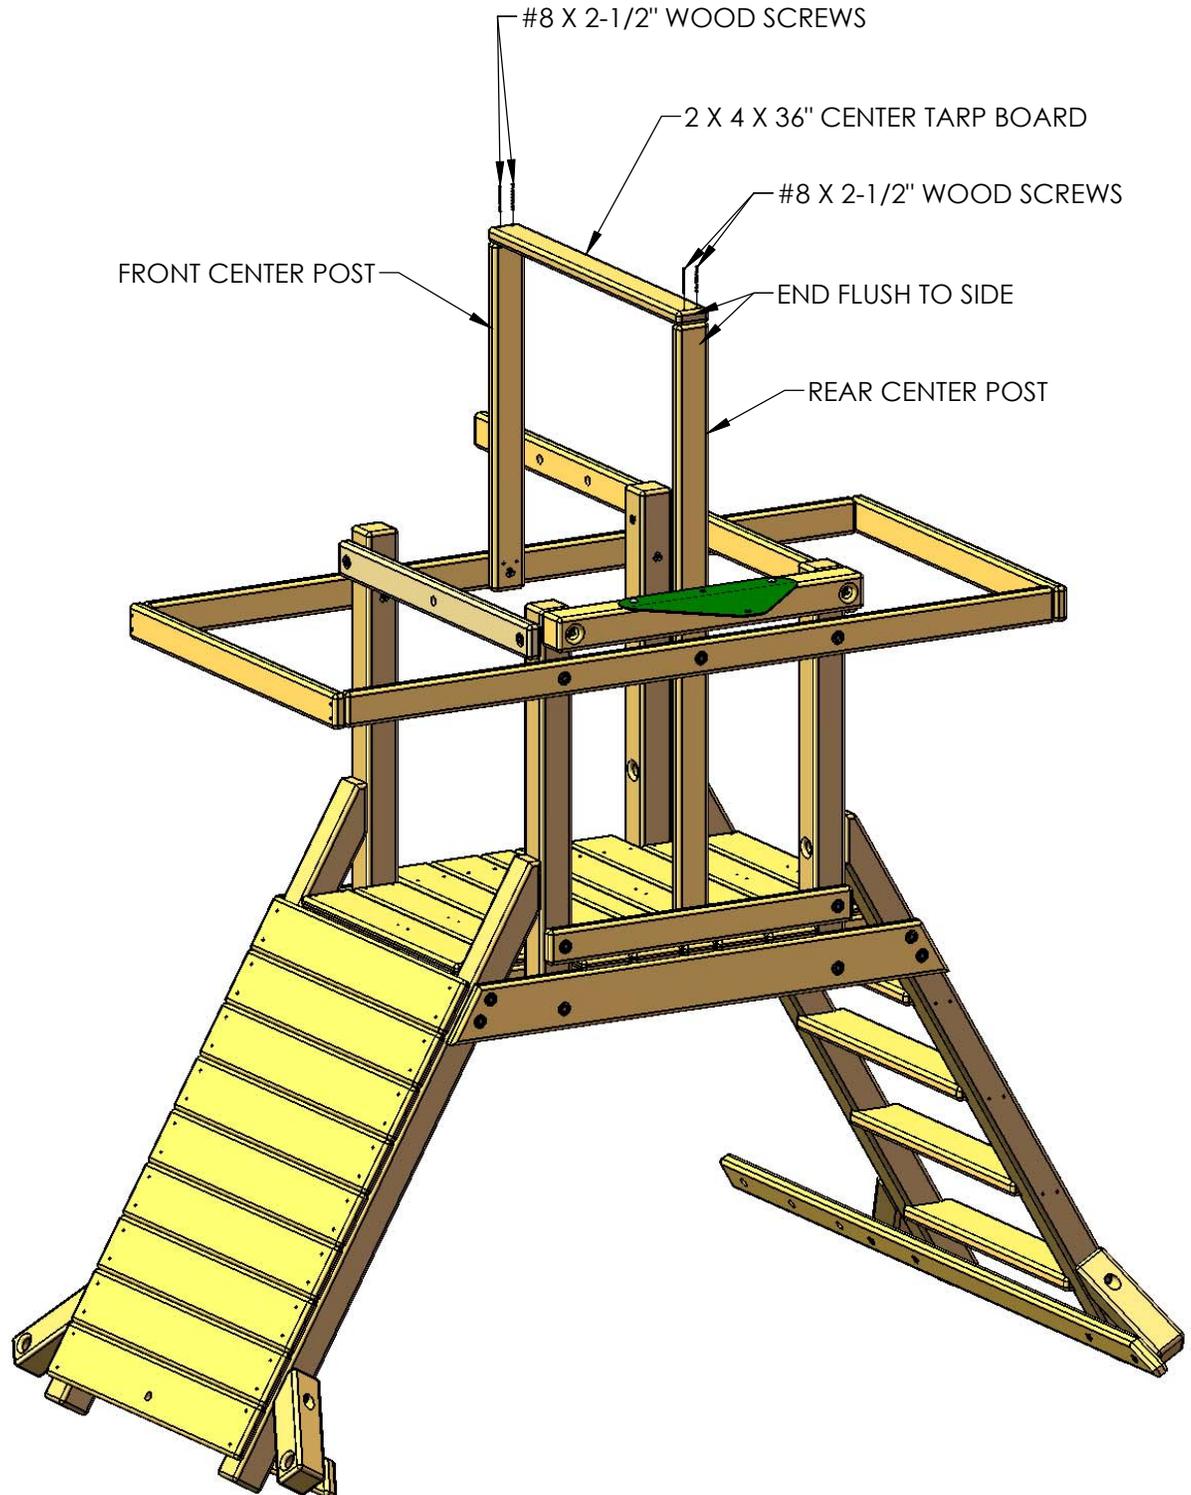


STEP 23: PANEL SLATS

1: LOCATE FOUR 2 X 3 X 28-1/2" PANEL SLATS.

2: SPACE THE PANEL SLATS AT THE DIMENSIONS SHOWN BELOW AGAINST THE SIDE RAIL AND THE REAR BOTTOM PANEL BOARD. THE BOTTOM END OF EACH PANEL SLAT SHOULD REST ON TOP OF THE DECK BOARDS.

3: ATTACH EACH PANEL SLAT TO THE SIDE RAIL AND REAR BOTTOM PANEL BOARD WITH TWO #8 X 2-1/2" WOOD SCREWS.

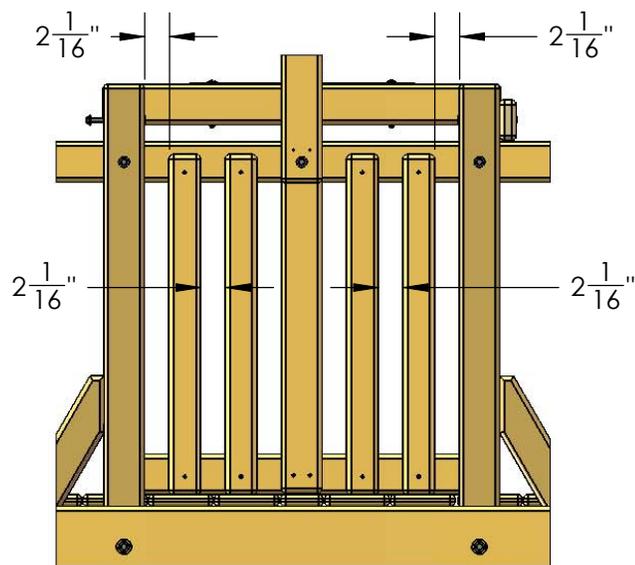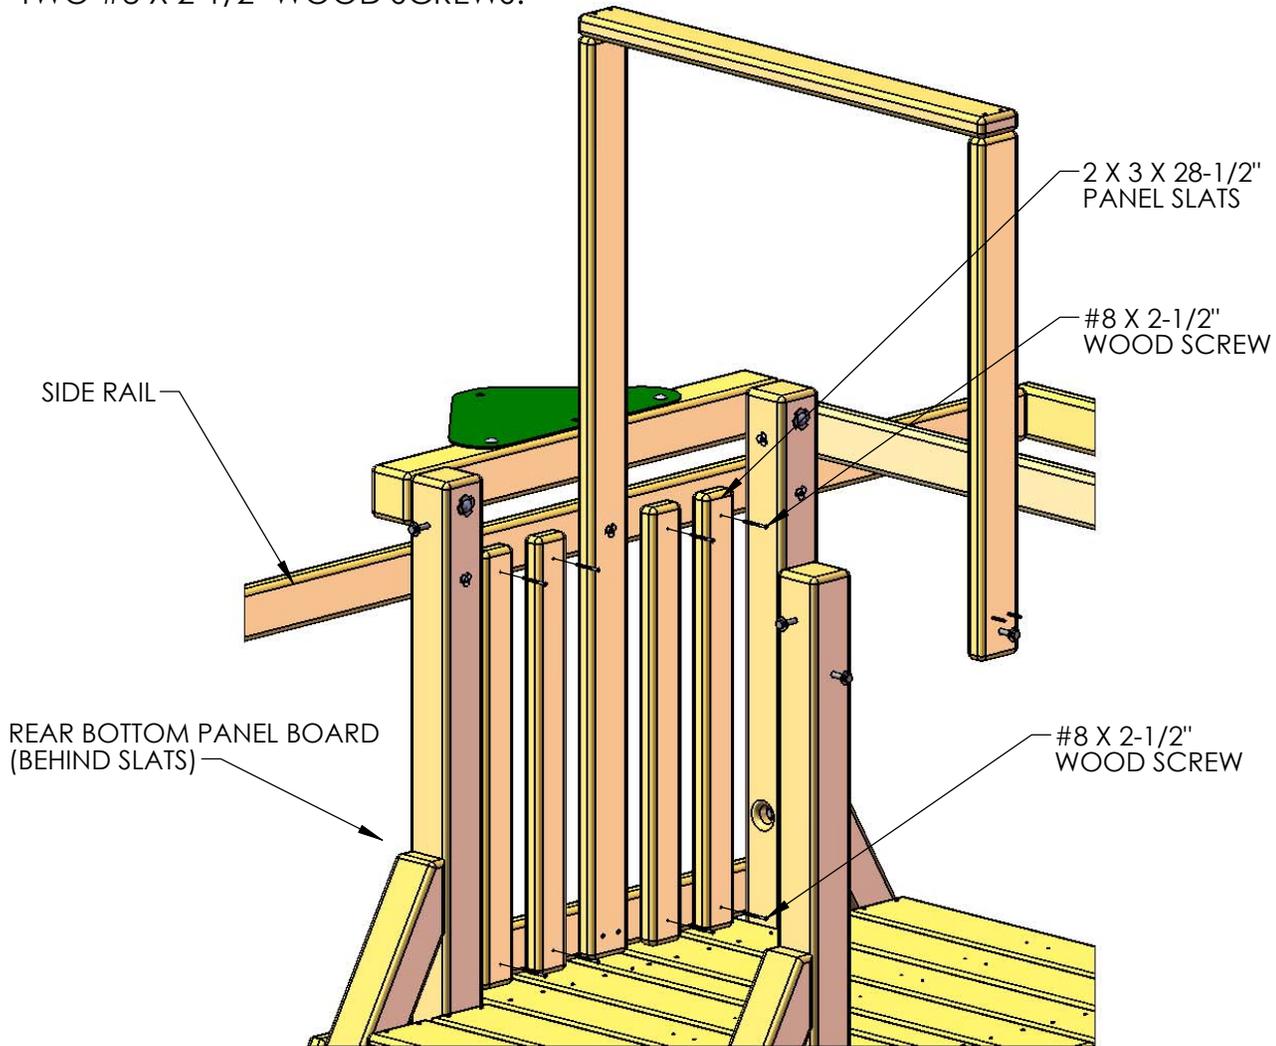

STEP 24: CENTER DECK SUPPORT

1: LOCATE THE 2 X 4 X 47" CENTER DECK SUPPORT.

2: YOU ARE GOING TO USE THE CENTER DECK SUPPORT HOLES AS A TEMPLATE IN THIS STEP TO DRILL HOLES THROUGH TWO DECK BOARDS.


3: PLACE THE 2 X 4 X 47" CENTER DECK SUPPORT CENTERED BETWEEN THE CORNER POSTS ON TOP OF THE DECK BOARDS. THE MIDDLE HOLE SHOULD BE CENTERED OVER THE CENTER DECK BOARD. THE OTHER HOLE SHOULD LIE OVER THE TOP OF THE DECK BOARD THAT IS TOWARDS THE ROCK WALL.

4: HOLD THE CENTER DECK SUPPORT DOWN WITH YOUR KNEE OR HAVE AN ASSISTANT HOLD THE BOARD AGAINST THE DECK WHILE YOU DRILL HOLES.

5: DRILL THE CENTER HOLE FIRST WITH A 3/8" DIAMETER DRILL BIT THROUGH THE CENTER DECK BOARD. PLACE A 3/8" X 3-1/2" CARRIAGE BOLT INTO THE HOLE.

6: DRILL THE OTHER HOLE SECOND WITH A 3/8" DIAMETER DRILL BIT THROUGH THE HOLE TOWARDS THE ROCK WALL.

7: REMOVE THE CENTER DECK SUPPORT AND THE CARRIAGE BOLT FROM THE DECK BOARDS.

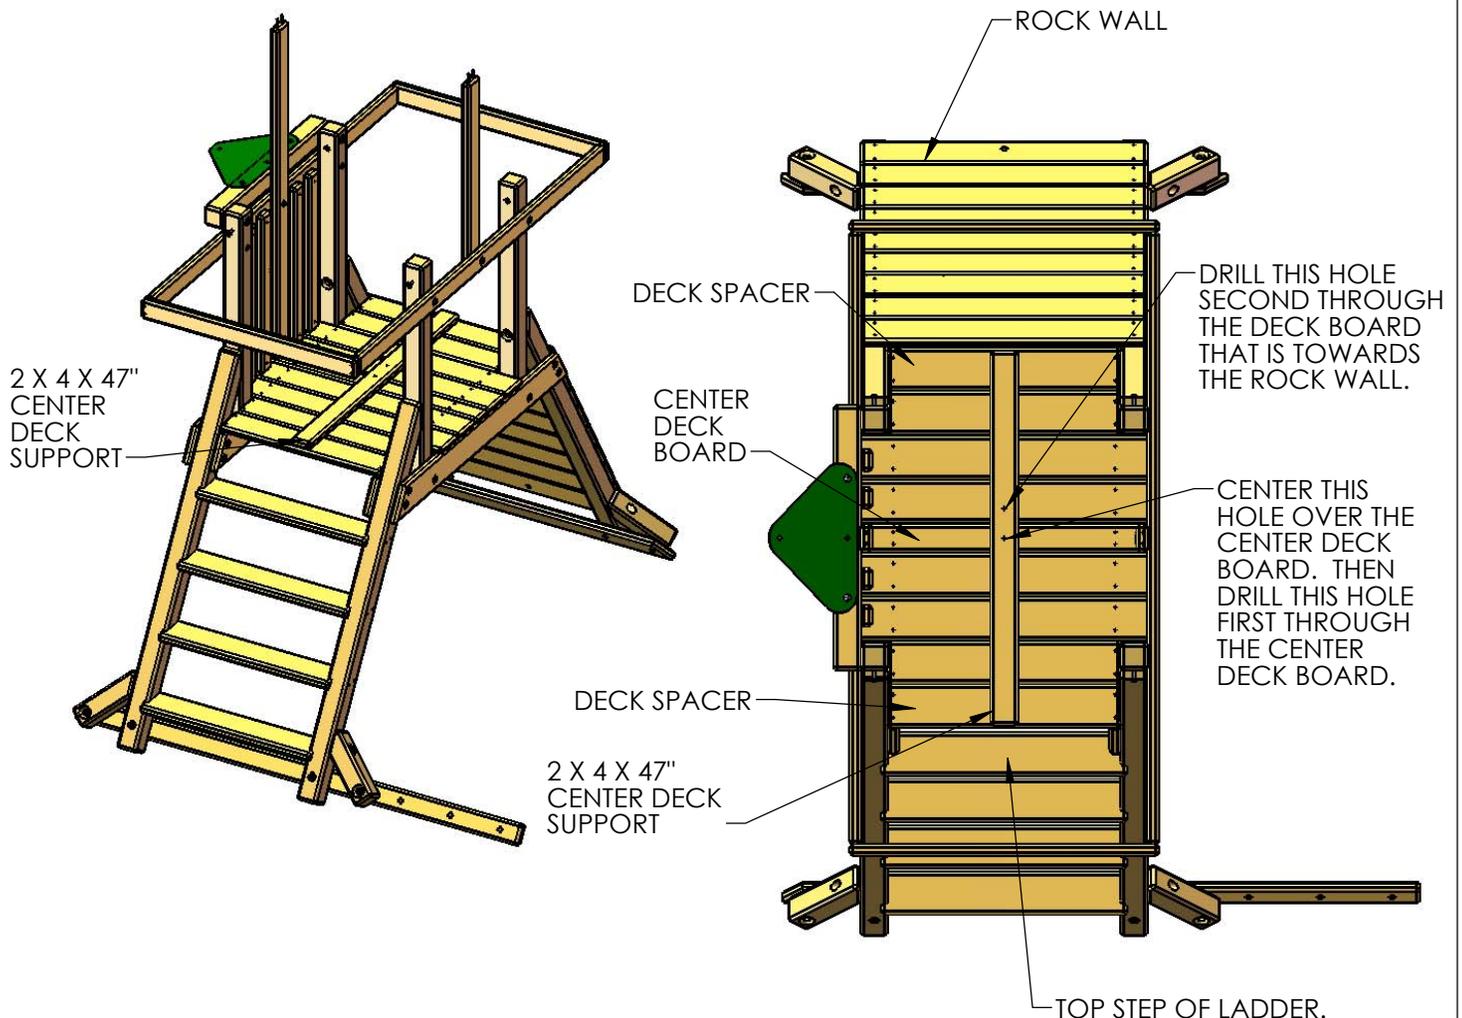



THIS IS THE TOP VIEW LOOKING DOWN OVER THE DECK.

STEP 25: CENTER DECK SUPPORT AND HANGER

1: PLACE A 3/8" X 3-1/2" CARRIAGE BOLT THROUGH A TORQUE WASHER. PLACE THE CARRIAGE BOLT INTO A 3/8" HOLE IN THE TOP OF THE DECK. HAMMER THE CARRIAGE BOLT HEAD TO SET THE TORQUE WASHER TEETH INTO THE DECK BOARDS. REPEAT THIS PROCESS FOR THE OTHER HOLE YOU DRILLED IN THE DECK.

2: LINE UP THE HOLES IN THE CENTER DECK SUPPORT WITH THE CARRIAGE BOLTS UNDER THE DECK. PLACE THE IRON DUCTILE SWING HANGER OVER THE END OF THE CARRIAGE BOLTS. SECURE THE SWING HANGER TO THE CARRIAGE BOLTS WITH 3/8" LOCK NUTS AND 3/8" WASHERS. PLACE BOLT CAPS OVER ANY EXPOSED THREADS.

3: GO TO THE TOP OF THE DECK AND SECURE EACH DECK BOARD WITH PREDRILLED HOLES TO THE CENTER DECK SUPPORT WITH TWO #8 X 2" WOOD SCREWS.

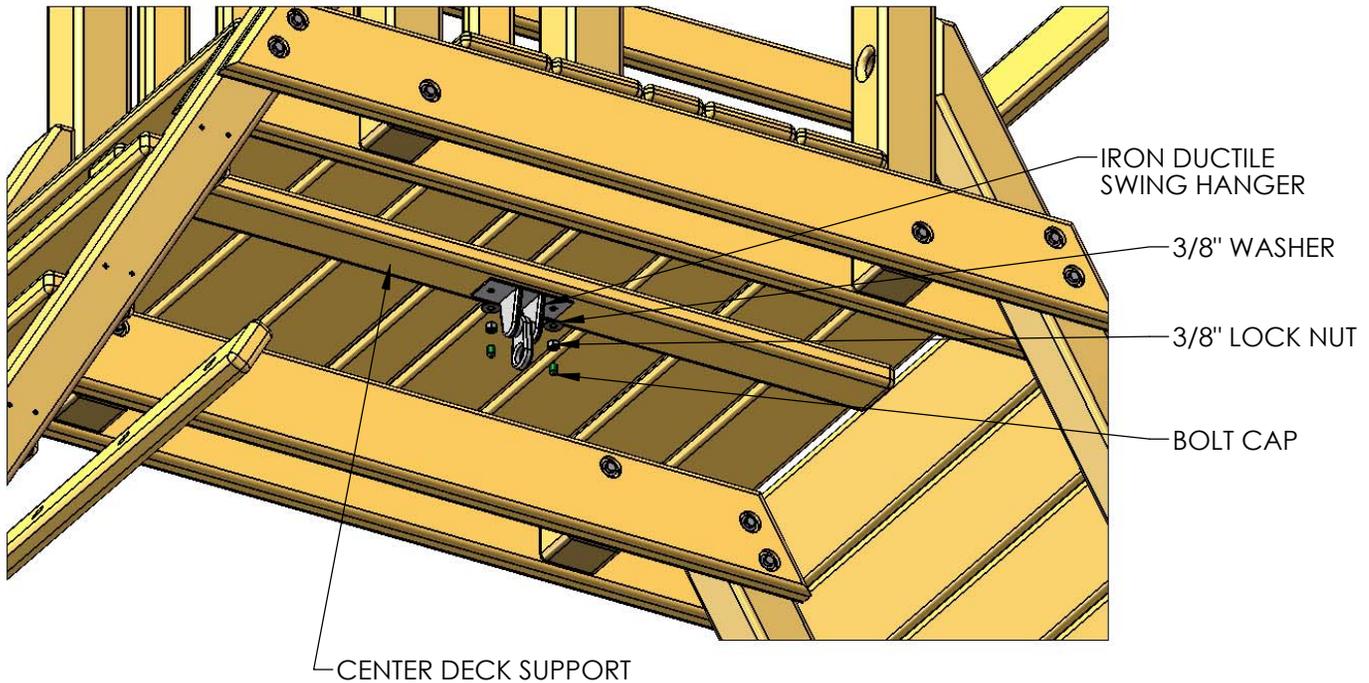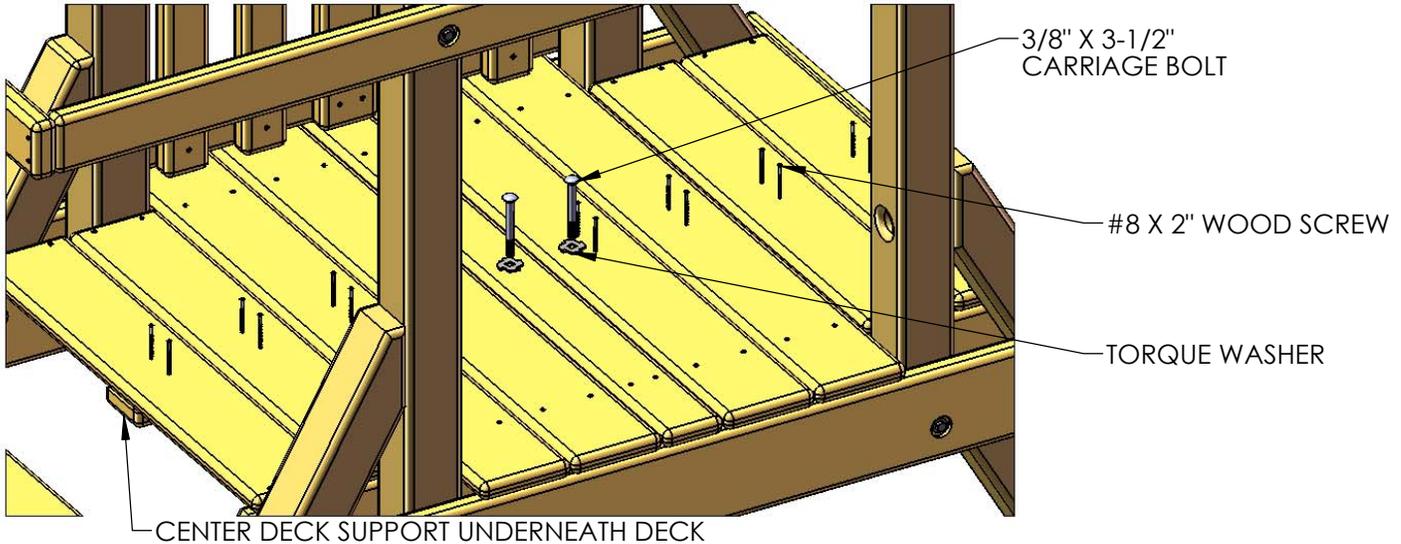


STEP 26: IRON DUCTILE SWING HANGERS

1: SIGHT DOWN THE LENGTH OF YOUR 4 X 6 X 108" SWING BEAM. IF THE TOP SURFACE OF THE BEAM IS BOWED DOWN THEN TURN IT OVER SO THE BOW IS UP.

2: PLACE 3/8" X 6-1/2" CARRIAGE BOLTS WITH TORQUE WASHERS INTO THE HOLES SHOWN BELOW TO ATTACH THE IRON DUCTILE SWING HANGERS. USE A HAMMER TO SET THE TEETH OF EACH TORQUE WASHER INTO THE TOP OF THE SWING BEAM.

3: PLACE AN IRON DUCTILE SWING HANGER OVER THE ENDS OF THE CARRIAGE BOLTS. FASTEN THE SWING HANGER TO THE SWING BEAM WITH 3/8" LOCK NUTS AND 3/8" WASHERS. PLACE BOLT CAPS OVER ANY EXPOSED THREADS. REPEAT THIS PROCESS FOR THE REMAINING FIVE SWING HANGERS.

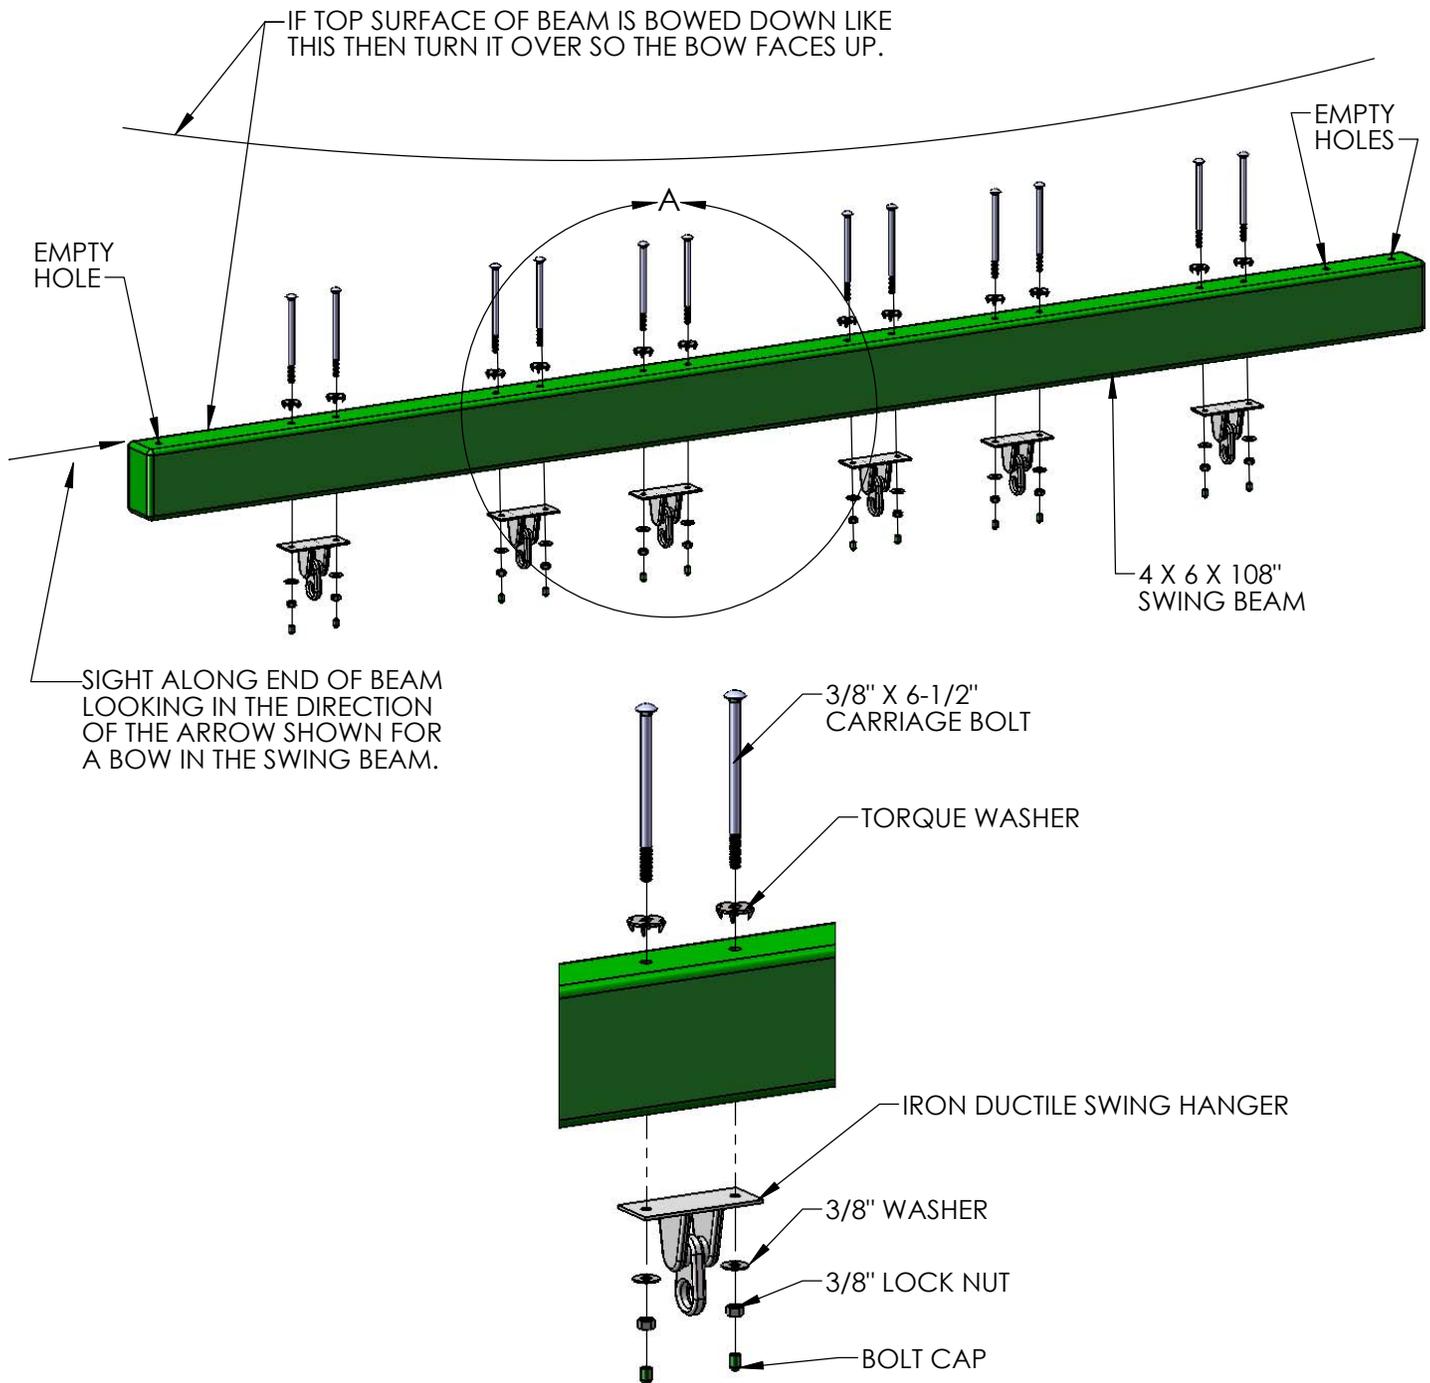


DETAIL A
SCALE 1 : 7

STEP 27: ATTACH SWING LEGS TO BRACKET

1: PLACE EACH SWING LEG INSIDE THE ANGLED PART OF THE SWING LEG BRACKET AS SHOWN BELOW. THE TOP OF THE SWING LEG SHOULD BE FLUSH TO THE TOP EDGE OF THE BRACKET AS SHOWN BELOW.

2: ATTACH EACH SWING LEG TO THE SWING LEG BRACKET WITH FOUR 3/8" X 3-1/2" LAG SCREWS AND 3/8" WASHERS.

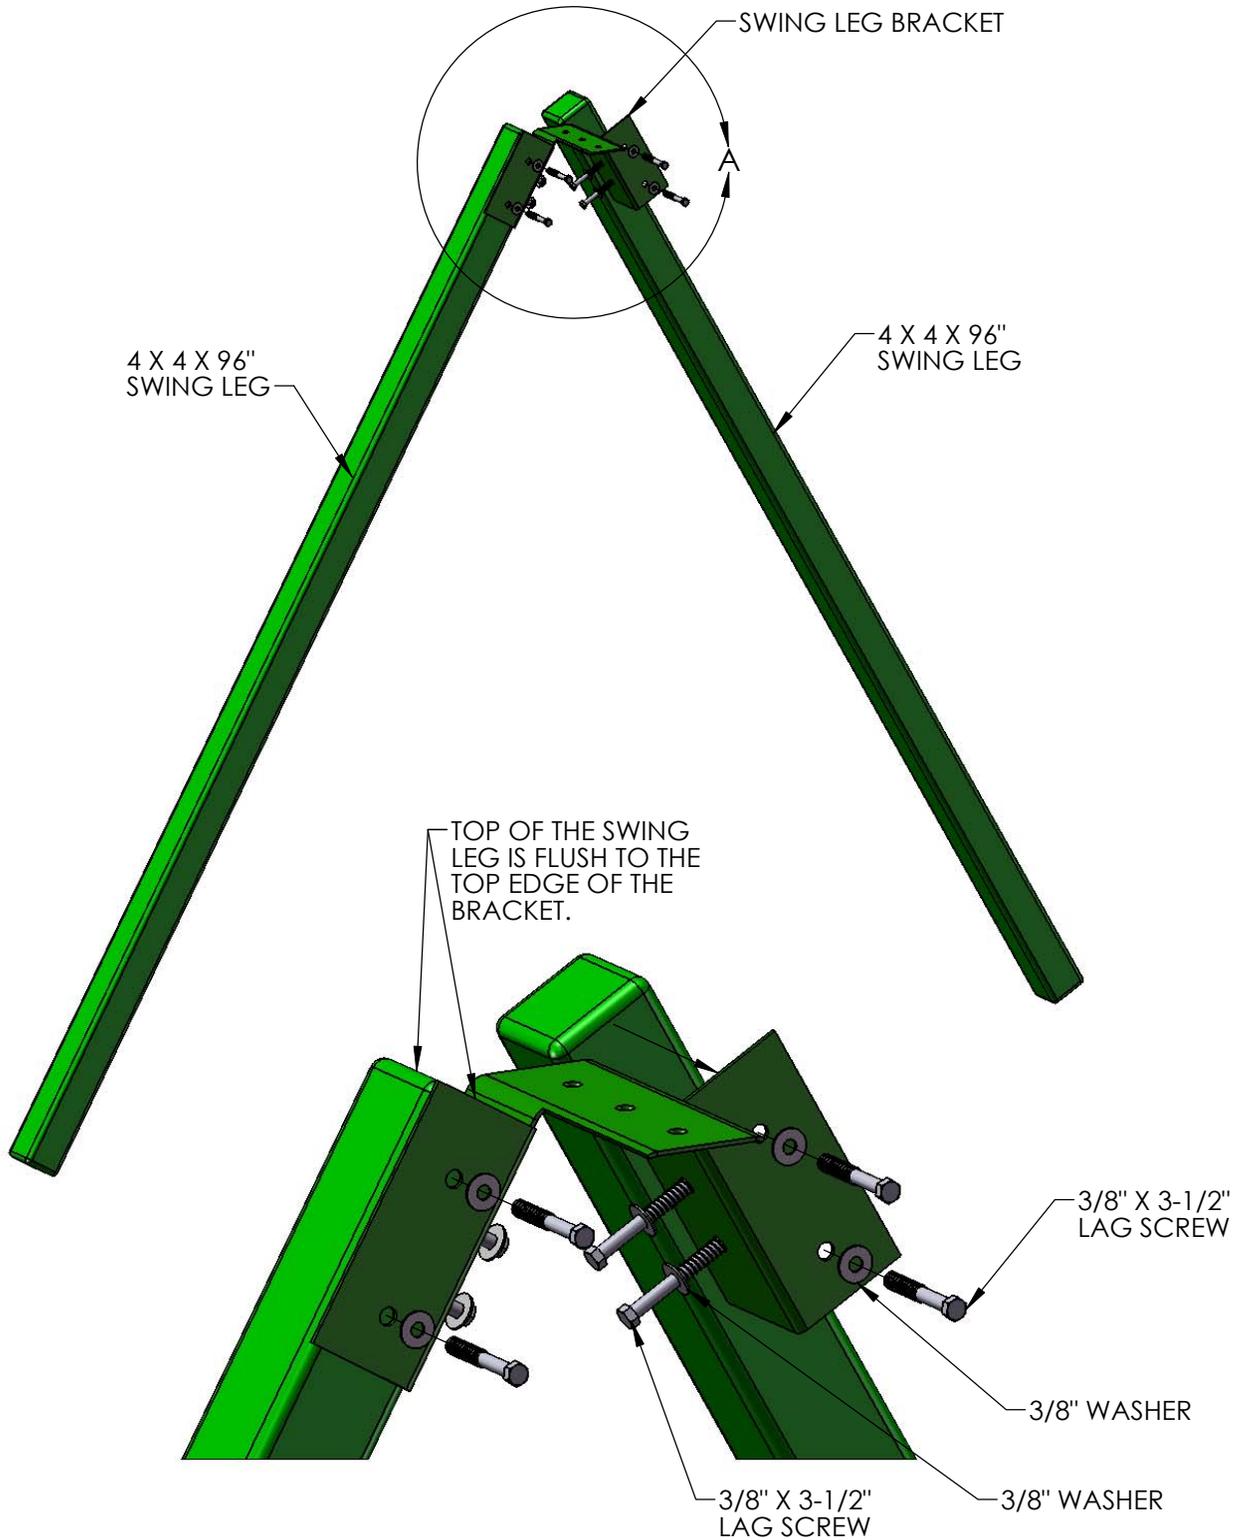


DETAIL A
SCALE 1 : 5

STEP 28: REST SWING BEAM ON FORT

***TWO PEOPLE ARE REQUIRED FOR THIS STEP**

1: LAY THE SWING BEAM ACROSS THE FORT AND POSITION THE SWING LEGS UNDERNEATH THE END OF THE BEAM. NOTE THE END OF THE SWING BEAM WITH TWO EMPTY HOLES WILL BE POSITIONED OVER THE LEGS.


2: LINE UP THE PREDRILLED HOLES IN THE SWING BEAM WITH THE HOLES IN THE SWING LEG BRACKET. THE IRON DUCTILE SWING HANGERS SHOULD BE FACING DOWN.

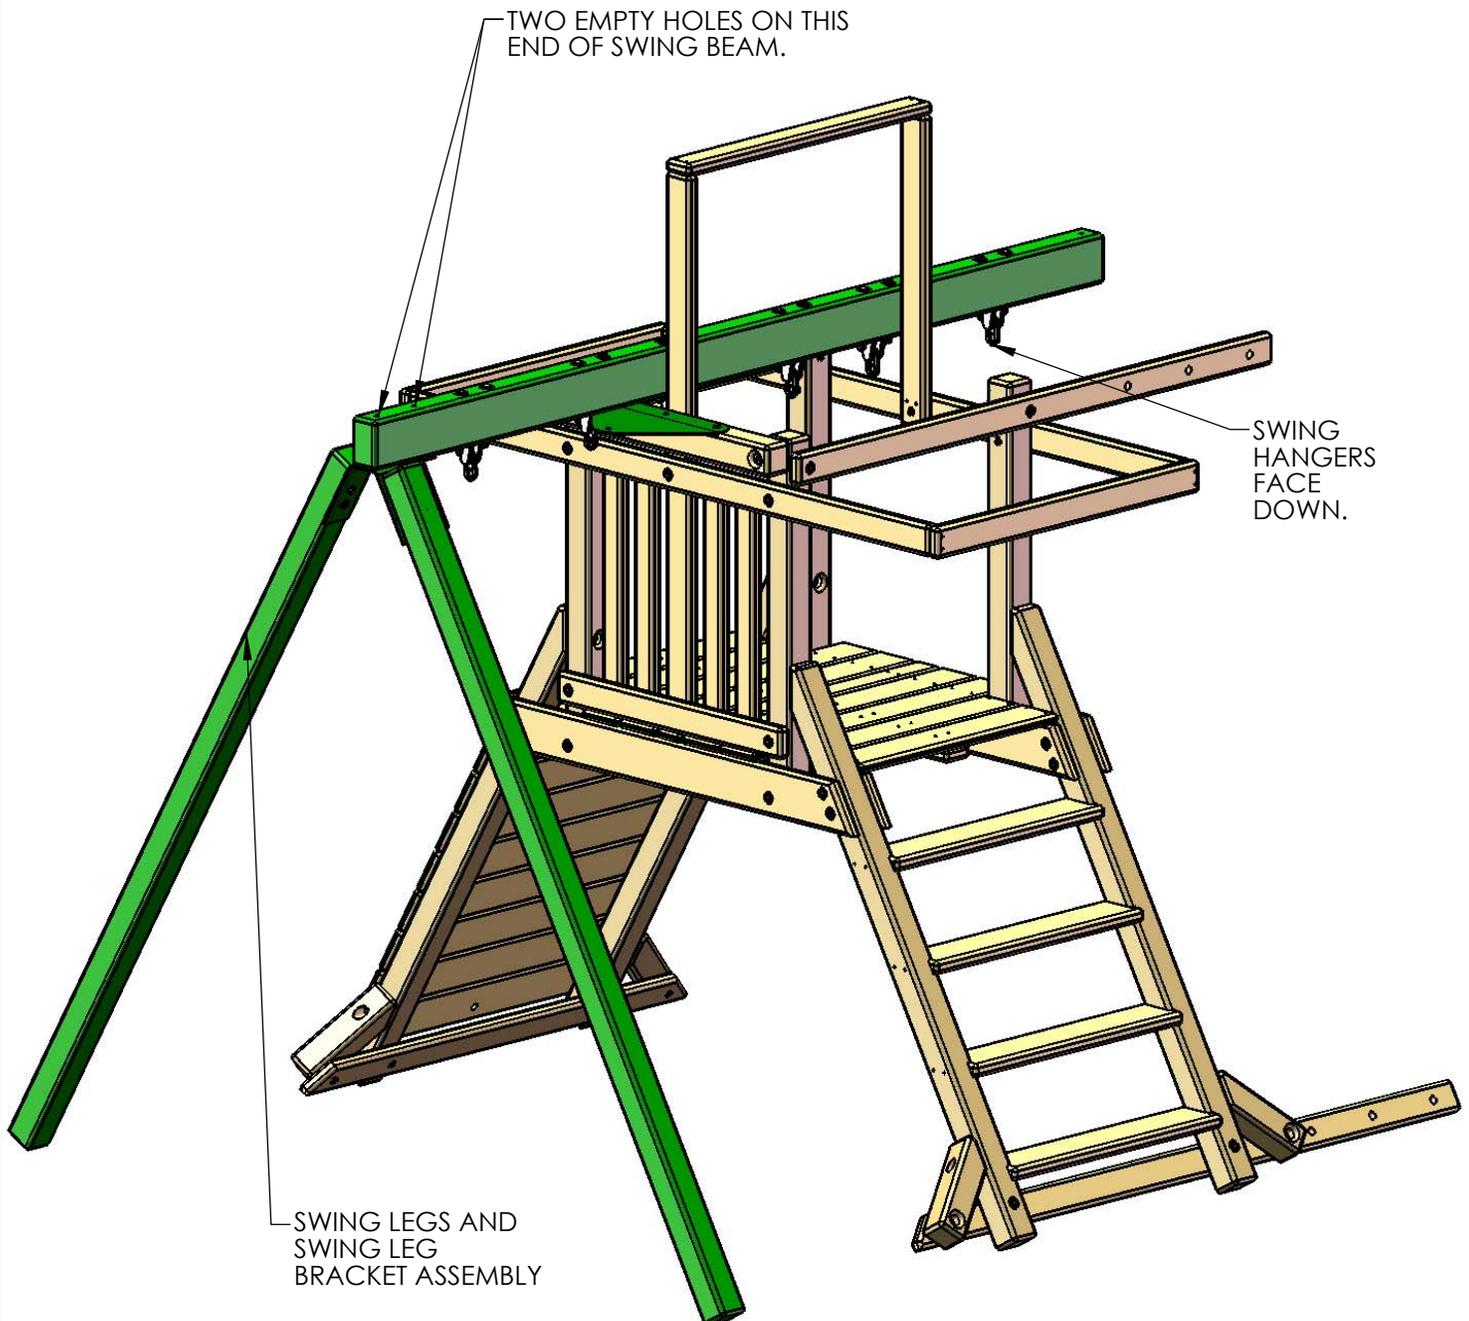

STEP 29: ATTACH SWING BEAM TO SWING BEAM LEGS

1: FASTEN THE SWING BEAM TO THE SWING LEG BRACKET WITH 3/8" X 6-1/2" CARRIAGE BOLTS AND TORQUE WASHERS ON TOP OF THE SWING BEAM AND 3/8" LOCK NUTS WITH WASHERS UNDERNEATH. USE BOLT CAPS TO COVER ANY EXPOSED THREADS.

2: FASTEN THE CENTER HOLE IN THE SWING LEG BRACKET TO THE SWING BEAM WITH A 3/8" X 3-1/2" LAG SCREW AND A 3/8" WASHER.

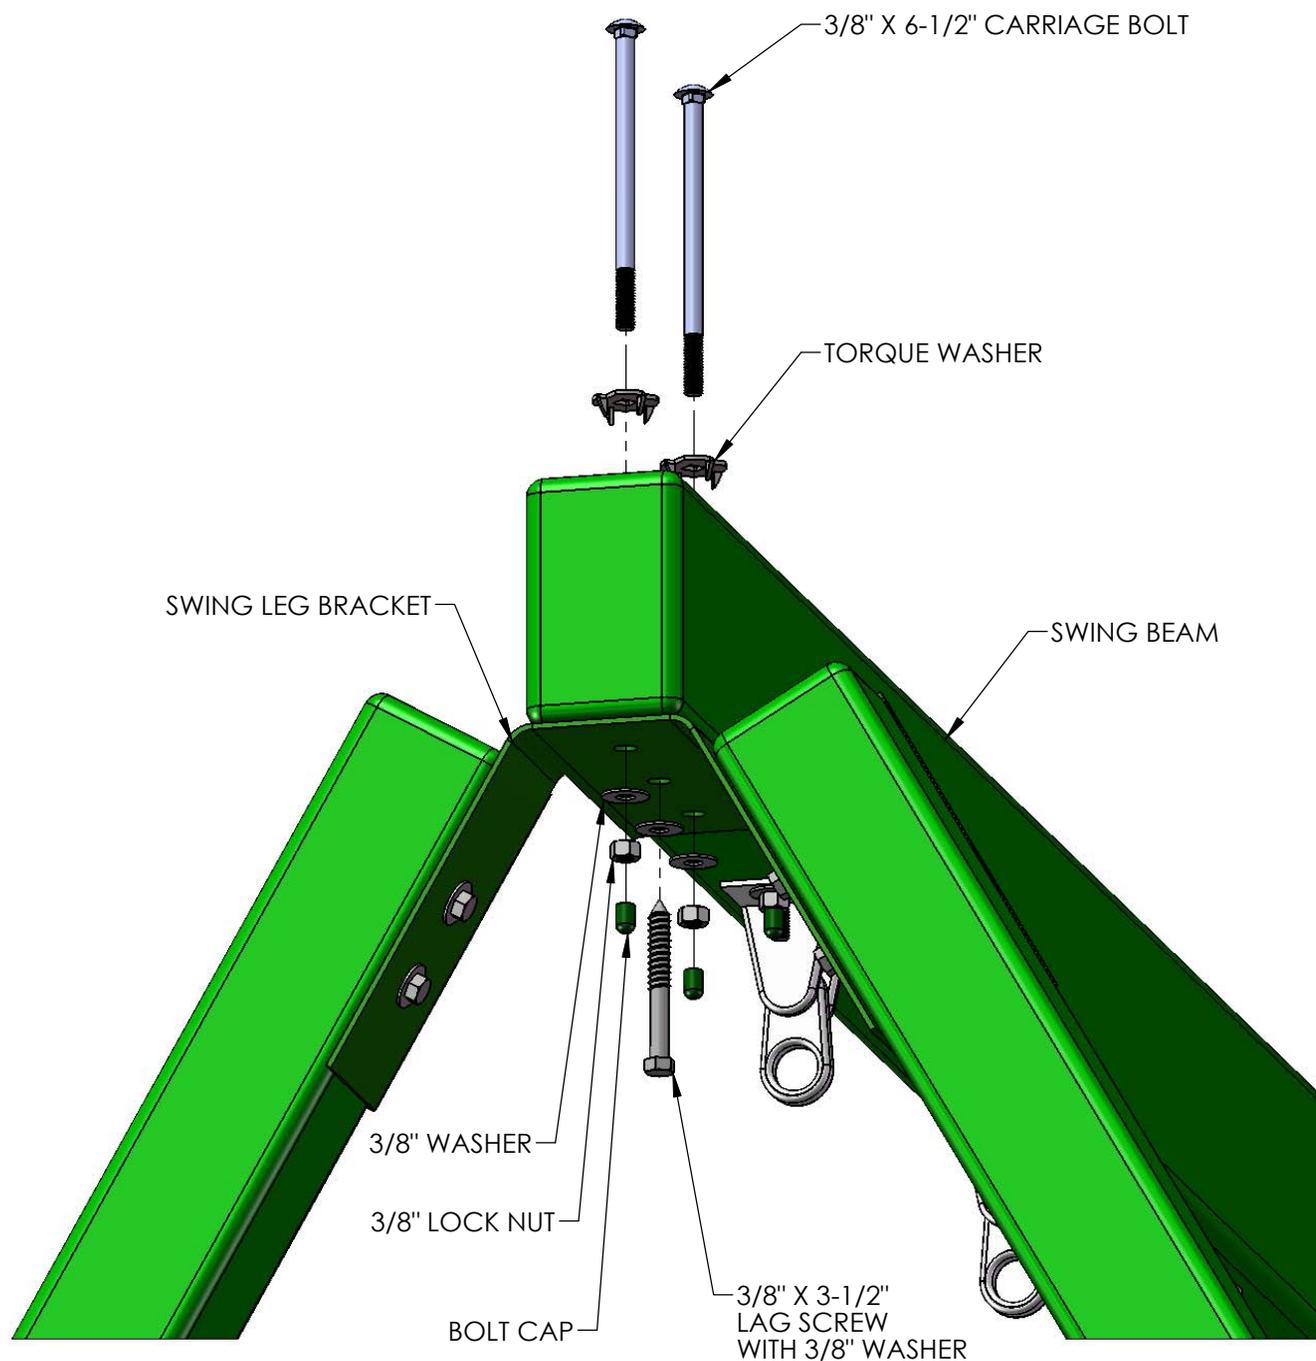

STEP 30: ATTACH SWING BEAM TO PLAY SET

*TWO PEOPLE ARE REQUIRED FOR THIS STEP



1: AFTER THE LEGS ARE ATTACHED, HAVE ONE PERSON ON THE GROUND PICK UP THE SWING BEAM BY THE LEGS. THE SECOND PERSON WILL STAND ON THE PLAY SET DECK AND PICK UP THE SWING BEAM. THE PERSON WITH THE LEG END WILL WALK AWAY FROM THE PLAY SET WHILE THE PERSON ON THE DECK LIFTS THE SWING BEAM.

2: ONCE THE END OF THE SWING BEAM HAS BEEN REACHED BY THE PERSON ON THE DECK, PLACE THE END OF THE SWING BEAM ON TOP OF THE TRIANGULAR SHAPED SWING BEAM PLATE. LINE UP THE HOLE IN THE END OF THE SWING BEAM WITH THE MIDDLE HOLE IN THE SWING BEAM PLATE.

4: FASTEN THE SWING BEAM TO THE SWING BEAM PLATE AND SWING BEAM SIDE RAIL WITH A 3/8" X 9" CARRIAGE BOLT WITH A TORQUE WASHER ON TOP AND A 3/8" LOCK NUT WITH 3/8" WASHER ON THE BOTTOM. PLACE A BOLT CAP OVER THE EXPOSED THREADS ON THE BOTTOM OF THE 9" CARRIAGE BOLT.


5: MAKE SURE THE SWING BEAM IS CENTERED OVER THE OUTER HOLE IN THE SWING BEAM PLATE. TO ACCOMPLISH THIS YOU MAY ALSO USE A SQUARE TO SQUARE THE SWING BEAM TO THE SWING BEAM SIDE RAIL.

6: FASTEN THE SWING BEAM TO THE SWING BEAM PLATE FROM UNDERNEATH WITH A 3/8" X 3-1/2" LAG SCREW AND A 3/8" WASHER.

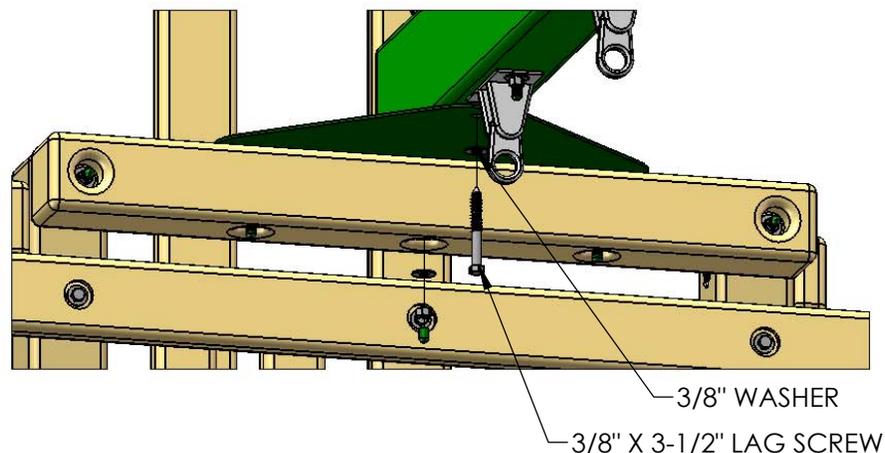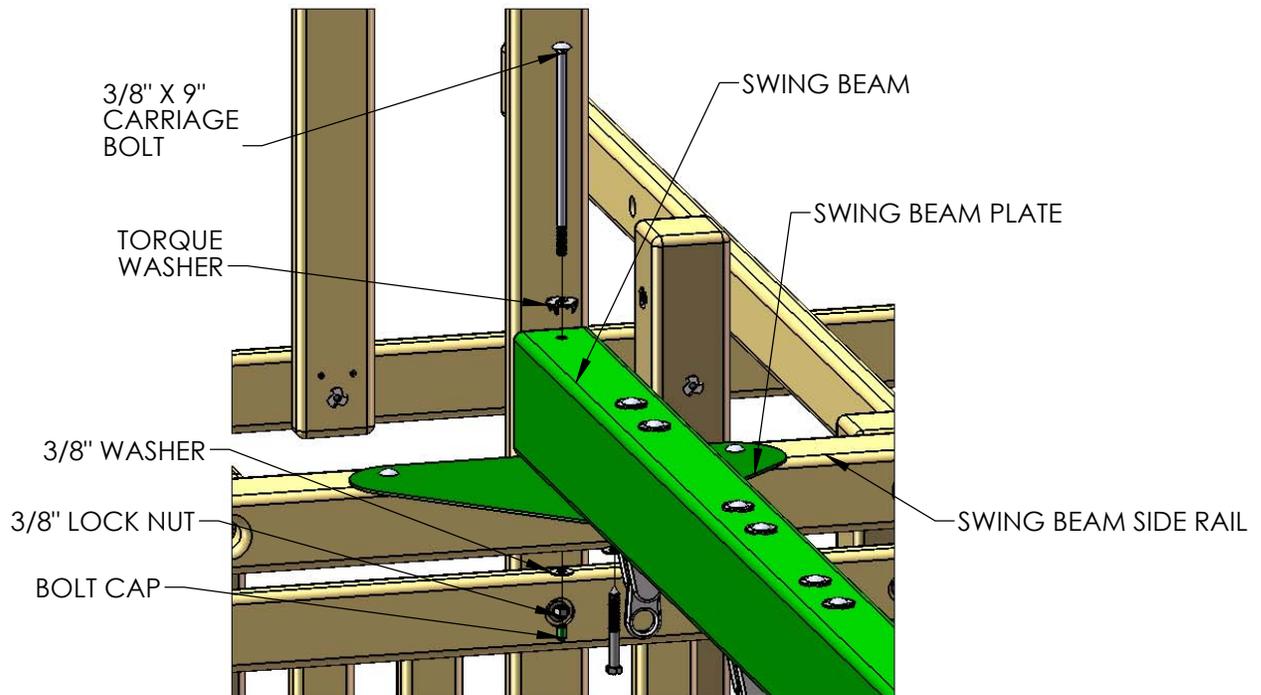

STEP 31: LEVEL THE SWING BEAM

1: PLACE A LEVEL ON TOP OF THE SWING BEAM AND ADJUST THE LEGS IN OR OUT AS NEEDED TO MAKE THE SWING BEAM LEVEL.


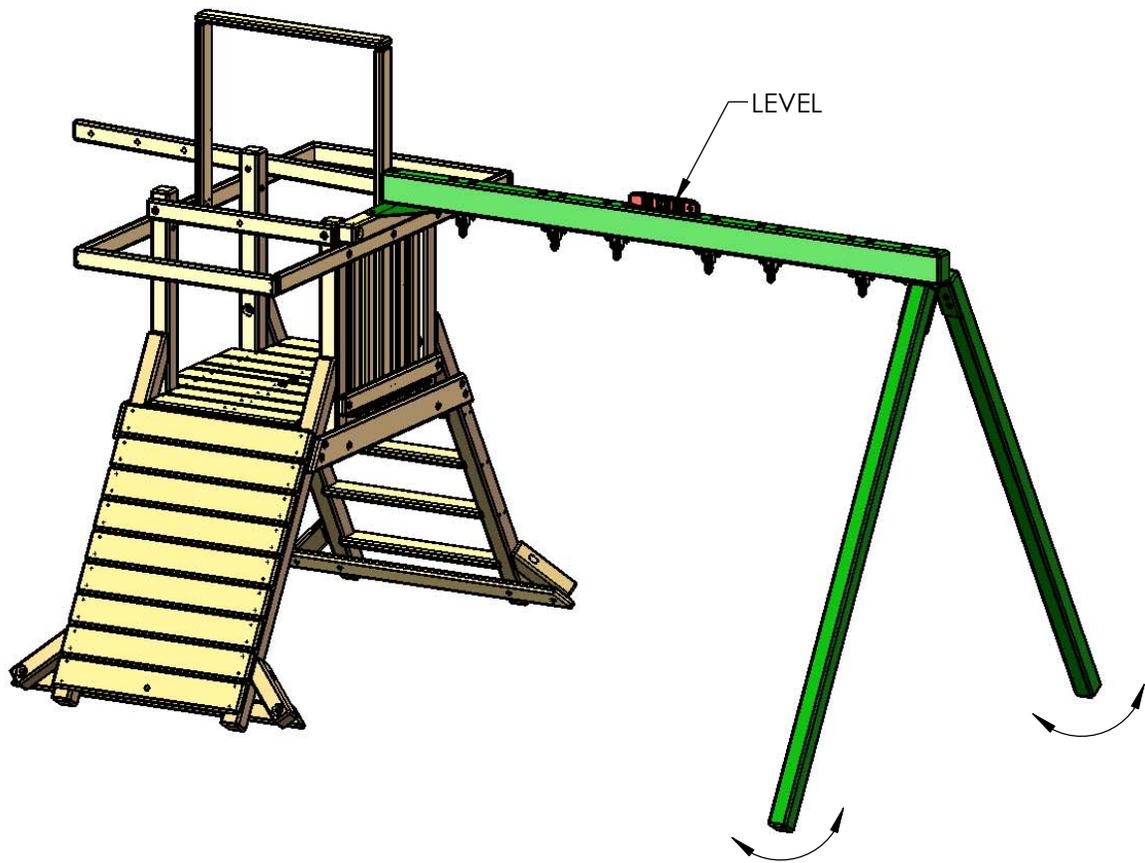


STEP 32: SWING LEG CROSS-MEMBER

1: POSITION THE 2 X 4 X 58" SWING LEG CROSS-MEMBER AGAINST THE OUTSIDE OF THE SWING BEAM LEGS.

2: LEVEL THE CROSS-MEMBER AND CENTER THE HOLES OVER THE CENTER OF THE SWING LEGS.


3: FASTEN THE CROSS-MEMBER TO THE SWING LEGS WITH 3/8" X 3-1/2" LAG SCREWS AND 3/8" WASHERS.

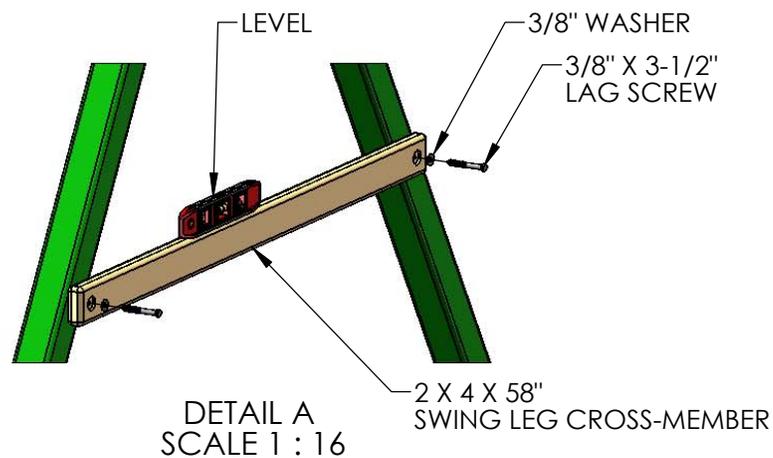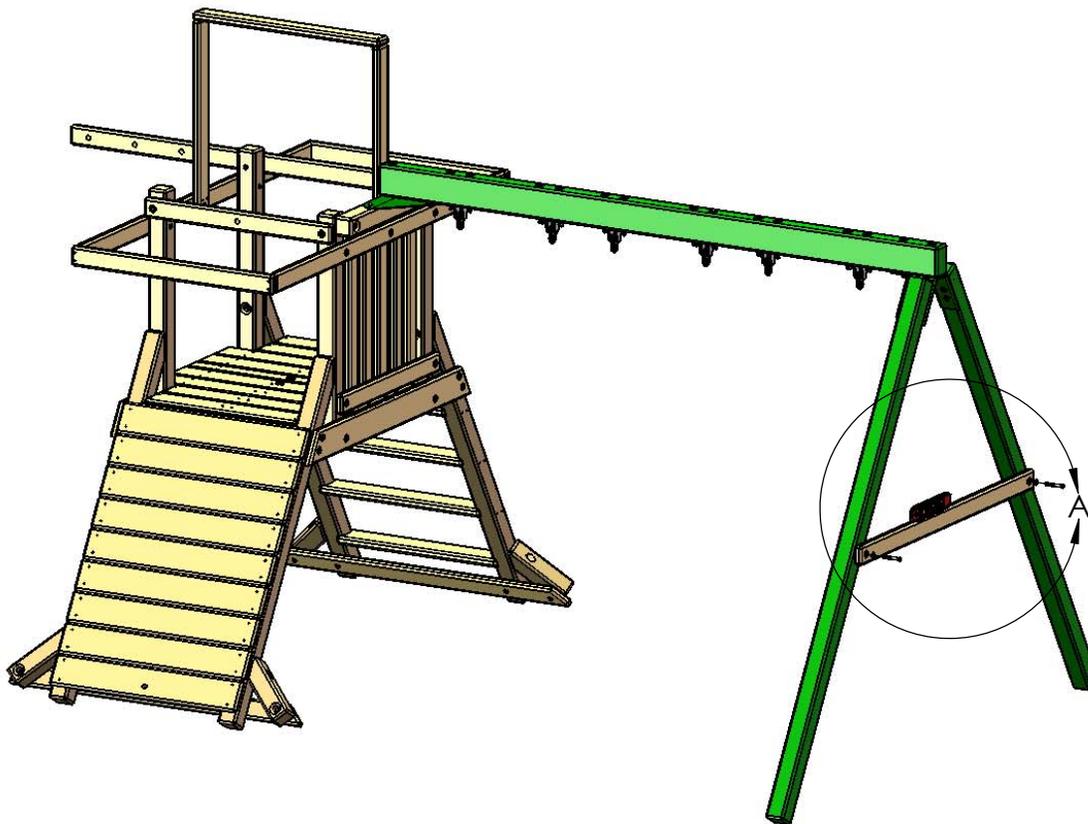

STEP 33: INSTALLING THE ROCKS

1: THE ROCKS SHOULD FOLLOW THE GENERAL STAGGERED LAYOUT SHOWN BELOW. HOWEVER, A DIFFERENT LAYOUT MAY BE USED.

2: THE ROCKS INCLUDED WITH YOUR PLAY SET MAY VARY. THE #14 X 1-1/4" PAN HEAD SCREWS AND 1/4" WASHERS INCLUDED WITH THE ROCKS WILL BE USED TO ATTACH THEM TO THE ROCK WALL BOARDS.

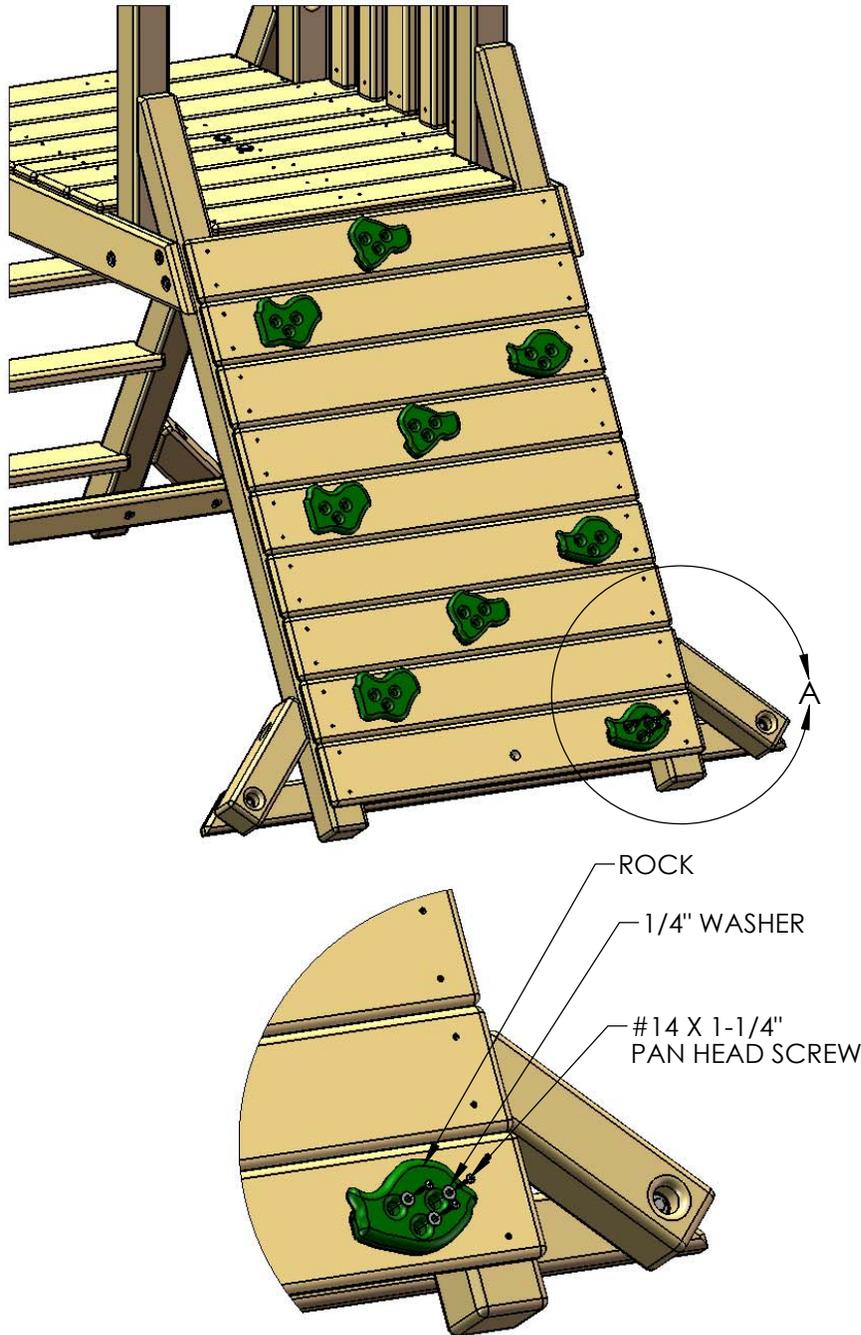


DETAIL A
SCALE 1 : 8

STEP 34: CLIMBING ROPE

1: THREAD THE END OF THE CLIMBING ROPE THROUGH THE HOLE IN THE ROCK WALL ROPE SUPPORT. TIE A SECURE KNOT ON THE INSIDE OF THE ROCK WALL ROPE SUPPORT. YOU MAY ADD UP TO 3 KNOTS ALONG THE LENGTH OF THE ROPE TO AID IN CLIMBING. PLACE THE KNOTS ALONG THE ROPE IN POSITIONS SUITABLE FOR YOUR CHILD.

2: THREAD THE BOTTOM END OF THE ROPE THROUGH THE HOLE IN THE BOTTOM ROCK WALL BOARD. PULL THE ROPE TIGHT AND TIE A SECURE KNOT BEHIND THE BOTTOM ROCK WALL BOARD.

3: NOW GRAB THE ROPE AND ATTEMPT TO WRAP IT AROUND YOUR HAND. IF THE ROPE WRAPS AROUND YOUR HAND IT IS TOO LOOSE. IF THE ROPE IS TOO LOOSE UNTIE THE KNOT BEHIND THE ROCK WALL ROPE SUPPORT AND RETIE IT UNTIL YOU CAN NO LONGER WRAP THE ROPE AROUND YOUR HAND.

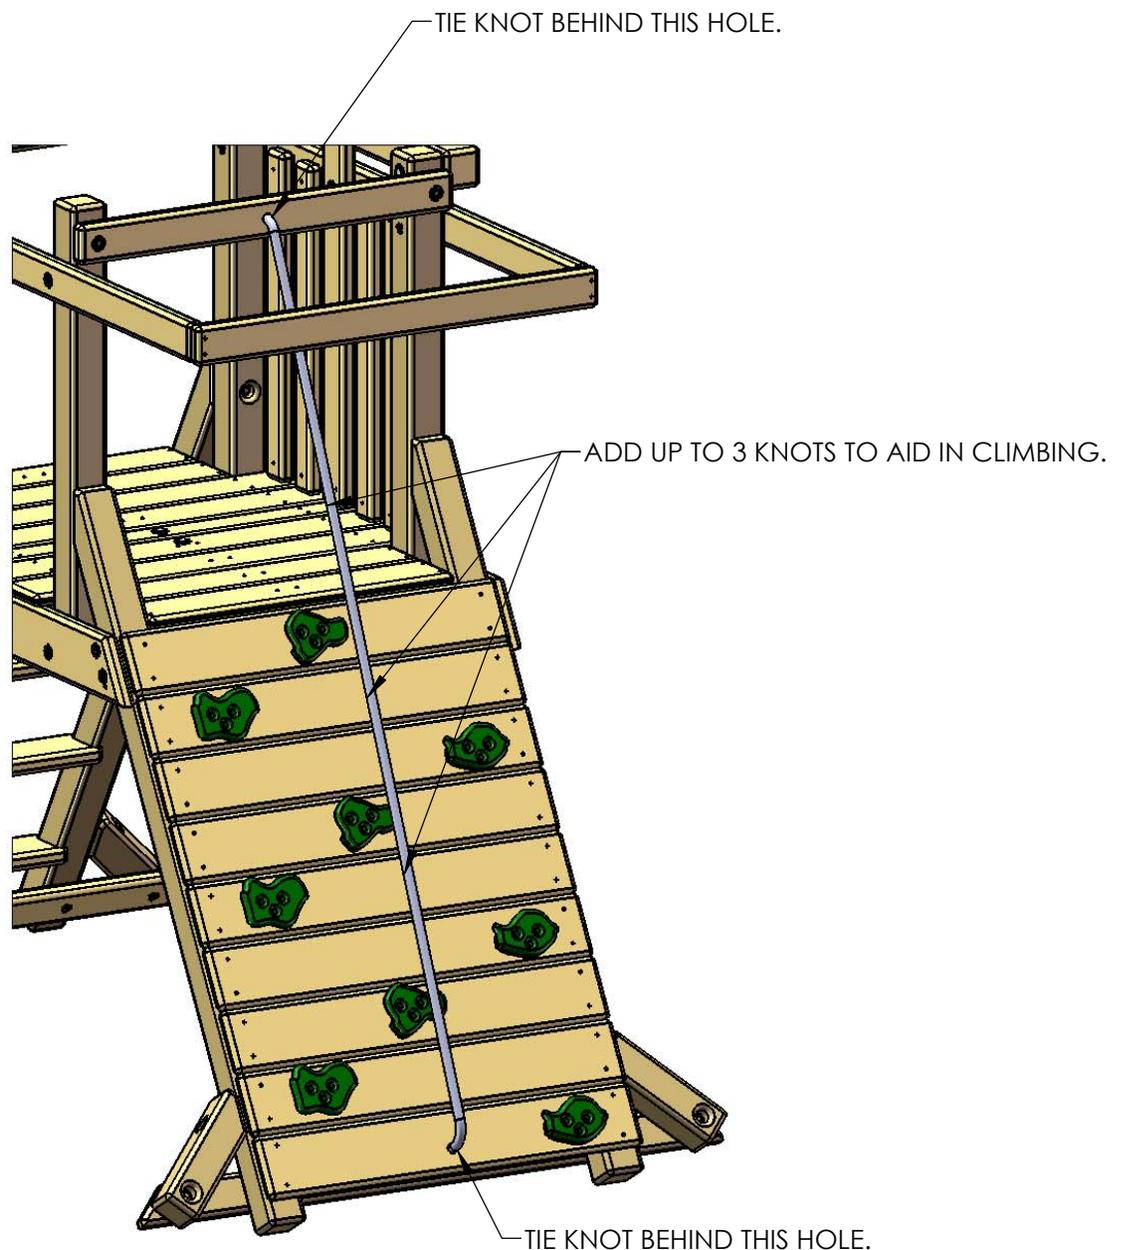

STEP 35: ROPE LADDER

1: FIND THE THREE ROPE LADDER ROPES. MAKE A KNOT IN THE END OF EACH ROPE AND THREAD THE FREE END THROUGH THE BACK SIDE OF THE ROPE LADDER SUPPORT. PULL EACH ROPE TAUGHT.

2: MEASURE FROM THE BOTTOM OF THE ROPE LADDER SUPPORT DOWN 8 INCHES AND TIE A KNOT. THE TOP OF THE KNOT SHOULD BE 8 INCHES BELOW THE BOTTOM OF THE ROPE LADDER SUPPORT. SLIDE EACH ROPE THROUGH THE HOLES IN ONE ROPE LADDER RUNG. SLIDE THE RUNG UP AGAINST THE BOTTOM OF THE KNOTS.


3: TIE THREE KNOTS BELOW THE ROPE LADDER RUNG.

4: MEASURE DOWN FROM THE BOTTOM OF THE ROPE LADDER RUNG 11 INCHES AND MAKE A MARK ON THE ROPE WITH A PIECE OF TAPE OR A MARKER. THREAD ANOTHER ROPE LADDER RUNG ONTO THE ROPES.

5: WITH THE TOP OF THE RUNG EVEN WITH THE 11 INCH MARK TIE THREE KNOTS BELOW THE SECOND LADDER RUNG.

6: REPEAT SUBSTEPS 4-5 FOR THE REMAINING ROPE LADDER RUNGS.


7: THREAD THE BOTTOM END OF EACH ROPE THROUGH THE HOLES IN THE ROPE LADDER RUNNER. GRAB EACH ROPE AND ATTEMPT TO WRAP IT AROUND YOUR HAND. IF THE ROPE WRAPS AROUND YOUR HAND IT IS TOO LOOSE. IF THE ROPE IS TOO LOOSE UNTIE THE KNOT BEHIND THE ROPE LADDER RUNNER AND RETIE IT UNTIL YOU CAN NO LONGER WRAP THE ROPE AROUND YOUR HAND.

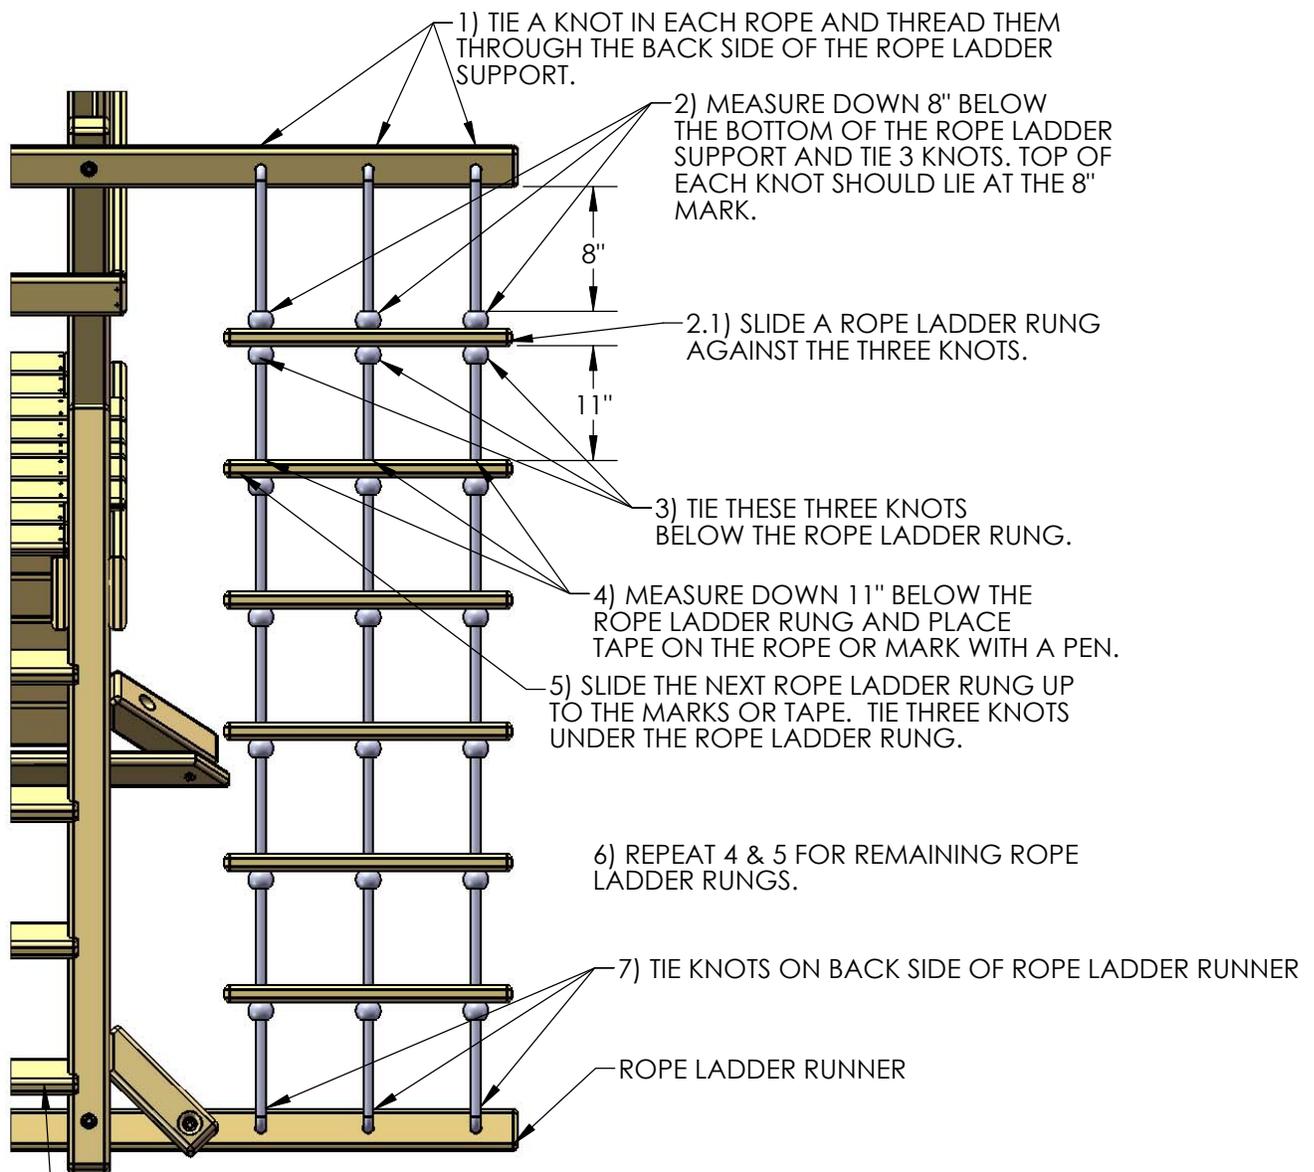

THIS VIEW IS AS IF YOU ARE STANDING IN FRONT OF THE LADDER STEPS.

STEP 36: INSTALLING THE SLIDE

- 1: PLACE THE SLIDE IN THE OPENING AT THE LEFT SIDE OF THE PLAY SET.
- 2: THE STEPPED END WILL REST ON TOP OF THE DECK BOARDS.
- 3: ATTACH THE SLIDE TO THE DECK BOARDS WITH TWO #8 X 1-1/4" WOOD SCREWS.

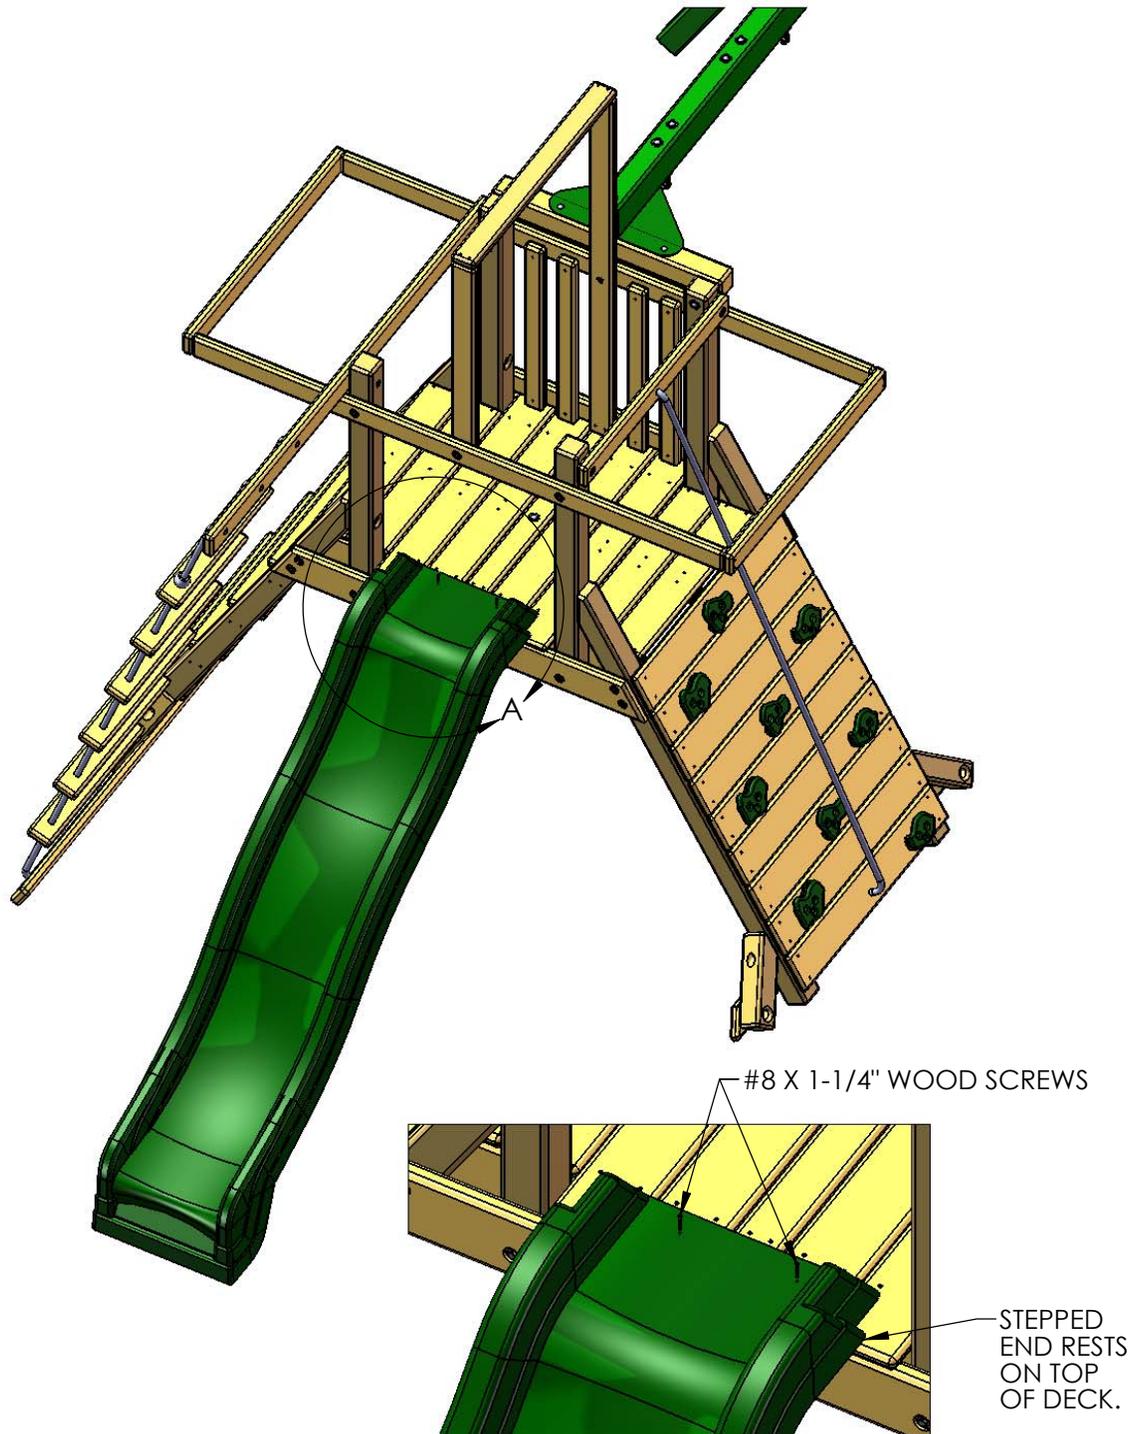

DETAIL A
SCALE 1 : 12

STEP 37: TARP

1: LAY THE TARP OVER THE TOP OF THE CENTER TARP BOARD AND MAKE SURE THE HEM SIDE FACES DOWN.



2: WRAP EACH END OF THE TARP AROUND THE END OF THE TARP BOARDS INTO THE INSIDE. IT MAY HELP TO HAVE A HELPER ON ONE SIDE WHILE YOU DO THIS SO THAT YOU CAN MAKE THE ENDS OF THE TARP OVERLAP THE TARP BOARD EVENLY ON EACH END.

3: ONCE BOTH ENDS ARE WRAPPED EVENLY, MARK THE LOCATIONS OF THE GROMMETS ONTO THE TARP BOARD **ON ONE END ONLY**. LET THE TARP END HANG DOWN AND DRILL 1/8" HOLES AT THE MARKS 1" DEEP.

4: FASTEN THE END OF THE TARP TO THE TARP BOARD USING THE HOLES YOU DRILLED WITH #14 X 1-1/4" PAN HEAD SCREWS AND 1/4" WASHERS.

5: GO TO THE OTHER SIDE OF THE TARP AND WRAP THE END AROUND THE TARP BOARD KEEPING THE TARP TIGHT. MAKE MARKS THROUGH THE GROMMETS ONTO THE TARP BOARD. LET THE TARP END HANG DOWN AND DRILL 1/8" HOLES AT THE MARKS 1" DEEP.

6: FASTEN THE END OF THE TARP TO THE TARP BOARD USING THE HOLES YOU DRILLED WITH #14 X 1-1/4" PAN HEAD SCREWS AND 1/4" WASHERS.

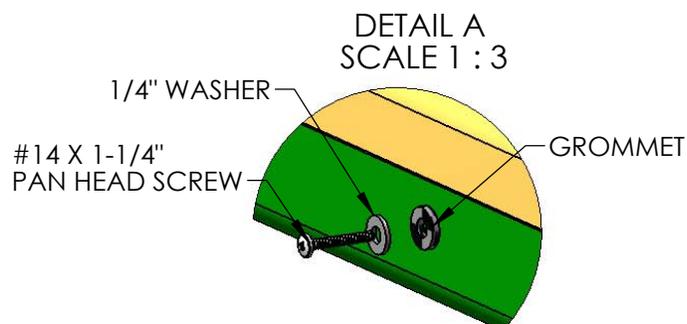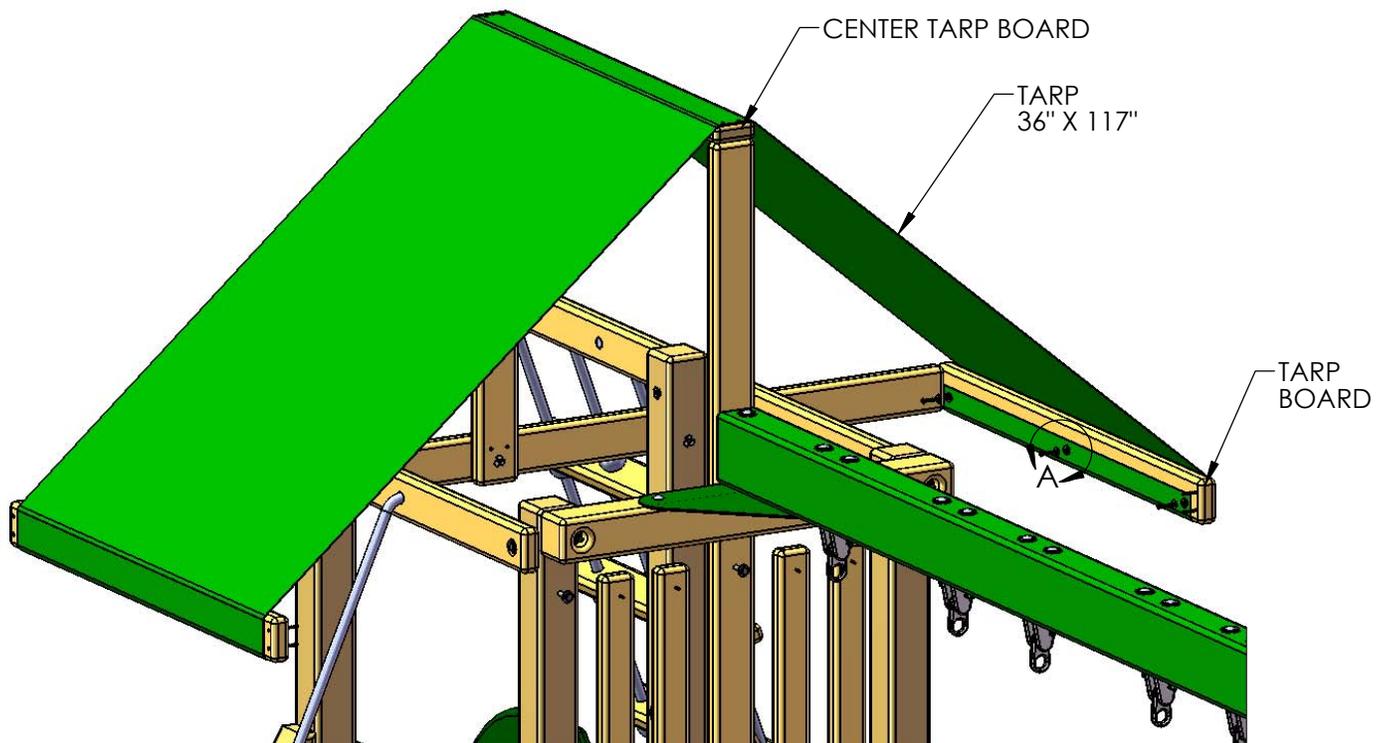


STEP 38: TELESCOPE


1: USE THE 1-1/4" WOOD SCREWS PROVIDED WITH THE TELESCOPE TO FASTEN ONE OF THE HALF-CIRCLE SHAPED TELESCOPE BRACKETS ON TOP OF THE CORNER POST ABOVE THE SLIDE.

2: PLACE THE TELESCOPE STAND AND TELESCOPE INTO THE SLOT OF THE TELESCOPE BRACKET.

3: FASTEN THE REMAINING HALF-CIRCLE SHAPED TELESCOPE BRACKET TO THE OPPOSITE SIDE THAT THE FIRST TELESCOPE BRACKET WAS INSTALLED. USE THE 1-1/4" WOOD SCREWS PROVIDED WITH THE TELESCOPE TO ATTACH THE TELESCOPE BRACKET.

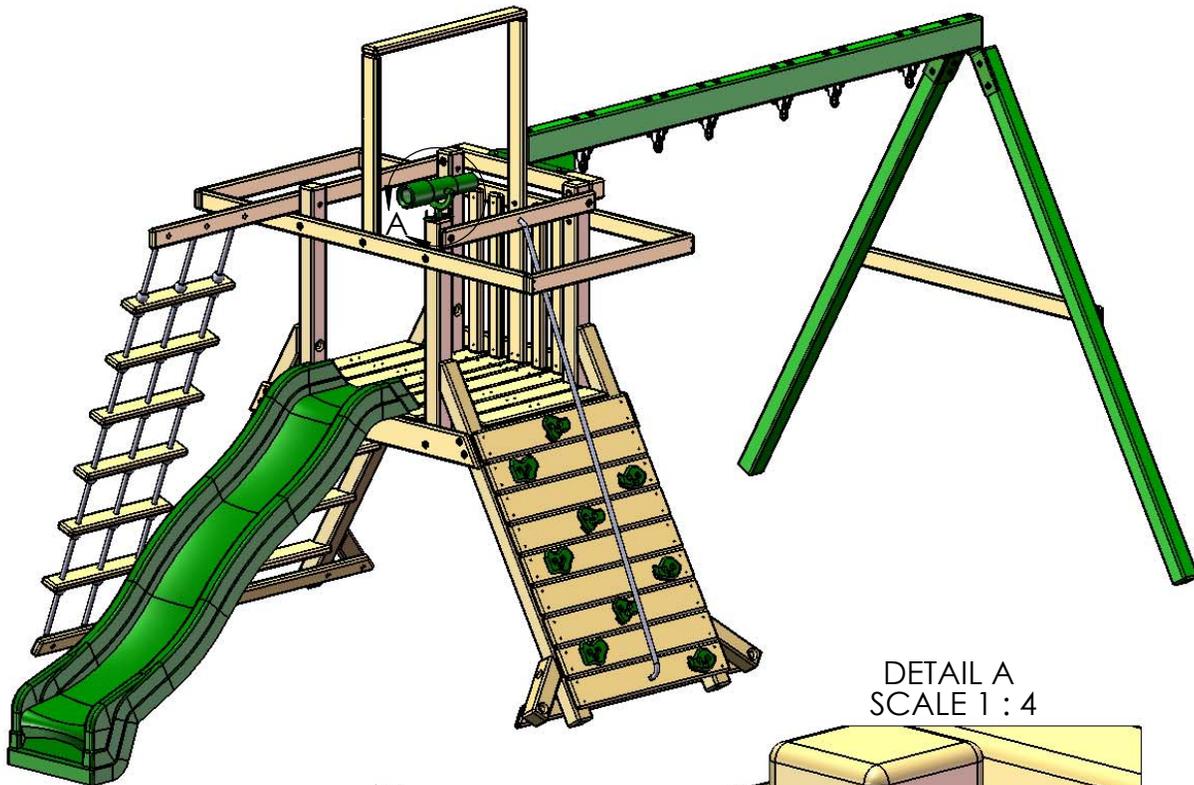

DETAIL A
SCALE 1 : 4

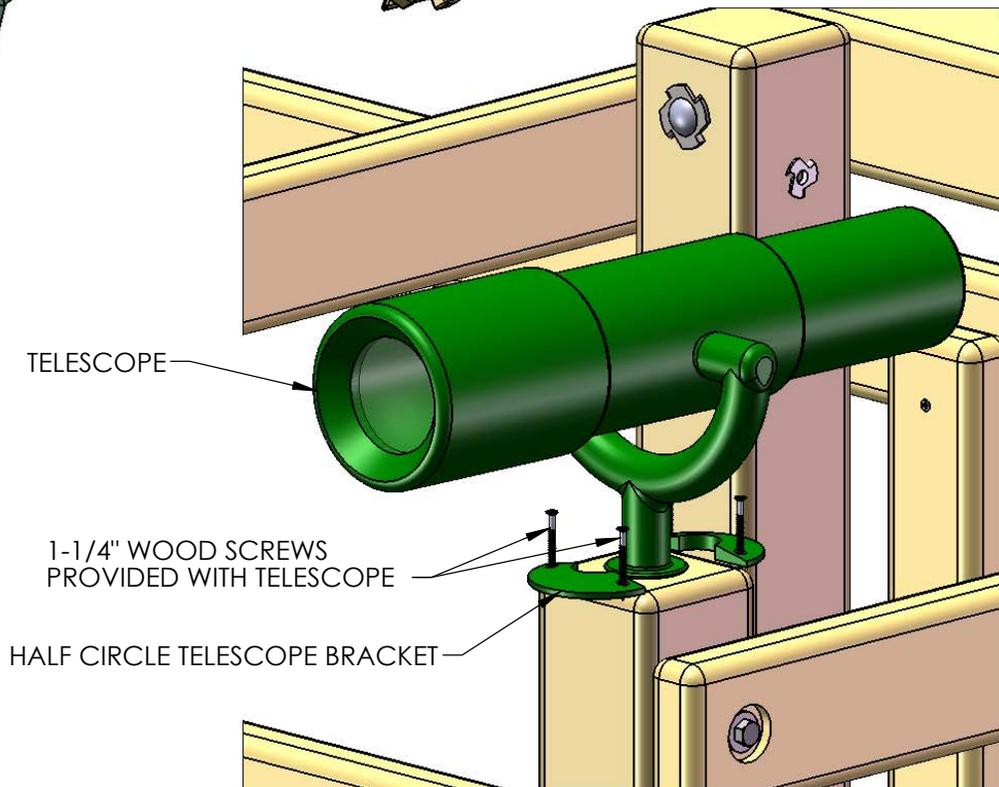

TELESCOPE

1-1/4" WOOD SCREWS
PROVIDED WITH TELESCOPE



HALF CIRCLE TELESCOPE BRACKET

STEP 39: SAFETY HANDLES

1: LOCATE THE PLASTIC SAFETY HANDLES (2 BAGS). EACH BAG SHOULD CONTAIN TWO SAFETY HANDLES WITH HARDWARE TO ATTACH THEM.

2: PLACE THE SAFETY HANDLES ON THE OUTSIDE OF THE CORNER POSTS ABOVE THE ROCK WALL AND LADDER. ADJUST THE HANDLES UP OR DOWN TO SUIT THE NEEDS OF YOUR CHILD. CENTER THE HOLES IN THE HANDLE IN THE MIDDLE OF EACH CORNER POST.

3: ATTACH EACH SAFETY HANDLE TO A CORNER POST WITH THE PAN HEAD SCREWS AND WASHERS PROVIDED.

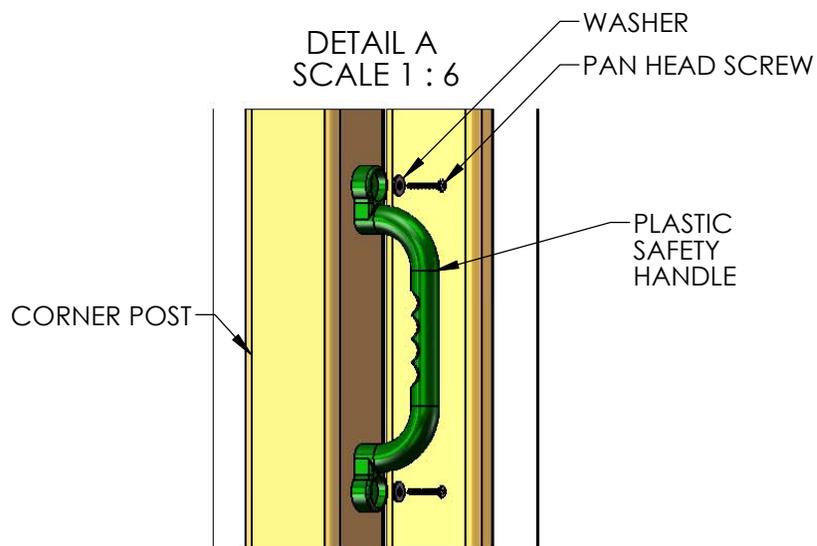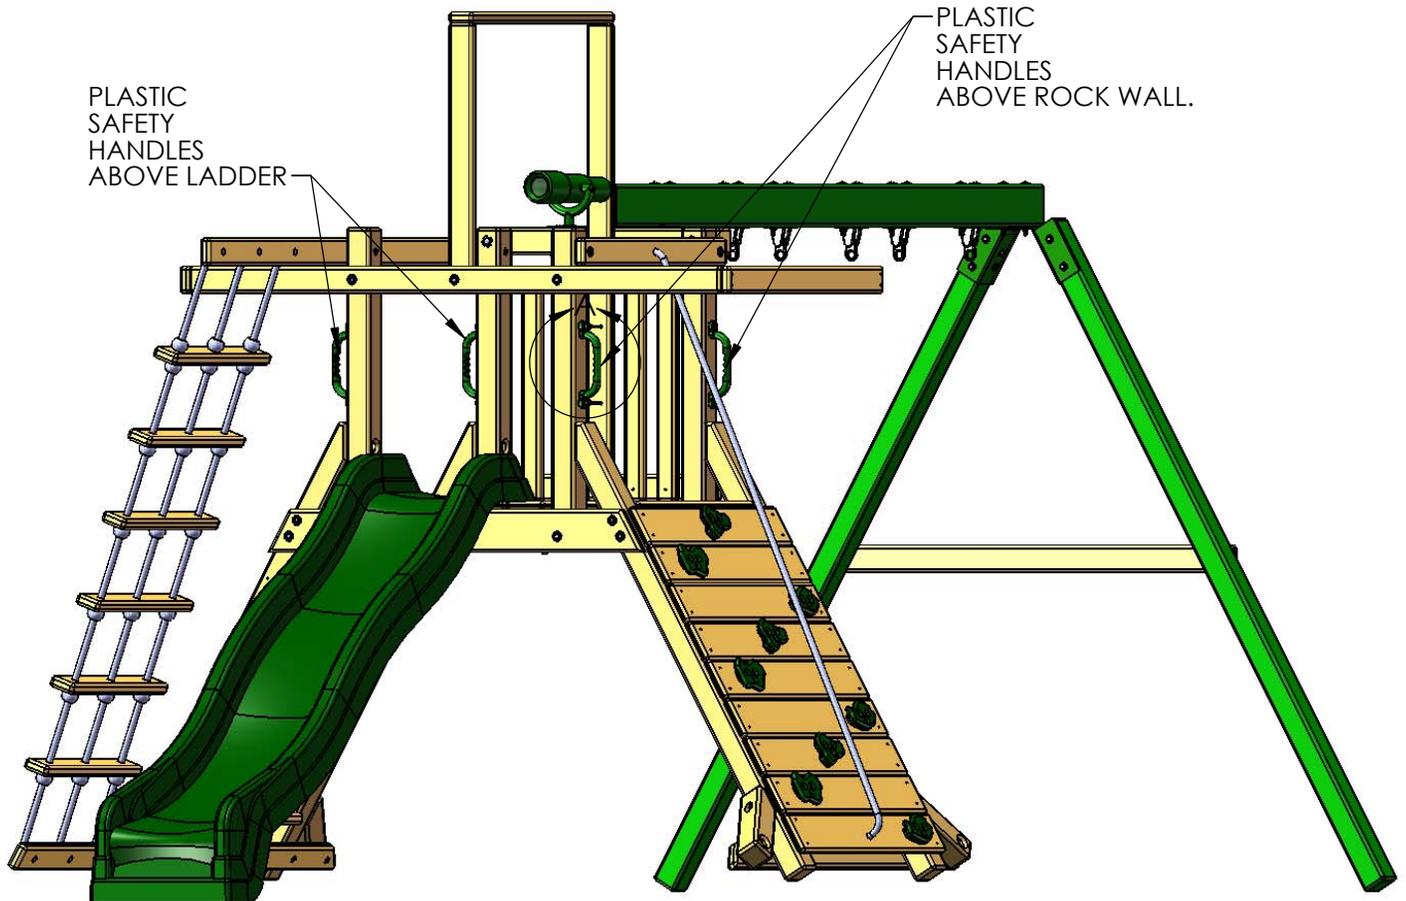

STEP 40: HANGING SWINGS

1: CLIP EACH OF THE SPRING CLIPS ONTO THE IRON DUCTILE SWING HANGERS, THEN CLIP ONTO THE SWING CHAINS.

2: USE THE CLIPS TO ADJUST THE HEIGHT OF THE SWING BY CLIPPING ON HIGHER OR LOWER LINKS.


3: COUNT BACK THE SAME NUMBER OF LINKS ON THE OPPOSITE SIDE TO ENSURE THE SWING IS LEVEL, AND ADJUST TO FIT YOUR NEEDS.

4: ANY EXCESS CHAIN MAY BE LOOPED AND CLIPPED INTO THE SPRING CLIPS.



STEP 41: PUNCHING BALL

- 1: PLACE THE 1 FOOT SECTION OF CHAIN THROUGH THE HOLE IN THE PUNCHING BALL.
- 2: SNAP THE SPRING CLIP ONTO THE IRON DUCTILE SWING HANGER UNDER THE PLAY SET DECK.
- 3: SNAP THE ENDS OF THE CHAIN ONTO THE SPRING CLIP.

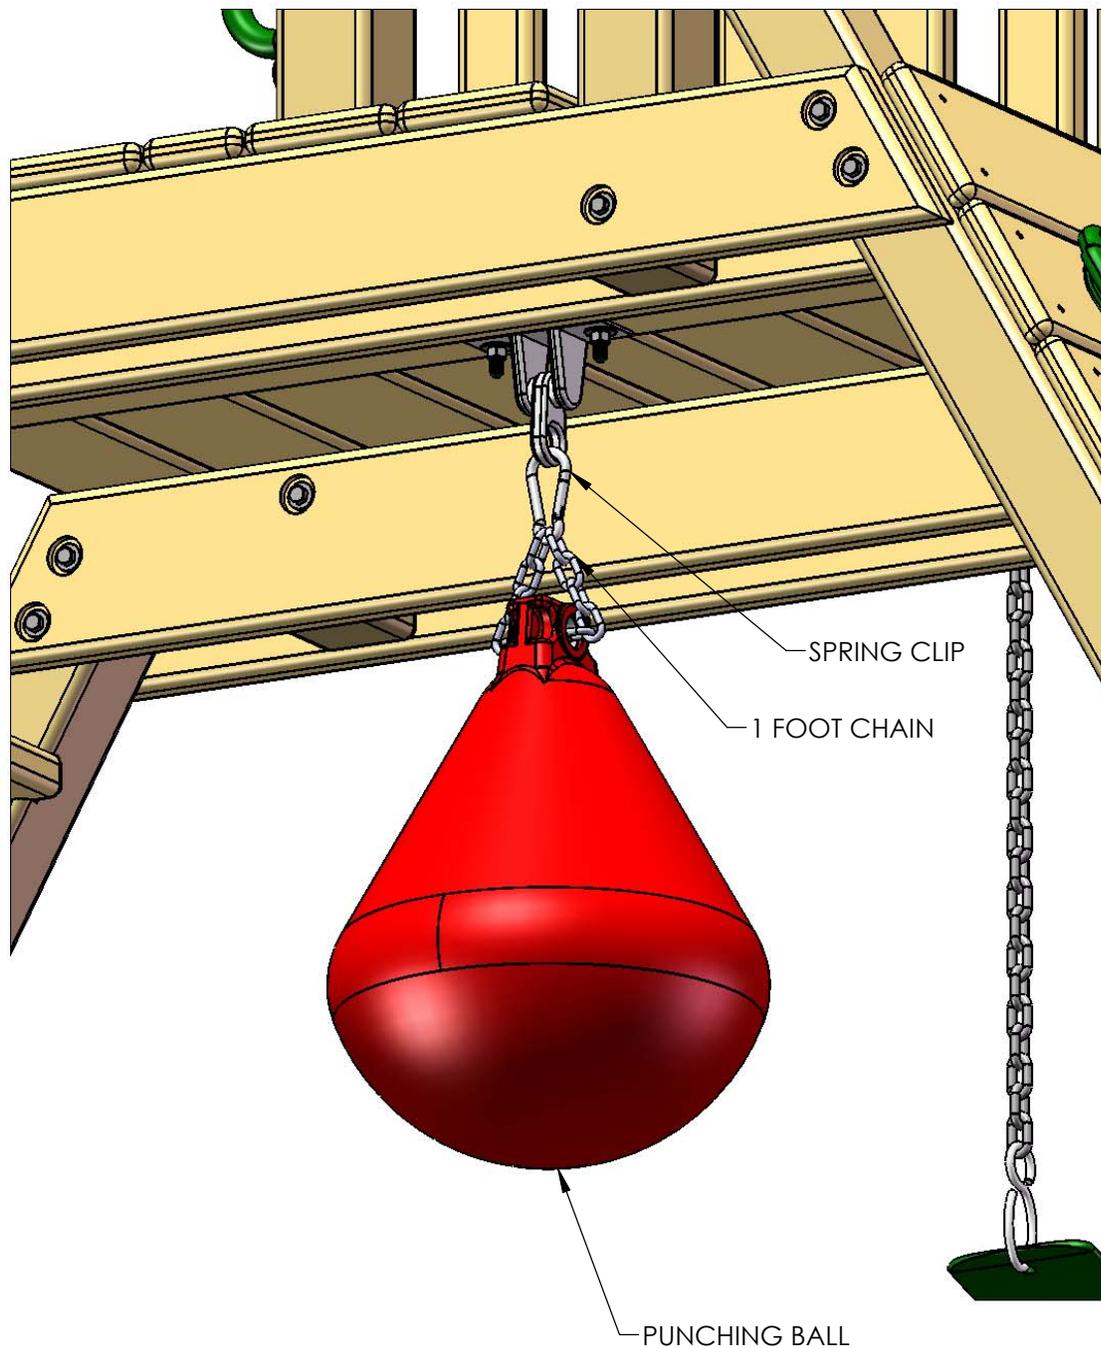


STEP 42: TIC TAC TOE PANEL

1: ASSEMBLE THE TIC TAC TOE PANEL ACCORDING TO THE INSTRUCTIONS IN THE BOX. IGNORE STEPS 6 AND 7 IN THE INSTRUCTIONS.

2: ATTACH THE TWO 1-3/8" X 1-5/8" X 10-1/2" TIC TAC TOE BOARDS TO THE GREEN PLASTIC BRACKET WITH THE 1" LONG PHILLIPS HEAD SCREWS PROVIDED WITHIN THE TIC TAC TOE BOX. **IMPORTANT:** MAKE SURE THE TIC TAC TOE BOARD IS MOUNTED TO THE GREEN BRACKET OBSERVING THE 1-5/8" DIMENSIONS SHOWN BELOW.

3: CENTER THE UNIT ON THE PANEL SLATS AS SHOWN.

4: MOUNT THE LOWER TIC TAC TOE BOARD 4" ABOVE THE DECK. ATTACH TIC TAC TOE BOARD TO THE PANEL SLATS FROM THE OUTSIDE WITH #8 X 2-1/2" WOOD SCREWS. IT WILL BE HELPFUL TO HAVE AN ASSISTANT HOLD THE TIC TAC TOE PANEL AGAINST THE PANEL SLATS WHILE YOU GO ON THE OUTSIDE AND PREDRILL 1/16" HOLES THROUGH THE PANEL SLATS AND PARTIALLY INTO THE TIC TAC TOE BOARDS. THESE HOLES WILL MAKE IT EASIER TO ATTACH THE TIC TAC TOE TO THE PANEL SLATS AND WILL LESSEN THE POSSIBILITY OF SPLITTING A BOARD.

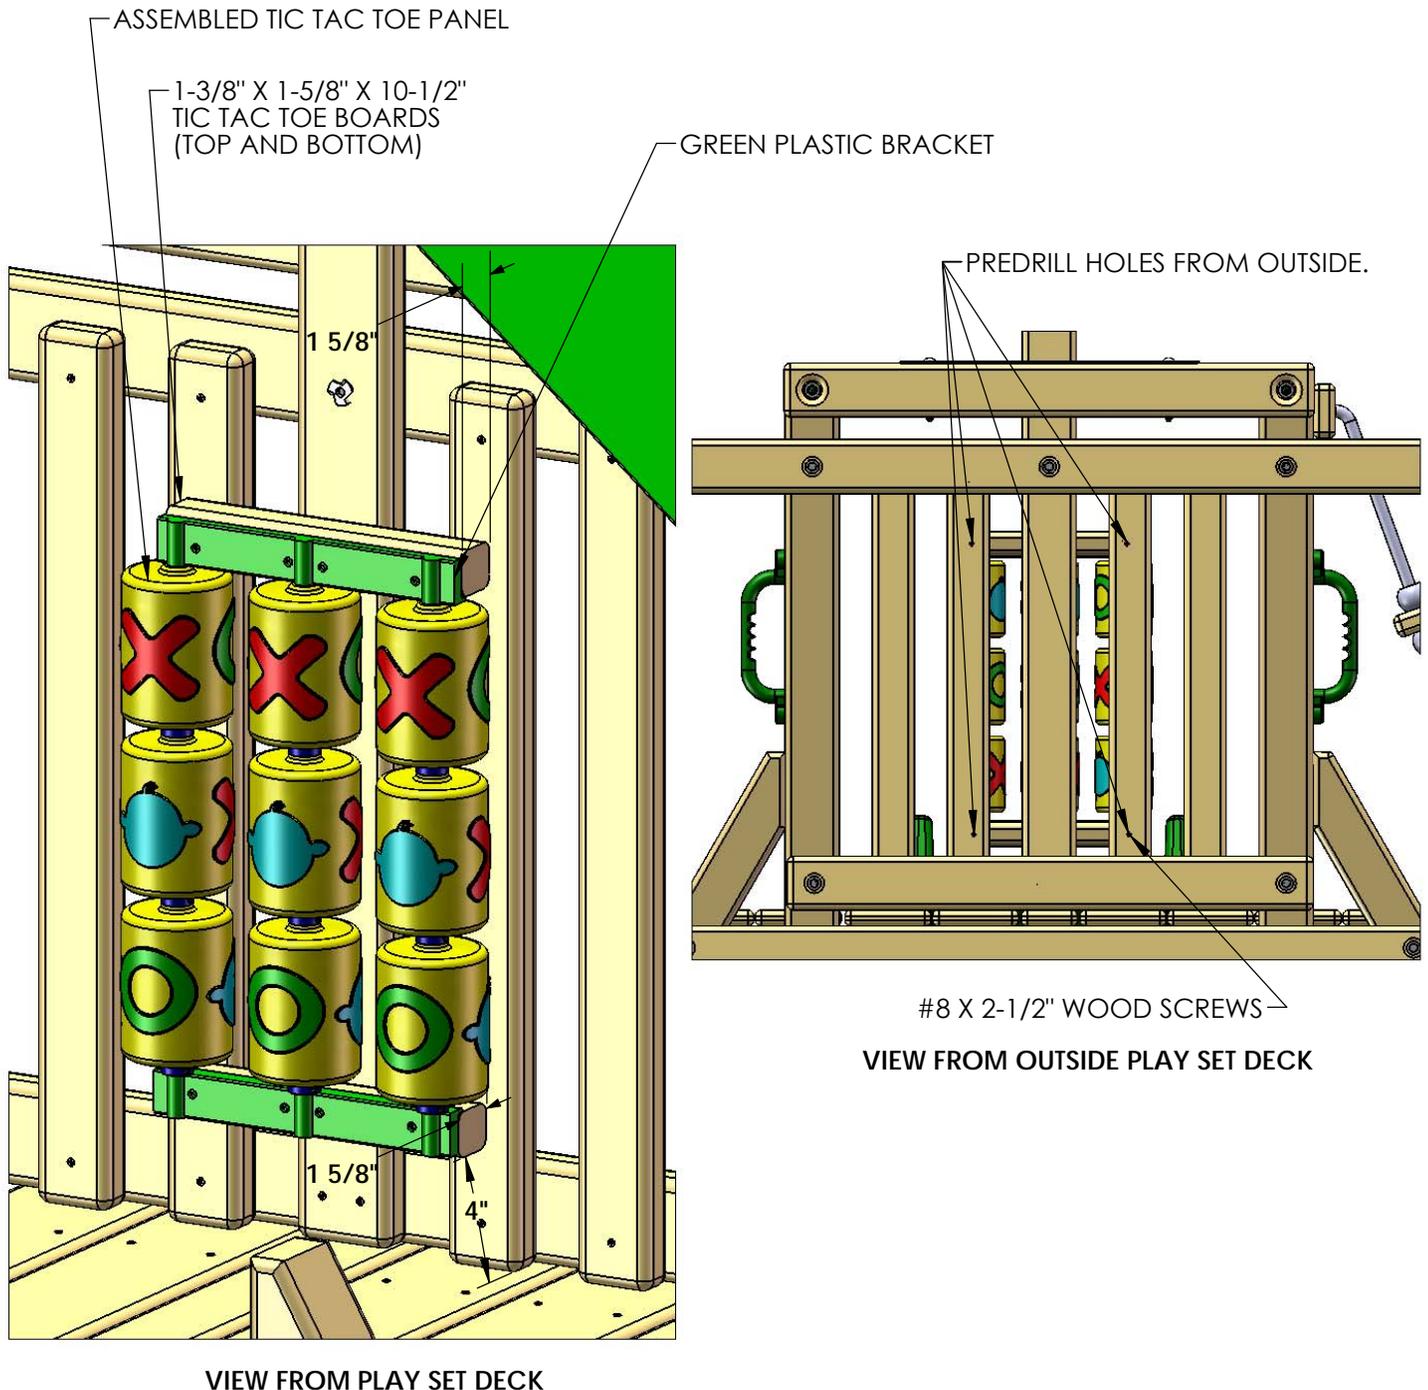


STEP 43: FLAG KIT AND NAME PLATE

1: ATTACH THE PLASTIC FLAG BASE ONTO THE OUTSIDE OF THE CENTER TARP SUPPORTS WITH THE SCREWS PROVIDED IN THE FLAG KIT BAG.


2: PLACE THE MAST OF EACH FLAG INTO THE HOLE IN THE PLASTIC FLAG BASE.

3: ATTACH THE ALUMINUM NAME PLATE CENTERED ON THE FRONT OF THE SWING BEAM WITH #8 X 1-1/4" WOOD SCREWS.

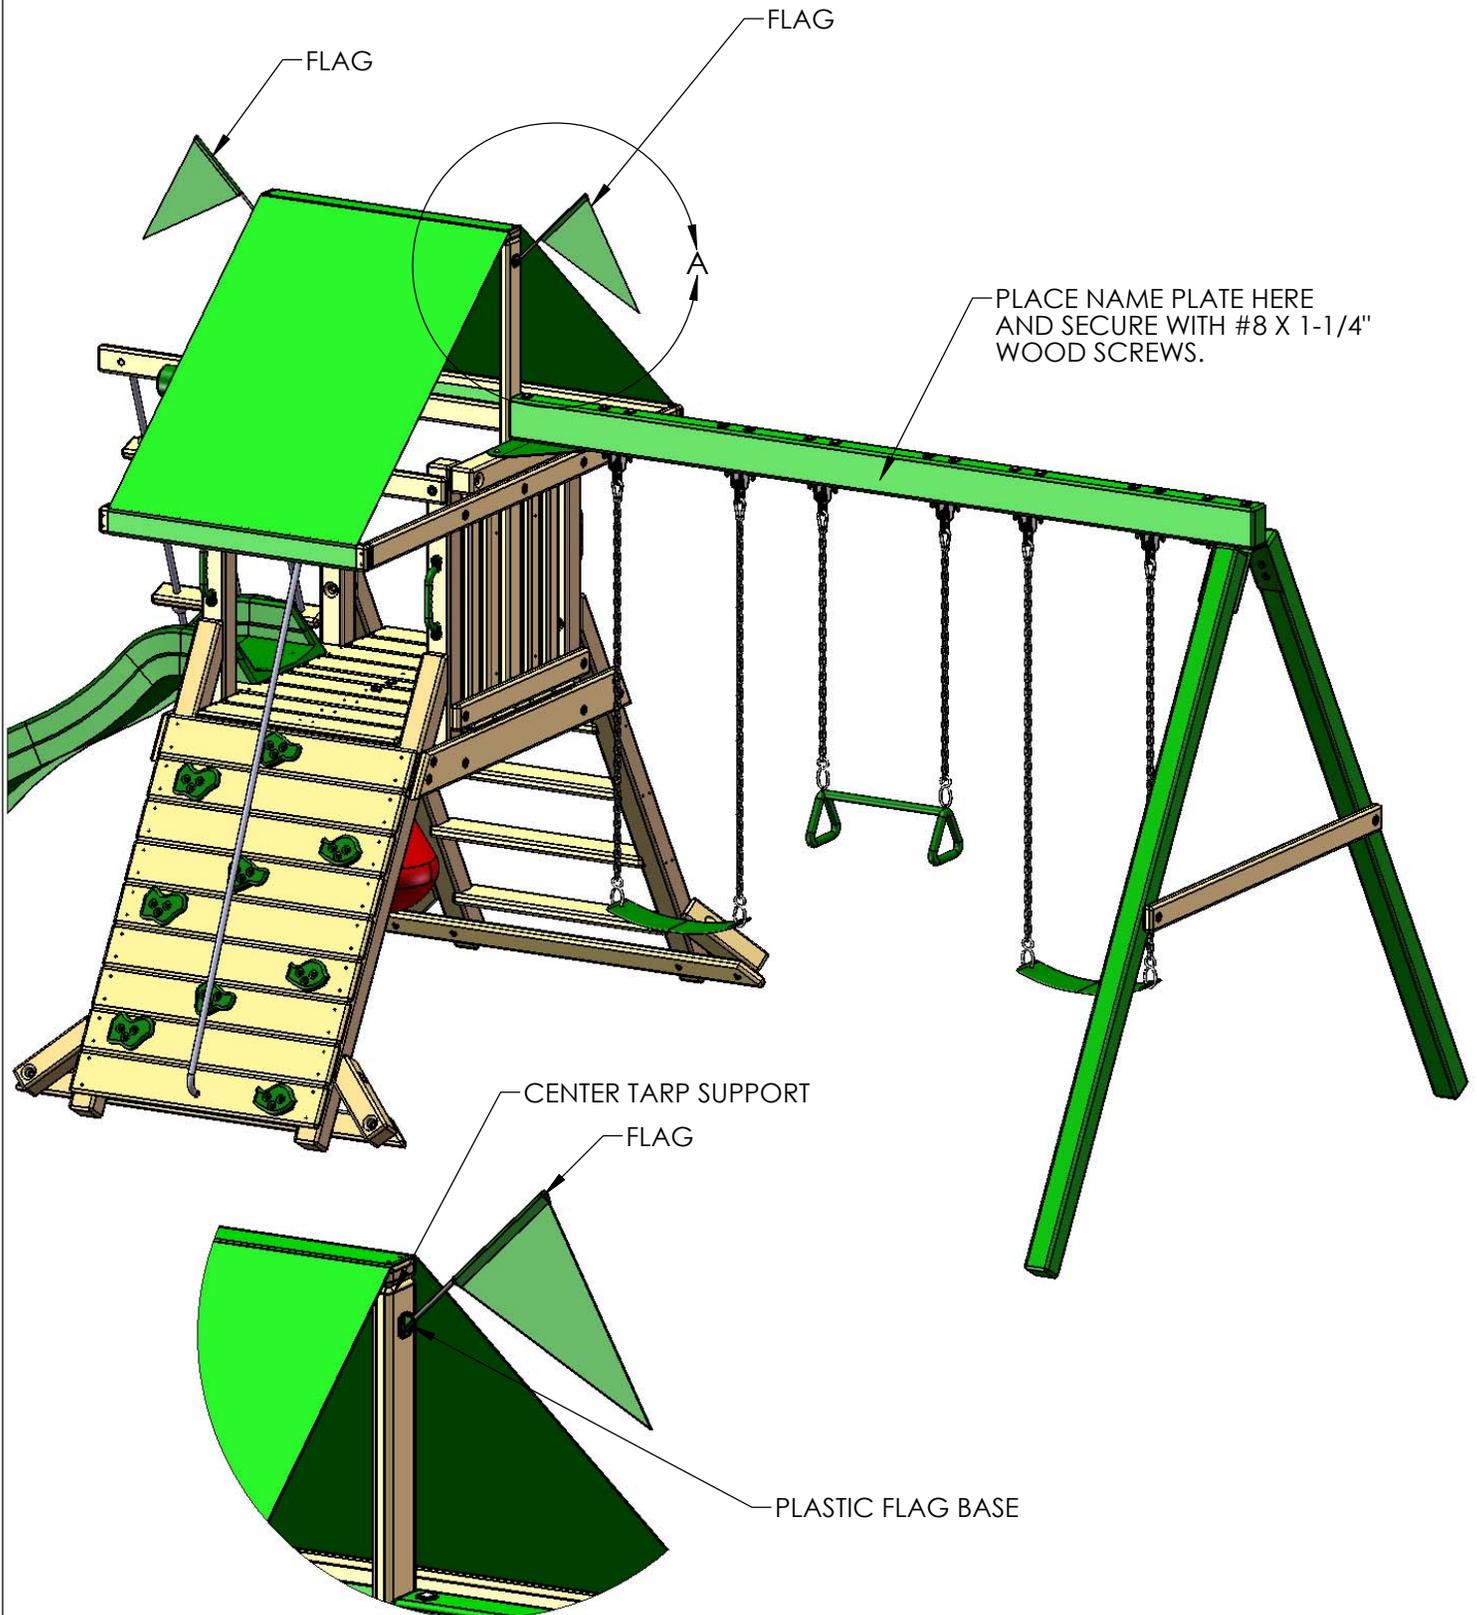

STEP 44: GROUND STAKES

- 1: PLACE THE GROUND STAKES ON THE OUTSIDE OF THE SWING LEGS AS SHOWN BELOW.
- 2: HAMMER EACH GROUND STAKE IN AT AN ANGLE SIMILAR TO WHAT IS SHOWN. LEAVE THE TOP PORTION OF THE GROUND STAKE ABOVE THE GROUND FAR ENOUGH SO THAT YOU CAN STILL GET THE SCREW INTO THE HOLE AT THE TOP OF THE STAKE.
- 3: SECURE EACH STAKE TO THE SWING LEG WITH THE SCREW PROVIDED WITH THE STAKES.

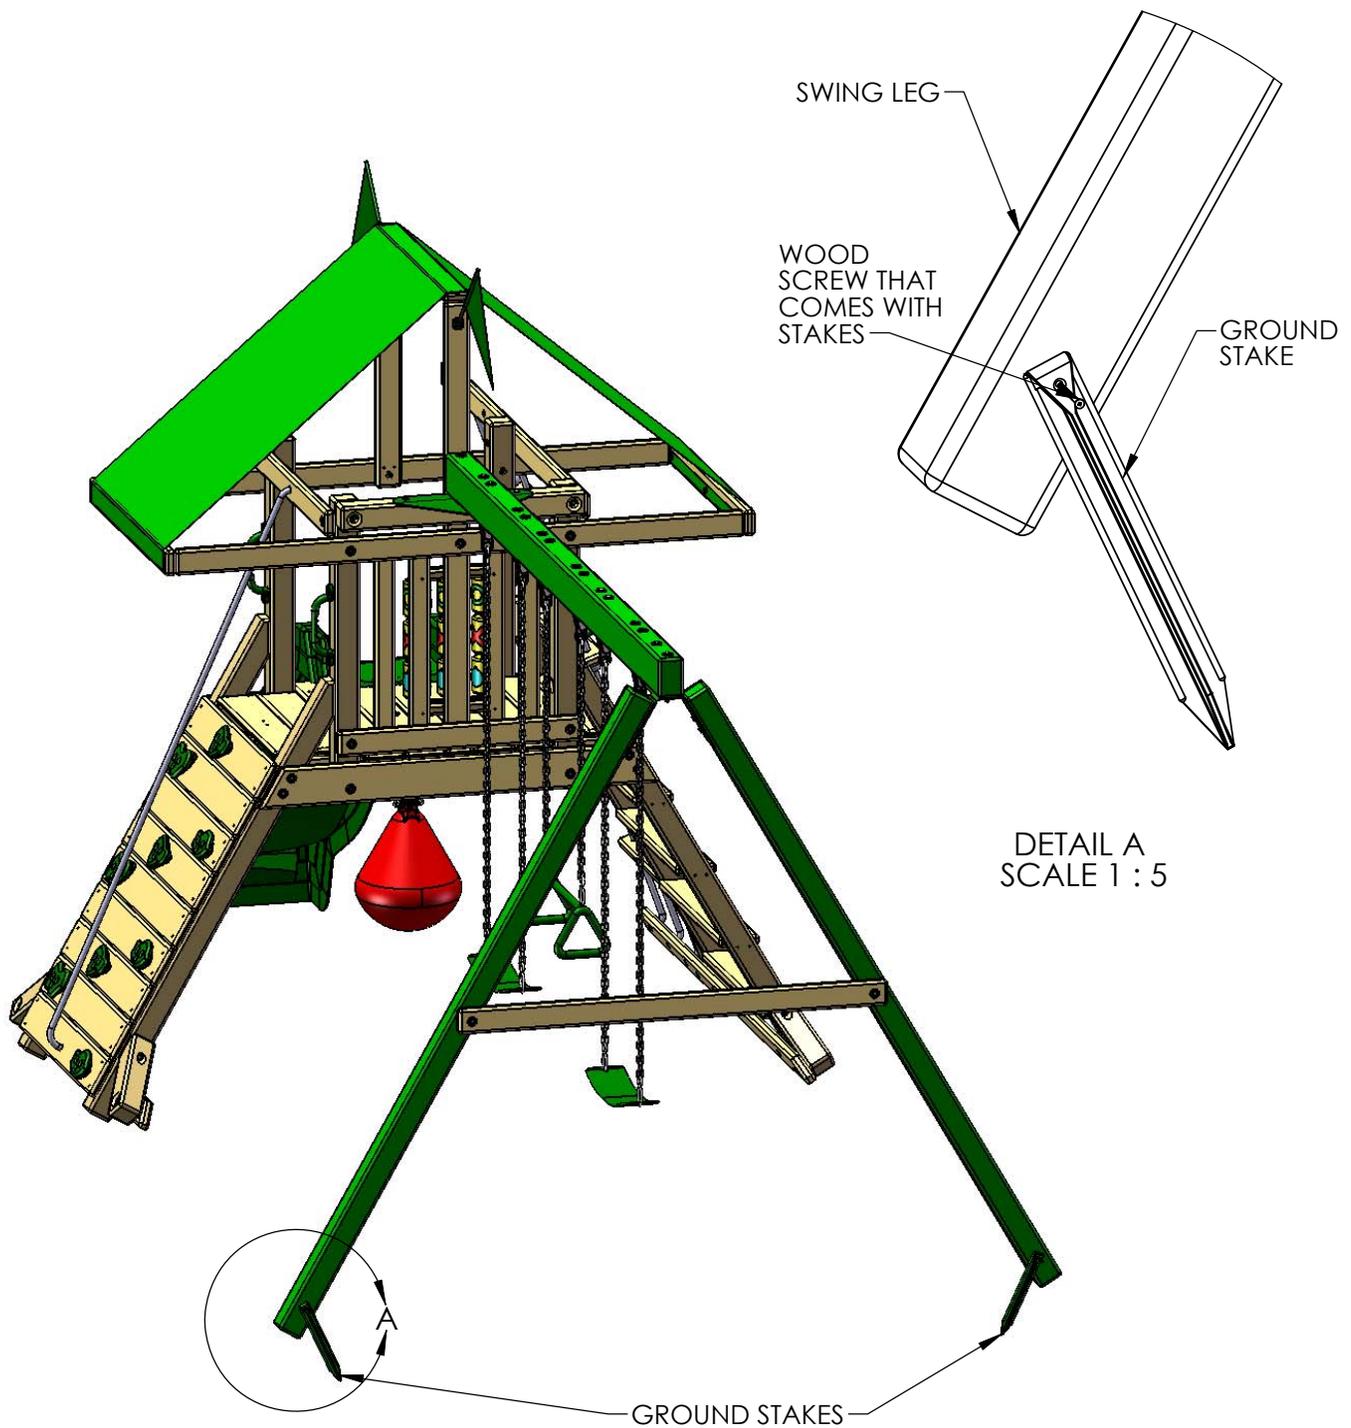

WARRANTY REGISTRATION

- HIGH POINT -

Gorilla Playsets manufactures the finest quality products that are designed for outstanding strength and durability. We back our products with an unparalleled warranty. In the unlikely event that you will need to contact us about covered repairs, we must have a valid Warranty Registration on file.

3 EASY WAYS TO REGISTER	
OPTION 1	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> Fax this completed form to: (678) 880-3329 </div> <div style="width: 10%; text-align: center; font-size: 2em; font-weight: bold;">OR</div> <div style="width: 45%;"> Mail this completed form to: Gorilla Playsets 190 Etowah Industrial Court Canton, GA 30114 </div> </div>
OPTION 2	Complete the online registration form at: http://www.gorillaplaysets.com/register
OPTION 3	<div style="display: flex; justify-content: space-between;"> <div style="width: 60%;"> Scan this QR Code with your smart phone to complete the form using your phone </div> <div style="width: 35%; text-align: center;">  </div> </div>

Where did you buy this product?:

Date of Purchase _____ Place of Purchase _____

Your registration information:

Name: _____ Email: _____

Address: _____

Street City State Zip

Please select your age? <input type="checkbox"/> 18-30 <input type="checkbox"/> 31-40 <input type="checkbox"/> 41-50 <input type="checkbox"/> 51+	How would you rate the quality of this product? <input type="checkbox"/> ★★★★★ Excellent <input type="checkbox"/> ★★★★ Above Average <input type="checkbox"/> ★★★ Average <input type="checkbox"/> ★★ Below Average <input type="checkbox"/> ★ Poor
How old are your children? <input type="checkbox"/> 2-3 <input type="checkbox"/> 4-5 <input type="checkbox"/> 6-7 <input type="checkbox"/> 8+	

Would you recommend this product to friends & family? Yes No

Comments: _____
